

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux 600 Animal Bagged Vacuum Cleaner EB61A5UG User Manual](#)

## **Electrolux EB61A5UG**

# **Electrolux 600 Animal Bagged Vacuum Cleaner EB61A5UG User Manual**

Model: EB61A5UG

## **1. INTRODUCTION**

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Electrolux 600 Animal Bagged Vacuum Cleaner, model EB61A5UG. Please read this manual thoroughly before using the appliance and retain it for future reference.



Image 1.1: The Electrolux 600 Animal Bagged Vacuum Cleaner, model EB61A5UG, in grey, with its hose and telescopic wand attached to the main unit.

The Electrolux 600 Animal vacuum cleaner is designed for effective cleaning, particularly for households with pets. It features an automatic mode brush for various floor types, an anti-odor S-bag, and a washable Hygiene 12 filter for improved air quality.

## 2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the vacuum cleaner to pick up water, wet materials, hot ashes, or sharp objects.
- Do not operate the appliance with a damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from the outlet when not in use and before cleaning or servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

### 3. PRODUCT COMPONENTS

Your Electrolux 600 Animal vacuum cleaner comes with several components designed for various cleaning tasks:

- **Main Unit:** Contains the motor, dust bag compartment, and filters.
- **Hose:** Flexible hose connecting the main unit to the telescopic wand.
- **Telescopic Wand:** Adjustable metal tube for extended reach.
- **Dust Magnet Silent Brush:** Main floor nozzle with automatic mode for efficient cleaning on various surfaces.
- **Parketto Pro Hard Floor Brush:** Specialized brush for gentle and effective cleaning of hard floors.
- **Animal Kit:** Includes specific accessories optimized for pet hair removal.
- **S-bag Anti-Odor:** Dust bag designed to capture and neutralize unpleasant odors.
- **Turbo Brush:** A rotating brush head for deep cleaning carpets and removing stubborn pet hair.



Image 3.1: A close-up view of the Turbo Brush attachment, designed for effective removal of pet hair and deep cleaning of carpets.

### 4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in Section 3 are present.
2. **Attach the Hose:** Insert the hose end into the suction inlet on the main unit until it clicks securely into place.
3. **Assemble the Wand:** Connect the telescopic wand to the hose handle. Adjust the wand length by pressing the release button and sliding it to the desired position.
4. **Attach the Nozzle:** Select the appropriate floor nozzle (e.g., Dust Magnet Silent brush for general use, Parketto Pro for hard floors, or Turbo Brush for pet hair on carpets) and attach it to the end of the telescopic wand.

5. **Power Connection:** Extend the power cord from the main unit and plug it into a suitable electrical outlet. The extra-long 12-meter cord provides extended reach.

## 5. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the foot-operated ON/OFF button on the main unit to start or stop the vacuum cleaner.
2. **Suction Power Adjustment:** Use the foot-operated power control buttons (Min/Max) on the main unit to adjust the suction power according to the cleaning task and surface.
3. **Using the Dust Magnet Silent Brush:** This brush features an automatic mode that adapts suction to different floor types. Simply glide it over carpets or hard floors for optimal cleaning.
4. **Using the Pet Hair Kit:** For effective pet hair removal, attach the specialized tools from the Animal Kit. The Turbo Brush is particularly effective on carpets and upholstery.
5. **Maneuverability:** The large, easy-rolling wheels and 12-meter operating radius allow for smooth movement across various floor surfaces and between rooms without frequent unplugging.
6. **Cord Rewind:** After use, press the foot-operated cord rewind button to automatically retract the power cord into the main unit.



Image 5.1: The Dust Magnet Silent brush head, designed for efficient cleaning on various floor types with its automatic mode.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 6.1 Replacing the S-bag Anti-Odor

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover.
3. Carefully remove the full S-bag. The S-bag Anti-Odor is designed to trap unpleasant smells, making disposal cleaner.
4. Insert a new S-bag Anti-Odor, ensuring it is correctly seated in the holder.
5. Close the dust bag compartment cover securely.



Image 6.1: An Electrolux S-bag Anti-Odor dust bag, designed to neutralize odors and capture fine particles.

## 6.2 Cleaning the Hygiene 12 Washable Filter

The Hygiene 12 filter helps to remove up to 99.99% of particles larger than 1 µm, ensuring cleaner exhaust air. It is washable for extended use.

1. Unplug the vacuum cleaner.
2. Locate the filter compartment (refer to your vacuum's diagram for exact location, usually near the exhaust).
3. Remove the Hygiene 12 filter.
4. Rinse the filter under lukewarm tap water. Do not use detergents.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not dry in direct sunlight or with heat.
6. Reinsert the dry filter and close the compartment.

## 7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not start	No power supply; plug not inserted correctly.	Check power cord and wall outlet.
Reduced suction power	Full dust bag; clogged filter; blocked hose/nozzle.	Replace S-bag; clean/replace filter; check for blockages.
Unusual noise	Foreign object in brush/hose; motor issue.	Inspect brush and hose for obstructions. If noise persists, contact service.
Pet hair not picked up effectively	Incorrect attachment; brush head tangled.	Ensure Turbo Brush or Animal Kit tools are used. Clean brush head of tangled hair.

If the problem persists after attempting these solutions, please contact Electrolux customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Electrolux
Model Number	EB61A5UG
Color	Grey
Product Dimensions (L x W x H)	30.7 x 23.9 x 43.7 cm
Weight	4 Kilograms
Capacity	3.5 Liters

Feature	Detail
Power	750 Watts
Voltage	230 Volts
Noise Level	73 Decibels
Special Features	Portable, Wheels, Bagged, Waterproof (referring to sealed system)
Filter Type	Hygiene 12 Washable Filter
Surface Recommendation	Hard Floor, Carpet
Power Source	Corded Electric
Cord Length	12 meters (XXL)
Included Components	Dust Magnet Silent Brush, Parketto Pro Hard Floor Brush, Animal Kit, S-bag Anti-Odor, Turbo Brush

## 9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Electrolux website for your region. Electrolux offers customer support for product inquiries, service requests, and spare parts.

Please note that information regarding spare parts availability is not provided in this manual. For spare parts, please consult the Electrolux customer service or authorized dealers.

**Electrolux Official Website:** [www.electrolux.com](http://www.electrolux.com)