

[manuals.plus](#) /› [WINFLIKE](#) /› **WINFLIKE BN59-01224B Remote Control User Manual for Samsung TVs**

WINFLIKE BN59-01224B

WINFLIKE BN59-01224B Remote Control User Manual

Replacement Remote Control for Samsung Televisions

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your WINFLIKE BN59-01224B replacement remote control. This remote is designed to function seamlessly with various Samsung TV models, offering a direct replacement experience without the need for complex programming.



Image: The WINFLIKE BN59-01224B remote control positioned on a modern coffee table, ready for use.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, showing the two AAA battery slots.

First Use

This WINFLIKE remote control is designed for immediate use with compatible Samsung TV models. No programming or pairing is required. Once batteries are installed, the remote is ready to operate your television.

OPERATING INSTRUCTIONS

The WINFLIKE BN59-01224B remote control features a standard layout for intuitive navigation and control of your Samsung TV. Below is an overview of key button functions:





Image: Front view of the WINFLIKE BN59-01224B remote control, displaying all buttons and their labels.

Button	Function
Power (Red)	Turns the TV on or off.
SOURCE	Selects the input source (HDMI, AV, Component, etc.).
Number Buttons (0-9)	Direct channel selection.
VOL (+/-)	Adjusts the volume level.
CH (Up/Down)	Changes TV channels.
MUTE	Mutes or unmutes the TV audio.
MENU	Accesses the TV's main menu.
GUIDE	Displays the electronic program guide.

Button	Function
INFO	Displays information about the current program or input.
Navigation (Up/Down/Left/Right/Enter)	Navigates through menus and selections.
RETURN	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
Colored Buttons (A, B, C, D)	Functions vary depending on the TV model or on-screen prompts.
Media Controls (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback on compatible devices or TV apps.

COMPATIBLE MODELS

This WINFLIKE BN59-01224B remote control is compatible with a wide range of Samsung TV models, including but not limited to:

- UA40J5100AW, UA40J5100AWXXY
- UA24J4100AW, UA24J4100AWXXY
- UA28J4100AW, UA28J4100AWXXY
- UA32J4100AW, UA32J4100AWXXY
- UA50J5100AW, UA50J5100AWXXY
- UA24J4100, UA28J4100, UA32J4100
- UA40J5100, UA48J5100, UA50J5100
- BN59-01224H

If your Samsung TV model is not listed, please refer to your TV's original manual or contact customer support to confirm compatibility with the BN59-01224B remote.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

TROUBLESHOOTING

If you encounter issues with your WINFLIKE BN59-01224B remote control, please refer to the following common problems and solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none">• Ensure batteries are correctly installed with proper polarity.• Replace old batteries with new AAA alkaline batteries.• Ensure there are no obstructions between the remote and the TV's infrared sensor.• Point the remote directly at the TV.
Some buttons are not working.	<ul style="list-style-type: none">• Check for any debris or stickiness around the buttons.• Ensure the remote is compatible with your specific TV model, as some advanced functions may vary.
Remote range is reduced.	<ul style="list-style-type: none">• Replace the batteries.• Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor.

SPECIFICATIONS

- **Model:** BN59-01224B
- **Dimensions:** 7.09 x 1.77 x 0.59 inches (18 x 4.5 x 1.5 cm)
- **Weight:** 0.634 ounces (18 grams)
- **Power Source:** 2 x AAA batteries (not included)
- **Color:** Black
- **Special Features:** Ergonomic design, No programming required
- **Compatible Devices:** Samsung Televisions

WARRANTY AND SUPPORT

WINFLIKE products are manufactured to high-quality standards. If you experience any issues with your remote control or require assistance, please contact the seller or WINFLIKE customer support. Please refer to your purchase documentation for specific warranty details and contact information.