

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TASVAC](#) /

› [TASVAC N7 Cordless Vacuum Cleaner User Manual](#)

TASVAC N7

TASVAC N7 Cordless Vacuum Cleaner User Manual

Model: N7

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Use only the original adapter for charging.
- Do not use the vacuum cleaner without filters.
- Ensure the dust cup and all inlets are clear of blockages.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up flammable or combustible materials, or anything that is burning or smoking.
- Store the appliance indoors in a dry place.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Vacuum Unit
- Motorized Main Floor Brush (with soft roller pre-installed)
- Stiff Roller Brush (for short-pile carpets)
- Crevice Nozzle
- 2-in-1 Brush
- Wall-mount
- Cleaning Gadget
- Extra Filter
- Power Adapter
- Instruction Manual



Image: All components of the TASVAC N7 Cordless Vacuum Cleaner, including the main unit, various attachments, wall mount, and charger.

PRODUCT OVERVIEW

The TASVAC N7 is a versatile cordless vacuum cleaner designed for efficient cleaning of various surfaces and debris, including pet hair. It features a lightweight design, a foldable rod, and multiple attachments for different cleaning needs.



TASVAC

N7 Cordless Vacuum Cleaner

Convenient & Lightweight & Versatile

Image: A person using the TASVAC N7 Cordless Vacuum Cleaner on a hard floor, demonstrating its lightweight and convenient design.

Key Features:

- **Versatile 6-in-1 Design:** Can be used as a stick vacuum or handheld vacuum with various attachments.
- **Powerful Suction:** Upgraded digital motor with 2 power modes for effective cleaning.
- **Flexible & Lightweight:** Main body weighs only 3 lbs, with a 180° foldable rod for easy access under furniture.
- **LED Motorized Brush:** Illuminates dark corners to track dust and dirt.
- **5-Stage Filtration System:** Ensures thorough air purification and motor protection.
- **Easy to Operate & Maintain:** One-click dust cup emptying and washable filters.

SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Extension Wand:** Connect the extension wand to the main vacuum unit until it clicks into place.

3. **Attach Floor Brush:** Connect the motorized floor brush to the other end of the extension wand. Ensure it clicks securely.
4. **Initial Charge:** Fully charge the vacuum cleaner before first use. Connect the power adapter to the charging port and plug it into a wall outlet. The LED display will indicate charging status.
5. **Install Wall Mount (Optional):** Choose a suitable location and secure the wall mount using the provided screws.



Image: The TASVAC N7 Cordless Vacuum Cleaner demonstrating its 180-degree foldable rod and highlighting its 6-in-1 versatility with different attachments.

OPERATING INSTRUCTIONS

Powering On/Off and Suction Modes:

- Press the power button on the handle to turn the vacuum cleaner on or off.
- The vacuum has two power modes. Press the mode button to switch between the lower setting (longer runtime up to 35 minutes) and the high-speed setting (stronger suction).


- The LED display provides real-time information on battery level and selected power mode.

Using Attachments:

The TASVAC N7 comes with various attachments for different cleaning scenarios:

- **Motorized Main Floor Brush:** Ideal for hard floors and carpets. Features LED lights to illuminate dark areas.
- **Crevice Nozzle:** Perfect for narrow gaps, corners, and edges.
- **2-in-1 Brush:** Suitable for upholstery, curtains, and delicate surfaces.

Versatile Tools

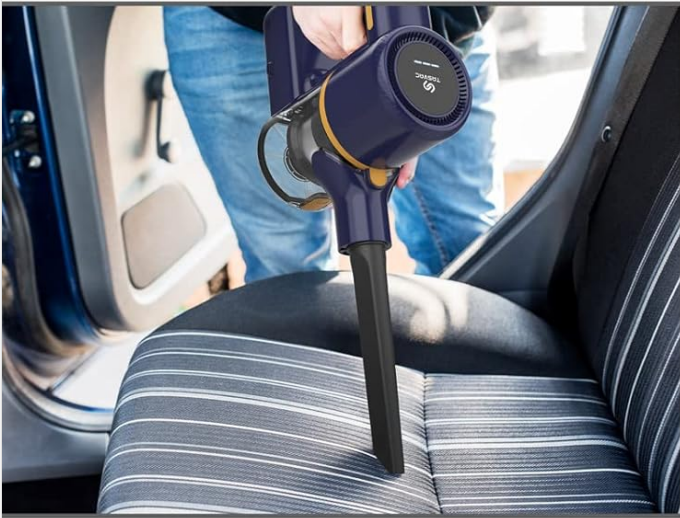

Long Crevice



2 in 1 Brush



Motorized Floor Brush



Foldable Tube

Image: A visual representation of the versatile tools included with the TASVAC N7, demonstrating their use for various cleaning tasks such as car interiors, furniture, and under low objects.

Roller Brush Options:

The motorized floor brush supports two types of roller brushes:

- **Soft Roller:** Recommended for hard floors and low-pile carpets.
- **Stiff Roller:** Designed for short-pile carpets, effectively picking up embedded dirt.

LED Searching Light

Easily track dust and dirt



Image: Close-up view of the soft roller and stiff roller brush options for the TASVAC N7, indicating their recommended surfaces.

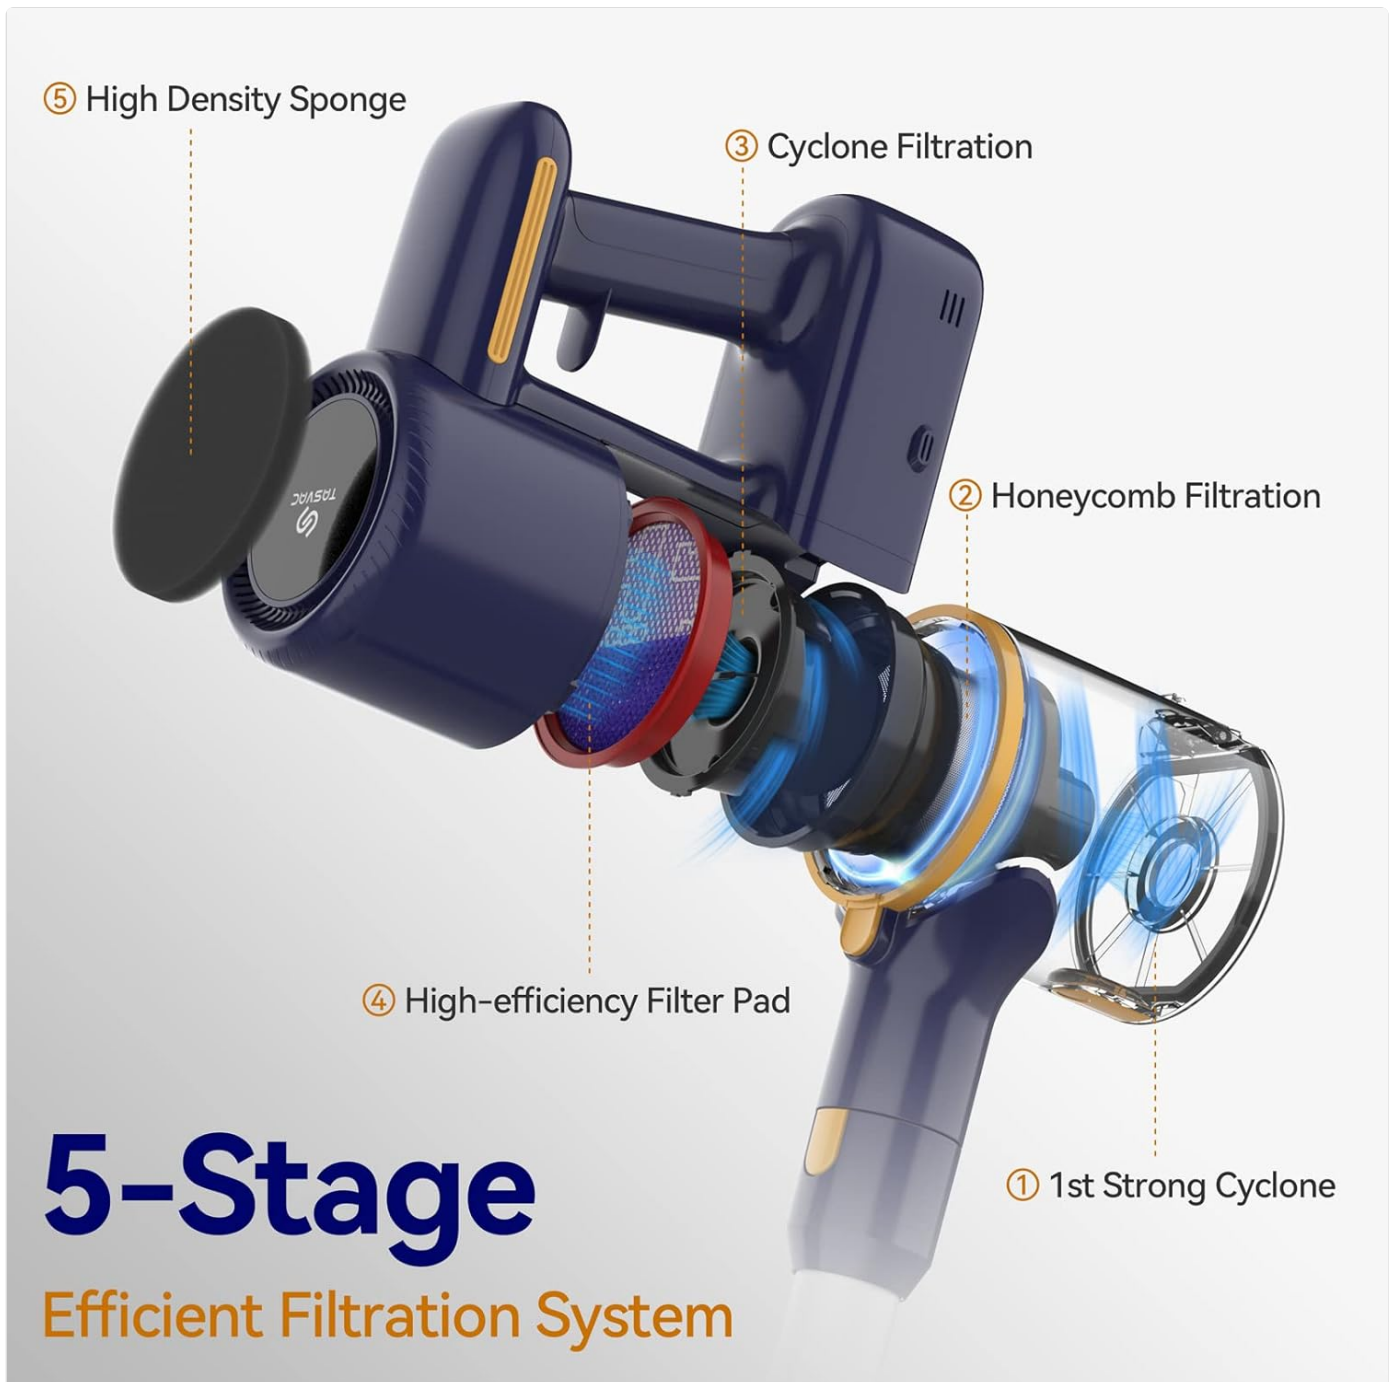


Image: The LED searching light feature on the TASVAC N7's motorized floor brush, illuminating dust and dirt under furniture.

MAINTENANCE

Emptying the Dust Cup:

The dust cup is designed for easy, one-click emptying:

1. Hold the main unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.

One-Click Easy to Clean



Image: Illustration of the one-click dust cup emptying mechanism of the TASVAC N7, showing dirt falling into a bin and the removable filter components.

Cleaning and Replacing Filters:

Regular cleaning of filters is crucial for maintaining optimal suction performance and motor protection. An extra filter is provided for replacement.

1. Remove the filter components from the dust cup.
2. Wash the filters under running water. Do not use hot water or detergents.
3. Allow filters to air dry completely for at least 24 hours before reinstalling. Ensure they are completely dry to prevent damage to the motor.
4. Replace filters if they are heavily soiled or damaged.

5-Stage Filtration System:

The TASVAC N7 employs a comprehensive filtration system:

- **1st Strong Cyclone:** Separates larger debris.
- **Honeycomb Filtration:** Further separates particles.
- **Cyclone Filtration:** Additional cyclonic separation.
- **High-efficiency Filter Pad:** Collects fine dust and protects the motor.
- **High Density Sponge:** Final filtration stage in the vacuum motor.



Image: Diagram illustrating the 5-stage efficient filtration system of the TASVAC N7, showing the path of air and separation of debris through various filter components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully using the original adapter.
Loss of suction.	Dust cup is full; Filters are clogged; Blockage in nozzle/hose.	Empty the dust cup. Clean or replace filters. Check for and remove any blockages.

Problem	Possible Cause	Solution
Motorized brush stops rotating.	Roller brush is tangled with hair/debris; Brush head is blocked.	Clean the roller brush and remove any tangled hair. Check for blockages in the brush head.
Short runtime.	Using high power mode; Battery not fully charged; Battery degradation.	Switch to lower power mode for longer runtime. Ensure battery is fully charged. Contact support if battery life significantly decreases.

SPECIFICATIONS

Feature	Detail
Model	TASVAC N7
Motor Power	165W
Max Suction Power	28Kpa (High Mode) / 15Kpa (Standard Mode)
Battery Capacity	2200mAh
Runtime	Up to 50 minutes (Standard Mode) / Up to 35 minutes (High Mode)
Dust Cup Capacity	1 Liter
Main Vacuum Weight	3 lbs (1.36 kg)
Noise Level	70 dB
Voltage	220 Volts
Special Features	Lightweight, Foldable Rod, Bagless, LED Display, LED Motorized Brush
Filtration System	5-Stage Fully Sealed Filtration

WARRANTY AND SUPPORT

The TASVAC N7 Cordless Vacuum Cleaner comes with a **12-month warranty** from the date of purchase.

If you encounter any issues or require support, please contact TASVAC customer service. Ensure you have your purchase details and product model number (N7) ready when contacting support.

For assistance, please refer to the contact information provided on the product packaging or the official TASVAC website.

