

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Casdon](#) /

› [Casdon Dyson Supersonic Styling Set 73250 Instruction Manual](#)

Casdon 73250

Casdon Dyson Supersonic Styling Set (Model 73250) Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and proper use of your Casdon Dyson Supersonic Styling Set. This realistic toy set is designed for imaginative play, mimicking the functions of real hair styling tools with lights, sounds, and cool air.

PACKAGE CONTENTS

Ensure all the following items are present in your Casdon Dyson Supersonic Styling Set:

- Dyson Supersonic Hair Dryer Toy
- Concentrator Nozzle Attachment
- Diffuser Attachment
- Barrel Brush
- Styling Comb
- Straightener Toy with Stand



Image: The product packaging displaying all components of the Casdon Dyson Supersonic Styling Set.



Image: All styling tools included in the set, neatly arranged.

SETUP

Battery Installation

The Dyson Supersonic Hair Dryer toy requires 3 AAA batteries (not included) for its realistic lights, sounds, and cool air features. Please follow these steps for installation:

1. Locate the battery compartment, typically at the base of the hair dryer handle.
2. Use a Phillips screwdriver to open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (positive '+' and negative '-' ends are aligned as indicated).
4. Replace the battery compartment cover and secure it with the screw.



Image: Detailed view of the hair dryer toy, showing the handle where batteries are installed.



Image: A closer look at the hair dryer's handle, indicating the location of the power button and the battery compartment.

Attaching Accessories

The concentrator nozzle and diffuser attachments can be easily twisted onto the front of the hair dryer toy. The straightener toy comes with a dedicated stand for display and storage.

OPERATING INSTRUCTIONS

Using the Hair Dryer Toy

Press the power button on the handle of the hair dryer toy to activate realistic lights and sounds, and to feel cool air. Attach the concentrator nozzle for focused airflow or the diffuser for gentle drying, mimicking real styling techniques.



Image: The hair dryer toy with the concentrator nozzle, used for directing airflow.



Image: The hair dryer toy with the diffuser attachment, designed for gentle drying and enhancing curls.

Using the Straightener Toy

The straightener toy features realistic lights and sounds when its plates are pressed together. It is designed for pretend hair styling. Place the straightener on its dedicated stand when not in use.



Image: A detailed view of the straightener toy, highlighting its design.



Image: The straightener toy resting on its accompanying stand.

Using the Brushes and Comb

Use the barrel brush and styling comb for imaginative hair grooming and styling. These tools are designed to be gentle on hair and suitable for pretend play.

MAINTENANCE

Cleaning

To clean the styling set, gently wipe all components with a soft, slightly damp cloth. Do not immerse any part of the toy in water. Avoid using harsh chemicals or abrasive cleaners, as these may damage the toy's finish or electronic components. Ensure all parts are completely dry before storage or next use.

Storage

Store the styling set and its accessories in a cool, dry place away from direct sunlight. Prolonged exposure to extreme temperatures or moisture can affect the toy's performance and lifespan. Keep all small parts together to prevent loss.

TROUBLESHOOTING

Hair Dryer Not Turning On

- Check if the batteries are correctly installed with the proper polarity.
- Replace old batteries with new AAA batteries.
- Ensure the power button is fully pressed and held for a moment if necessary.

Lights or Sounds Not Working

- Verify battery installation and ensure batteries have sufficient charge.
- If the issue persists after checking batteries, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	73250
Brand	Casdon
Product Dimensions	4.53 x 11.54 x 9.45 inches
Item Weight	1.19 pounds
Batteries Required	3 x AAA (not included)
Recommended Age	3+ years
Special Features	Realistic lights, sounds, and cool air

WARRANTY AND SUPPORT

For warranty information or customer support regarding your Casdon Dyson Supersonic Styling Set,

please refer to the contact details provided on the product packaging or visit the official Casdon website.
Keep your proof of purchase for any warranty claims.