

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution Replacement Remote Control Instruction Manual for Philips DVD Players (Models DVP3356, DVP5960, DVP3254K, DVP5965K Series)

Beyution RC-5340

Beyution Replacement Remote Control Instruction Manual

Model: RC-5340

Compatible with Philips DVD Players

1. INTRODUCTION

This manual provides comprehensive instructions for the Beyution Replacement Remote Control, model RC-5340. This remote is designed to be compatible with a wide range of Philips DVD Players, offering a direct replacement without the need for programming. Please read this manual carefully to ensure proper use and to maximize your experience.

2. PRODUCT OVERVIEW





Figure 1: Front view of the Beyution Replacement Remote Control. The remote is black with gray directional pad and black function buttons, displaying all control labels.

2.1 Compatible Philips DVD Player Models

This remote control is compatible with the following Philips DVD Player models:

- DVP3356, DVP3356/94
- DVP3254K, DVP3254K/55
- DVP5960, DVP5960/12, DVP5960/05, DVP5960/93
- DVP3250K

- DVP5965K, DVP5965K/94, DVP5965K/96, DVP5965K/98, DVP5965K/55, DVP5965K/75
- DVP3020K/03
- DVP3982, DVP3982/F7B, DVP3982/F7
- DVP3962, DVP3962b, DVP3962/37
- DVP3980, DVP3980/05, DVP3980/F7E, DVP3980/37B, DVP3980/37, DVP3980/F7B, DVP3980/F7, DVP3980/12, DVP3980/75
- DVP3350
- DVP3386K, DVP3386K/93
- DVP3388K, DVP3388K/98, DVP3388K/96
- DVP4050
- DVP6620, DVP6620/12
- DVP3520K
- DVP3560, DVP3560K/37B, DVP3560/F7

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries (not included), ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

3.2 Initial Use

The Beyution RC-5340 remote control is pre-programmed and ready to use with compatible Philips DVD Players immediately after battery installation. No additional setup, pairing, or programming is required.

4. OPERATING INSTRUCTIONS

This section details the functions of each button on your replacement remote control.

Button	Function
Power (Red Circle)	Turns the DVD player on or off.
DISC / Eject (Triangle)	Opens or closes the disc tray.
SETUP	Accesses the DVD player's system setup menu.
MENU	Accesses the disc menu during playback.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections in menus.
BACK (Curved Arrow)	Returns to the previous menu or screen.

Button	Function
INFO (i symbol)	Displays information about the current disc or playback status.
Previous Track (Double Left Arrow)	Skips to the beginning of the current or previous track/chapter.
Play/Pause (Triangle/Two Vertical Bars)	Starts or pauses playback.
Next Track (Double Right Arrow)	Skips to the next track or chapter.
USB (USB Symbol)	Switches input to the USB port (if available on the DVD player).
Stop (Square)	Stops playback.
Numeric Keypad (0-9)	Directly selects tracks, chapters, or enters numerical values.
SUBTITLE	Toggles subtitle display or selects subtitle language.
AUDIO/CREATE MP3	Selects audio tracks or initiates MP3 creation function (if supported by the DVD player).
ZOOM (Magnifying Glass)	Adjusts the screen zoom level.
VOLUME	Adjusts the audio volume.
REPEAT/REPEAT A-B	Controls playback repeat modes (e.g., repeat track, repeat all, A-B repeat).

5. MAINTENANCE

5.1 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working entirely. Always use new AAA batteries and ensure correct polarity during installation.

5.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the proper polarity (+/-).
- **Replace Batteries:** Install fresh AAA batteries.
- **Clear Obstructions:** Make sure there are no objects blocking the line of sight between the remote control and the DVD player's infrared sensor.
- **Verify Compatibility:** Confirm that your Philips DVD player model is listed as compatible in Section 2.1.

6.2 Limited Functionality

Some advanced features or specific button functions may depend on the capabilities of your particular Philips DVD player model. If a button does not perform an expected action, consult your DVD player's original manual for its specific remote

control functions.

7. SPECIFICATIONS

- **Model Number:** RC-5340
- **Brand:** Beyution
- **Compatible Devices:** Philips DVD/Blu-ray Players (specific models listed in Section 2.1)
- **Power Source:** 2 x AAA batteries (not included)
- **Product Dimensions:** 6.1 x 2 x 0.7 inches (approximately)
- **Item Weight:** 1.76 ounces (approximately, without batteries)
- **Color:** Black

8. WARRANTY AND SUPPORT

This Beyution product is covered by the manufacturer's standard warranty. For specific warranty terms, claims, or technical support, please refer to the documentation included with your purchase or contact Beyution customer service through their official channels. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question