

[Manuals.plus](#) /

› [LEFXMOPHY](#) /

› LEXMOPHY MX24W1-2401000U Charger for RENPHO C3 RF-GM168 Percussion Massage Gun Instruction Manual

LEFXMOPHY MX24W1-2401000U

LEFXMOPHY MX24W1-2401000U Charger Instruction Manual

For RENPHO C3 RF-GM168 Percussion Massage Gun

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your LEXMOPHY MX24W1-2401000U Power Adapter. This charger is specifically designed as a replacement or alternative power supply for the RENPHO C3 RF-GM168 Percussion Massage Gun. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: LEFXMOPHY MX24W1-2401000U Power Adapter. This image shows the complete power adapter unit, including the wall plug, power brick, and the DC barrel connector cable.

2. IMPORTANT SAFETY INFORMATION

- **Read all instructions:** Before using the power adapter, read all safety and operating instructions.
- **Intended Use:** This adapter is designed exclusively for the RENPHO C3 RF-GM168 Percussion Massage Gun. Do not use it with other devices unless specified by the manufacturer.
- **Power Source:** Connect the adapter only to a power outlet with the voltage specified in the specifications (100-240V AC).
- **Avoid Water:** Do not expose the adapter to water or moisture. Do not operate with wet hands.
- **Damage:** Do not use the adapter if the cord or plug is damaged. Contact customer support for replacement.
- **Ventilation:** Ensure adequate ventilation around the adapter during use. Do not cover it.
- **Children:** Keep out of reach of children.
- **Disconnect:** Always unplug the adapter from the power outlet when not in use or before cleaning.

- **Protection:** This adapter is UL, CE, FCC, and RoHS certified and includes over-voltage, over-load, over-current, and short circuit protection. However, proper handling is still essential.

3. SETUP INSTRUCTIONS

1. **Inspect the Adapter:** Before first use, visually inspect the power adapter and its cable for any signs of damage.
2. **Identify the Charging Port:** Locate the DC input port on your RENPHO C3 RF-GM168 Percussion Massage Gun. This adapter uses a round DC barrel connector.

Round DC Barrel Input



Figure 2: Close-up of the DC Barrel Connector. This image highlights the specific type of connector used by the LEFXMOPHY charger.

3. **Connect to Massage Gun:** Carefully insert the DC barrel connector of the LEFXMOPHY adapter into the charging port of your RENPHO C3 massage gun. Ensure a snug fit.



Figure 3: Adapter connected to RENPHO C3 Massage Gun. This image demonstrates the correct way to connect the charger to the message gun's charging port.

4. **Plug into Power Outlet:** Insert the AC plug of the adapter into a standard 100-240V AC wall outlet.

4. OPERATING INSTRUCTIONS

Once the adapter is correctly connected to both the message gun and a power outlet, the RENPHO C3 message gun should begin charging. Refer to your RENPHO C3 message gun's user manual for specific charging indicators (e.g., LED lights) and expected charging times.

- Ensure the message gun is turned **OFF** before connecting the charger.
- Do not force the connector into the port.
- Unplug the adapter from the wall outlet and the message gun once charging is complete or if the device will not be used for an extended period.

5. CARE AND MAINTENANCE

- **Cleaning:** Disconnect the adapter from the power source and the device before cleaning. Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly around the adapter to prevent damage.
- **Handling:** Do not pull the cable to disconnect the adapter from the wall outlet or the device. Always grasp the plug or connector directly.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Massage gun not charging.	◦ Adapter not properly plugged into wall outlet. ◦ DC connector not fully inserted into massage gun. ◦ Wall outlet is not active. ◦ Adapter or cable is damaged. ◦ Massage gun issue.	◦ Ensure both ends of the adapter are securely connected. ◦ Test the wall outlet with another device. ◦ Inspect the adapter and cable for visible damage. If damaged, discontinue use and replace. ◦ Consult the RENPHO C3 massage gun manual for device-specific troubleshooting.
Adapter feels warm during use.	Normal operation.	A slight warmth is normal. If it becomes excessively hot or emits smoke/odor, unplug immediately and discontinue use. Ensure adequate ventilation.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	MX24W1-2401000U
Brand	LEFXMOPHY
Compatible Devices	RENPHO C3 Percussion Massage Gun (RF-GM168)
Input Voltage	100-240V AC
Output Voltage	24V
Output Current	1A
Wattage	24 Watts
Connector Type	DC Round Barrel Connector
Power Plug Type	Type A - 2 pin (North American)
Safety Certifications	UL, CE, FCC, RoHS
Special Features	Over-voltage, Over-load, Over-current, Short Circuit Protection

Feature	Detail
Color	Black
Material	Plastic
Item Weight	0.14 Kilograms

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your LEFXMOPHY MX24W1-2401000U Power Adapter, please refer to the documentation provided at the time of purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

© 2023 LEFXMOPHY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B9JCP57T>

More documents and user manuals: <https://manuals.plus/>