

iWALK MXB003

iWALK Magnetic Wireless Power Bank with Stand

INSTRUCTION MANUAL - MODEL: MXB003

1. Product Overview

The iWALK Magnetic Wireless Power Bank is a compact and versatile portable charger designed for convenience and efficiency. It features a 5000mAh capacity, a built-in foldable stand, and an intelligent LED display to keep you informed about its battery status. Its ergonomic design ensures a comfortable grip while charging your device.



Figure 1: iWALK Magnetic Wireless Power Bank with Stand

- **Ergonomic Grip Design:** Unique chamfered design and slim size for comfortable handling.
- **Strong Magnetic Suction:** Securely attaches to iPhone 12/13/14/15 series and compatible magnetic cases. (Note: Not compatible with non-magnetic cases).
- **Built-in Foldable Stand:** Provides stable support for your device, ideal for iOS 17 standby mode.
- **Smart LED Display:** High-definition display shows remaining battery power and wireless charging status.
- **Slim and Portable:** Compact size (4.1x2.6x0.6 inches) and lightweight (0.3LB) for easy portability without obstructing the phone's camera.

2. Setup

2.1 Initial Charging of the Power Bank

Before first use, fully charge your iWALK Power Bank using the provided USB-C to USB-C cable. Connect the cable to the USB-C port on the power bank and plug the other end into a compatible USB power adapter (not included).

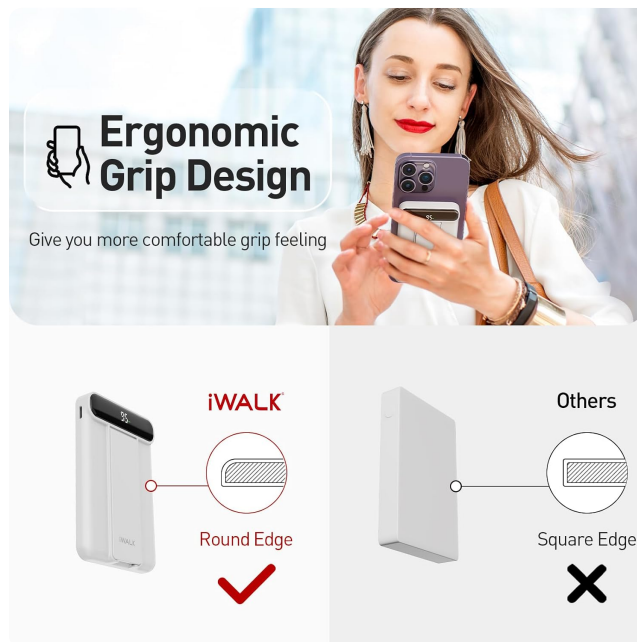


Figure 2: Smart LED Display indicating full charge

2.2 Attaching to Your Device (Magnetic Wireless Charging)

Ensure your iPhone (12/13/14/15 series) or iPhone-compatible magnetic case is clean and free of debris. Align the power bank with the back of your iPhone; the strong magnetic suction will securely attach it. The LED display will indicate charging status.



Figure 3: Compatible iPhone models and magnetic cases

2.3 Using the USB-C Port for Charging

The USB-C port on the power bank can also be used for wired charging of other compatible devices. Simply connect your device to the power bank using a USB-C cable.

3. Operating Instructions

3.1 Powering On/Off and Checking Battery Level

Press the side button once to power on the power bank and activate wireless charging. The smart LED display will show the current battery percentage. To turn off wireless charging, double-click the side button.

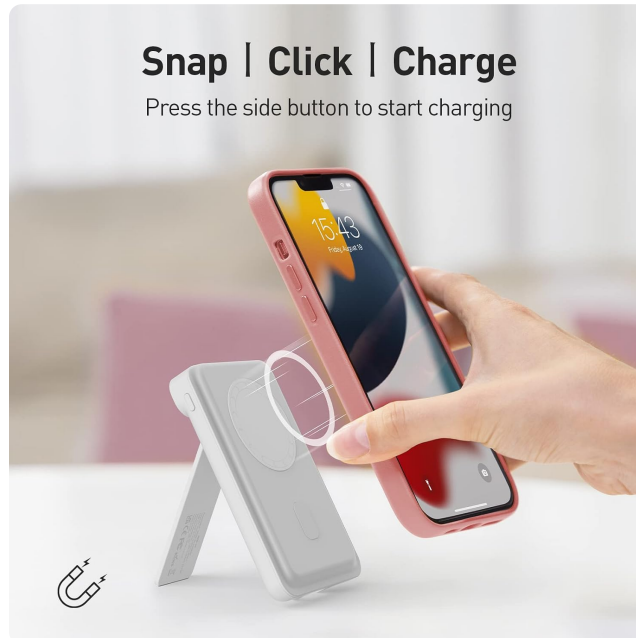


Figure 4: Snap | Click | Charge - Pressing the side button to start charging

3.2 Utilizing the Foldable Stand

The integrated foldable stand allows you to prop up your iPhone for hands-free viewing, especially useful for iOS 17 standby mode. Simply unfold the kickstand from the back of the power bank.



Figure 5: iPhone in iOS 17 standby mode on the foldable stand



Figure 6: Ergonomic grip design for comfortable use

4. Maintenance

To ensure the longevity and optimal performance of your iWALK Power Bank, follow these maintenance guidelines:

- Keep the device dry and away from moisture.
- Avoid exposing the power bank to extreme temperatures (hot or cold).
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use.
- Avoid dropping or subjecting the device to strong impacts.

5. Troubleshooting

- **Device not charging wirelessly:**
Ensure your phone is compatible with magnetic wireless charging (iPhone 12/13/14/15 series). Check if your phone case is magnetic-compatible. Press the side button on the power bank to activate wireless charging.
- **Slow charging:**
Ensure the power bank is fully charged. Use the original USB-C cable provided. Check if your phone case is too thick or contains non-magnetic materials that might interfere with wireless charging.
- **Power bank not charging:**
Ensure the USB-C cable is securely connected to both the power bank and the power adapter. Try a different USB-C cable or power adapter.
- **Overheating during use:**
Some warmth during charging is normal. If the device becomes excessively hot, discontinue use and allow it to cool down. Ensure proper ventilation and avoid charging in direct sunlight or confined spaces.

6. Specifications

Product Dimensions	2.65 x 0.64 x 4.13 inches
Item Weight	4.9 ounces
Model Number	MXB003
Battery Capacity	5000 Milliamp Hours
Color	White
Connector Type	USB Type C



Figure 7: Product Dimensions



Figure 8: 5000mAh Capacity and approximate charges for various iPhone models

7. Warranty and Support

iWALK provides a **12-month warranty service** for any problems encountered with your magnetic wireless power bank. This warranty covers manufacturing defects and issues arising from normal use. For technical support, warranty claims, or any inquiries, please refer to the contact information provided in the original product packaging or visit the official iWALK website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question