

OLOV bh-15

OLOV Electric Groin Hair Trimmer Replacement Blade Head

Model: bh-15

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your OLOV Electric Groin Hair Trimmer Replacement Blade Head. This ceramic blade head is designed for hygienic, precise, and comfortable trimming, ensuring optimal performance of your OLOV trimmer. Please read these instructions carefully before use to ensure safe and effective operation.


SAFETY INFORMATION

- **Do not use near water or while charging.** Ensure the trimmer is completely dry before connecting it to a power source for charging.
- **Keep the power cord away from water** to prevent electric shock. Always handle the trimmer and its components with dry hands.
- This product is a replacement blade head and should only be used with compatible OLOV electric trimmers.
- Inspect the blade head for any damage before each use. Do not use if the blade is chipped, bent, or otherwise compromised.
- Keep out of reach of children.

PRODUCT FEATURES



Overall View: The OLOV Electric Groin Hair Trimmer Replacement Blade Head, featuring a sleek black design with gold accents, ready for installation on your compatible OLOV trimmer.

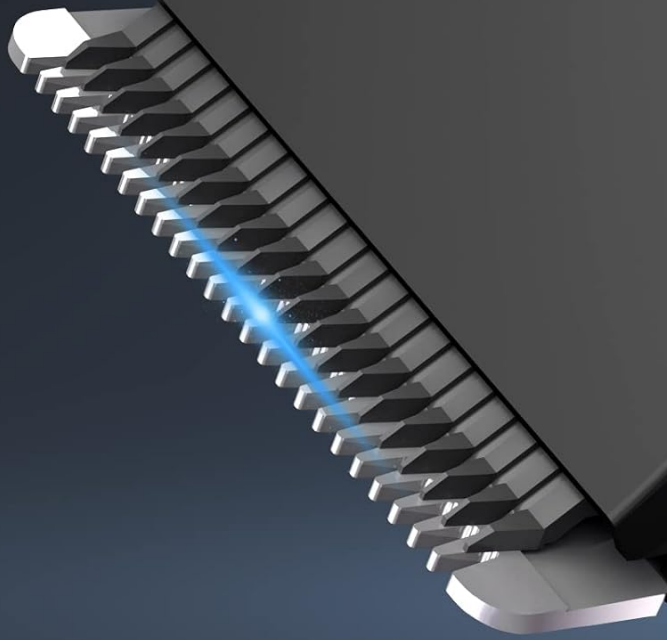

SAFETY CERAMIC BLADE

Safety Ceramic Blade: A detailed view of the hygienic and durable ceramic blade, designed for smooth and safe trimming, minimizing nicks and cuts.

WATERPROOF



Waterproof Design: The blade head is shown being rinsed under running water, demonstrating its waterproof capability for easy and hygienic cleaning after use.

SETUP AND INSTALLATION

This replacement blade head is designed for quick and easy installation.




EASY TO REPLACE

Easy to Replace: Illustration of how to detach the old blade head and attach the new replacement blade head to the trimmer body.

1. Ensure your OLOV electric trimmer is turned off and disconnected from any power source.
2. Gently grasp the existing blade head and pull it upwards to detach it from the trimmer body. Some models may require a slight twist or button press. Refer to your original trimmer manual if unsure.
3. Align the new replacement blade head with the trimmer body. The connection point typically has a specific shape to ensure correct orientation.
4. Press the new blade head firmly onto the trimmer body until it clicks securely into place.
5. Verify that the blade head is securely attached and does not wobble before turning on the trimmer.

OPERATION

Once the replacement blade head is installed, your OLOV trimmer is ready for use. For optimal results and safety, follow these general operating guidelines:

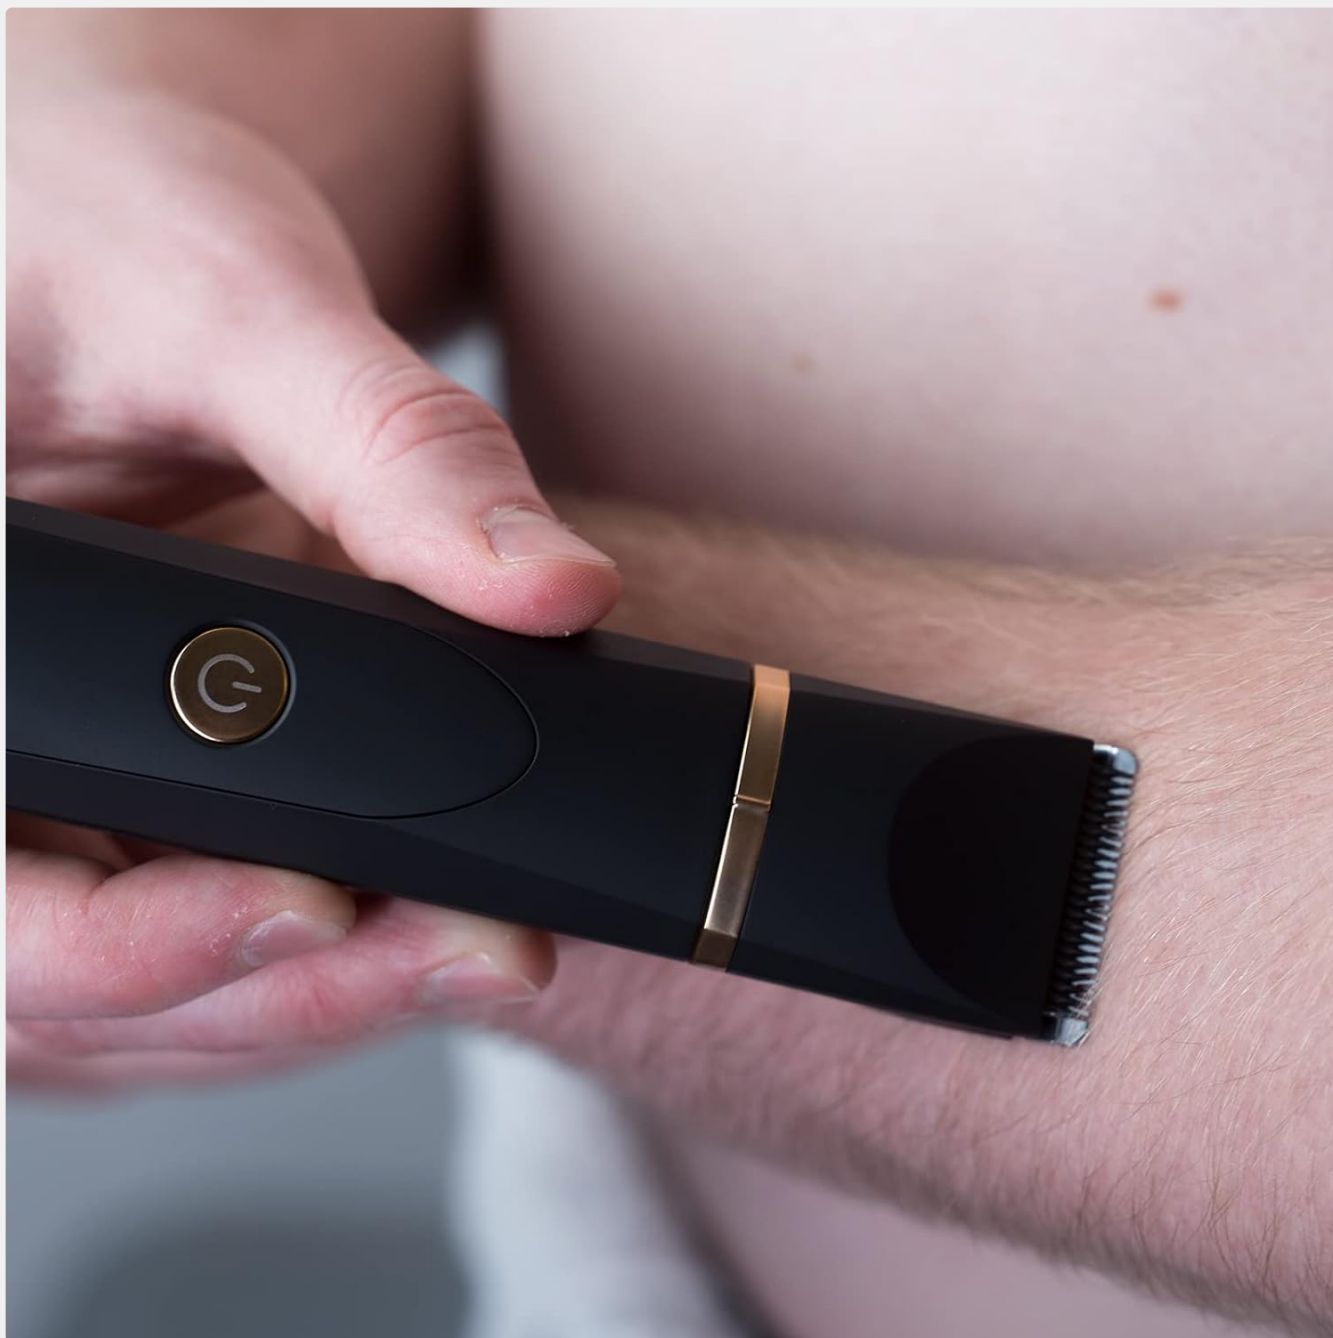

Body Grooming: The trimmer with the new blade head being used on the arm, demonstrating its suitability for general body hair trimming.



Facial Hair Trimming: The trimmer in use on facial hair, highlighting its versatility for different grooming needs.

- Ensure your skin is clean and dry before trimming.
- Turn on the trimmer.
- Hold the trimmer at a slight angle against the skin and move it slowly against the direction of hair growth for an effective trim.
- For sensitive areas, pull the skin taut to create a flat surface for the blade.
- Do not apply excessive pressure, as this can cause irritation or damage to the blade.
- After use, turn off the trimmer.

MAINTENANCE AND CLEANING

Regular cleaning of your blade head is crucial for maintaining hygiene and extending the lifespan of the product.

- **After each use:** Detach the blade head from the trimmer body. Rinse the blade head thoroughly under running water to remove hair clippings and debris.
- For a deeper clean, use a small brush (if provided with your trimmer) to dislodge any stubborn hairs from between the blades.
- Allow the blade head to air dry completely before reattaching it to the trimmer body or storing it. Do not use cloths or towels on the blade teeth as this may damage them.
- Store the blade head in a clean, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blade head does not attach securely.	Incorrect alignment; debris in connection point; damaged connection.	Ensure correct alignment and press firmly until it clicks. Check for and remove any debris. If damaged, contact support.
Trimmer pulls hair or cuts poorly.	Blade head is dull or clogged with hair; improper technique.	Clean the blade head thoroughly. Ensure it is fully dry. Replace the blade head if it is old or damaged. Adjust trimming angle and speed.
Blade head makes unusual noise.	Blade head not properly seated; internal damage.	Re-attach the blade head, ensuring it is securely clicked into place. If noise persists, the blade head may be damaged and require replacement.

SPECIFICATIONS

Feature	Detail
Item Model Number	bh-15
Manufacturer	OLOV
Blade Material	Ceramic
Color	Black
Package Dimensions	3.54 x 2.32 x 1.77 inches
Item Weight	0.63 ounces
Recommended Uses	Trimming, Professional

Feature	Detail
Hair Type Compatibility	All

WARRANTY AND SUPPORT

For information regarding warranty coverage for your OLOV Electric Groin Hair Trimmer Replacement Blade Head, please refer to the warranty details provided with your original OLOV trimmer purchase or visit the official OLOV website. If you encounter any issues or have questions not covered in this manual, please contact OLOV customer support through their official channels. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 OLOV. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question