

[Manuals.plus](#) /

› [Hamourd](#) /

› Hamourd SQN-008 Remote Control Robot Toy Instruction Manual

Hamourd SQN-008

Hamourd SQN-008 Remote Control Robot Toy Instruction Manual

Brand: Hamourd | Model: SQN-008

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Hamourd SQN-008 Remote Control Robot Toy. Please read these instructions thoroughly before use and retain for future reference.

2. WHAT'S INCLUDED

The package contains the following items:

- 1 x Hamourd Remote-Controlled Robot
- 1 x Remote Control
- 1 x Type C Charge Cable
- 1 x Screwdriver
- Batteries for the Remote Control
- 1 x User Manual (this document)



Figure 1: Contents of the Hamourd SQN-008 package.

3. SAFETY INFORMATION

- Always supervise children during play.
- Do not operate the robot near stairs, water, or other hazards.
- Keep the robot and remote control away from extreme temperatures and direct sunlight.
- Do not disassemble or modify the product.
- Ensure all battery compartments are securely closed.

4. SETUP

4.1. Charging the Robot

1. Locate the USB charging port on the back of the robot.
2. Connect the provided Type C charge cable to the robot's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).

4. The robot's indicator light will show charging status (refer to robot for specific light behavior).
5. A full charge provides approximately 100 minutes of playtime.

4.2. Installing Remote Control Batteries

1. Use the provided screwdriver to open the battery compartment on the back of the remote control.
2. Insert the included batteries, ensuring correct polarity (+/-).
3. Close the battery compartment and secure it with the screwdriver.

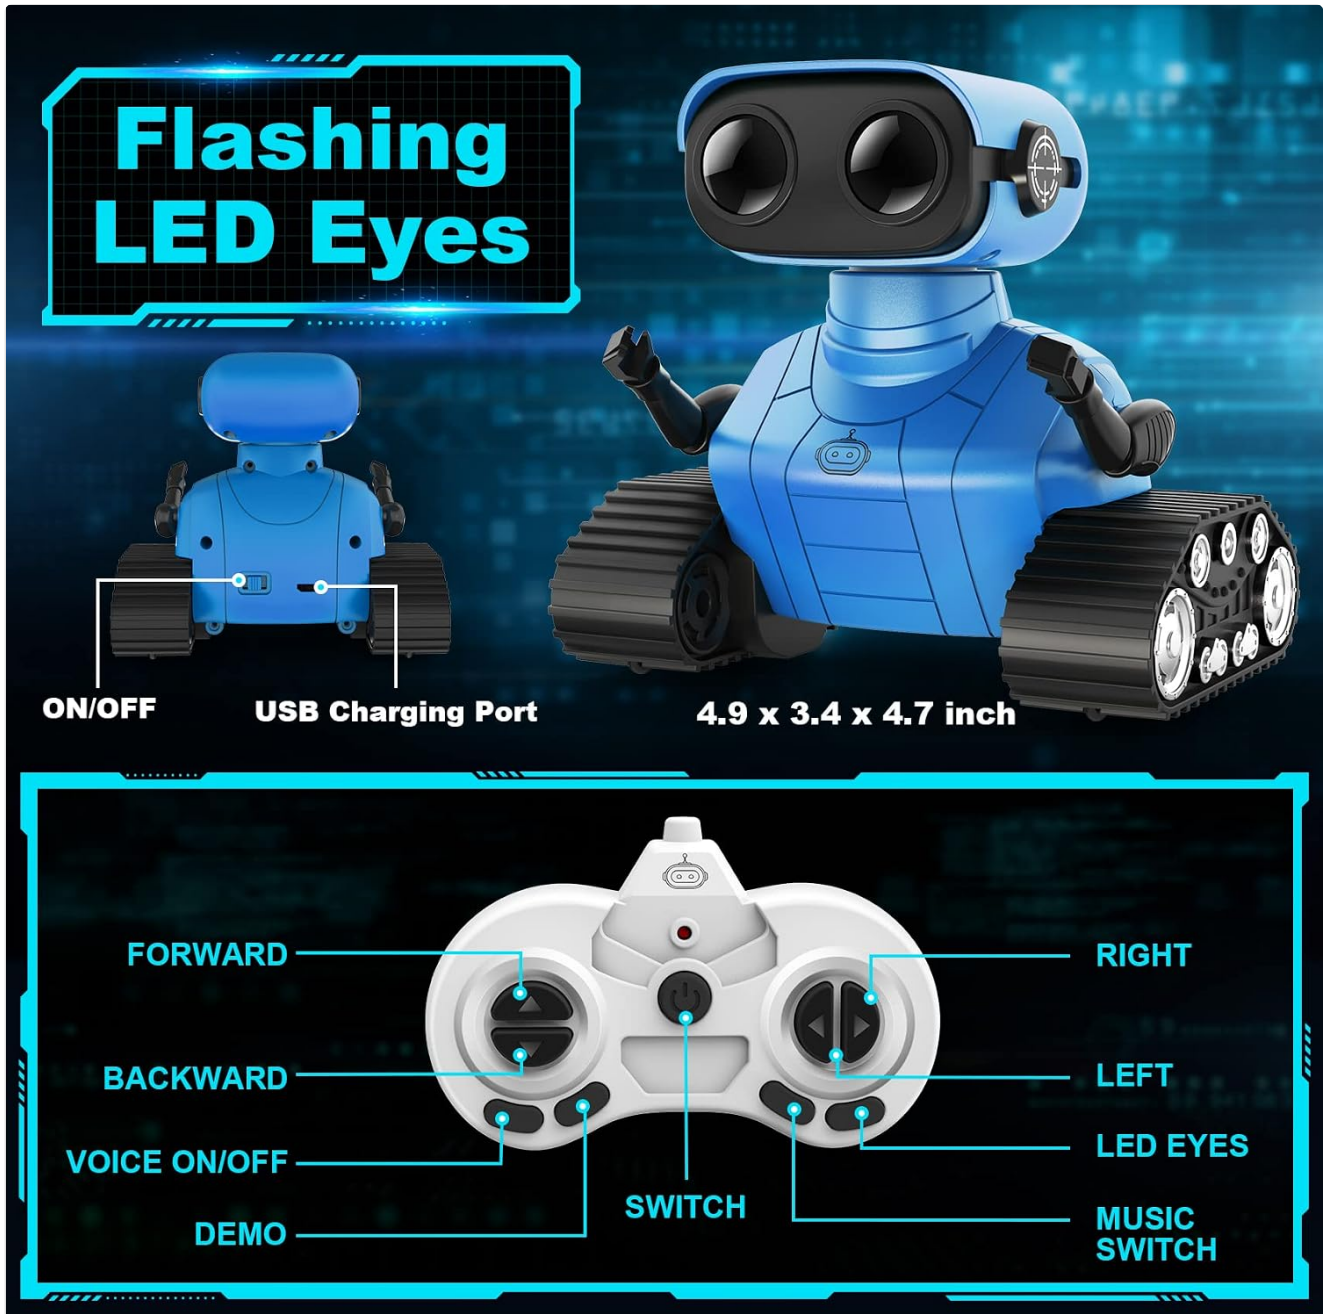


Figure 2: Robot charging port and remote control battery installation.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

1. To power on the robot, slide the ON/OFF switch located on the robot's back to the 'ON' position. The LED eyes will light up.
2. To power on the remote control, press the power button.
3. To power off, slide the robot's switch to 'OFF' and press the remote control's power button.

5.2. Basic Movement

Use the directional buttons on the remote control to move the robot:

- **Forward:** Moves the robot straight ahead.
- **Backward:** Moves the robot straight back.
- **Turn Left:** Rotates the robot to the left.
- **Turn Right:** Rotates the robot to the right.



Figure 3: Remote control layout and basic movement functions.

5.3. LED Eye Control

The robot's LED eyes can be controlled via the remote:

- Press the 'LED Eyes' button to cycle through different eye light modes (e.g., light up, blink, closed).

5.4. Music and Sound Control

The robot features various sounds and music:

- Press the 'Music Switch' button to change songs.
- Press the 'Voice On/Off' button to toggle the robot's smart voice feature.
- Use the 'Volume' buttons to adjust the sound level.

5.5. Auto-Demonstration Mode

Activate the auto-demonstration mode for an engaging display of the robot's capabilities:

- Press the 'DEMO' button on the remote control. The robot will perform 360-degree spins, dance moves with its flexible arms and head, and play music.



Figure 4: The robot in Auto-Demonstration mode.

5.6. Flexible Head & Arms

The robot's head and arms are designed to be flexible, allowing for dynamic movements during play and demonstration modes.

Video 1: Official Hamourd Robot Toys demonstration, showcasing various features including movement, music, and flexible parts.

6. MAINTENANCE

- **Cleaning:** Wipe the robot and remote control with a dry, soft cloth. Do not use water or cleaning agents.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries from the remote control if the toy will not be used for an extended period.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not turn on.	Robot battery is low or depleted.	Charge the robot using the provided USB cable.
Remote control not responding.	Remote control batteries are low or incorrectly installed.	Replace or re-install batteries in the remote control, ensuring correct polarity.
Robot movement is erratic or unresponsive.	Interference from other 2.4GHz devices.	Move to an area with less interference. Ensure no other robots are operating on the same frequency nearby.
Music/sound not playing.	Volume is muted or set too low.	Adjust volume using the remote control or check 'Voice On/Off' button.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	4.92 x 3.34 x 4.72 inches
Item Weight	0.085 ounces
Item Model Number	SQN-008
Manufacturer Recommended Age	4 - 6 years
Robot Battery	1 Lithium Ion battery (rechargeable via Type C USB)
Remote Control Batteries	2 x AAA batteries (included)
Control Frequency	2.4GHz



Figure 5: Hamourd SQN-008 Robot dimensions.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Hamourd customer service through your retailer's platform or visit the official Hamourd website. Please have your model number (SQN-008) and purchase details available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question