

Oclean F5002

Oclean Electric Toothbrush for Adults User Manual

Model: F5002 | Brand: Oclican

INTRODUCTION

Welcome to the Oclican Electric Toothbrush User Manual. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your new Oclican F5002 Sonic Electric Toothbrush. Please read this manual thoroughly to ensure optimal performance and longevity of your device.





Figure 1: Oclean F5002 Sonic Electric Toothbrush and its packaging.

WHAT'S IN THE BOX

Your Oclean F5002 Sonic Electric Toothbrush package includes the following components:

- Oclean F5002 Electric Toothbrush Handle
- DuPont Bristle Brush Head
- USB-C Charging Cable
- User Manual (this document)

SETUP

Charging the Toothbrush

Before first use, fully charge your Oclean F5002 toothbrush. The device features a 180-day battery life on a full charge, minimizing the need for frequent recharging.

SUPER LONG BATTERY LIFE

180 days battery life

1 = **180**
full charge days uses



Figure 2: The USB-C charging port is located at the base of the toothbrush, protected by a waterproof cover.

To charge:

1. Locate the USB-C port at the bottom of the toothbrush handle.
2. Gently open the waterproof cover.
3. Insert the provided USB-C charging cable into the port.
4. Connect the other end of the cable to a compatible USB power source (e.g., wall adapter, computer USB port).
5. The indicator light will show charging status. Once fully charged, the light will change or turn off.

Attaching the Brush Head

Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached before use.

OPERATING INSTRUCTIONS

The Oclean F5002 offers 5 high-performance brushing modes to suit various oral care needs.

5 BRUSHING MODES

 Morning Mode

 Night Mode

 Standard Cleaning Mode

 Whitening Mode

 Gentle Mode



Figure 3: The toothbrush features distinct icons for each of its 5 brushing modes.

- **Morning Mode:** Gentle cleaning for a fresh start.
- **Night Mode:** Deep-cleans food residue for thorough evening care.
- **Standard Cleaning Mode:** General daily cleaning.
- **Whitening Mode:** Effectively removes stains to restore natural tooth whiteness.
- **Gentle Mode:** Ideal for new users or those with sensitive gums/teeth.

To select a mode, press the power button repeatedly within 5 seconds of turning the toothbrush on. The corresponding indicator light will illuminate.

Smart Timer and Brushing Technique

The toothbrush includes a 2-minute smart timer, which is the dentist-recommended brushing duration. It also features a 30-second zone switch reminder, prompting you to move to a different quadrant of your mouth for even cleaning.

2 MINS SMART TIMER



Figure 4: The 2-minute smart timer and 30-second reminders ensure comprehensive oral hygiene.

For optimal cleaning, hold the brush at a 45-degree angle to your gums. Gently move the brush across your teeth, allowing the sonic vibrations (up to 76,000 VPM) to do the work. The high-density DuPont bristles effectively protect tooth enamel while providing a thorough clean.

PATENTED MAGLEV MOTOR

up to

76,000

movements per minute



Figure 5: The patented Maglev Motor delivers up to 76,000 movements per minute for powerful cleaning.

Product Videos

Video 1: Demonstrates the 180-day battery life and suitability for travel. (Source: Oclean)

Video 2: Highlights upgraded features and the 180-day battery life. (Source: Oclean)

MAINTENANCE

Cleaning the Toothbrush

The Oclean F5002 is IPX7 waterproof, allowing for easy cleaning under running water. After each use, rinse the brush head and handle thoroughly to remove toothpaste residue and debris.

IPX7

WATERPROOF



Figure 6: The IPX7 waterproof design allows for easy and safe cleaning under running water.

Replacing the Brush Head

It is recommended to replace the brush head every 3 months, or sooner if the bristles appear frayed or worn. Replacement brush heads are available from Oclean retailers.

TROUBLESHOOTING

If you experience any issues with your Oclean F5002 toothbrush, please refer to the following common troubleshooting tips:

- **Toothbrush not turning on:** Ensure the battery is charged. Connect to a power source and check the indicator light.
- **Weak vibration:** Fully charge the toothbrush. If the issue persists, the brush head might need replacement.
- **Inadequate cleaning:** Ensure you are using the correct brushing technique and utilizing the 2-minute timer and 30-second reminders for full coverage. Experiment with different brushing modes.
- **Brush head detaches easily:** Ensure the brush head is firmly pushed onto the shaft until it clicks into place.

For further assistance, please contact Oclean customer support.

SPECIFICATIONS

Feature	Detail
Model Number	F5002
Product Dimensions	0.98 x 0.98 x 9.65 inches
Item Weight	8.15 ounces
Battery Life	Up to 180 days
Motor Speed	Up to 76,000 VPM (Vibrations Per Minute)
Brushing Modes	Morning, Night, Standard, Whitening, Gentle (5 modes)
Waterproof Rating	IPX7
Charging Type	USB-C
Bristle Material	DuPont Tynex

WARRANTY AND SUPPORT

Your Oclean F5002 Sonic Electric Toothbrush is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For product support, technical assistance, or warranty claims, please visit the official Oclean website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question