

[Manuals.plus](#) /

› [BIUBLE](#) /

› BIUBLE Cordless Electric Mop Instruction Manual

BIUBLE B07

BIUBLE Cordless Electric Mop Instruction Manual

Model: B07

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your BIUBLE Cordless Electric Mop. Designed for effortless floor cleaning, this dual-spin mop features an LED headlight, water sprayer, and a rechargeable battery, making it suitable for various floor types. Please read this manual thoroughly before first use and retain it for future reference.



Image: The BIUBLE Cordless Electric Mop, showcasing its sleek design and included mop pads.

WHAT'S INCLUDED

Carefully unpack all components and ensure you have received the following items:

- 1 x Electric Mop Unit
- 1 x AC Adapter Charger
- 6 x Replacement Mop Pads (various types)
- 1 x Water Funnel
- 2 x AAA Batteries (for handle spray function)
- 1 x User Manual (this document)



Image: A visual representation of all items included in the product package.

FEATURES

- **Enhanced Dual Powerful Motors:** Equipped with high-powered dual-spin motors, achieving a clean spin speed of up to 300 revolutions per minute. The self-propelled design assists in easy movement across various floor surfaces.

POWERFUL DUAL MOTORS UP TO 300r/min

Light push to move
Easily wipes away
stubborn stains

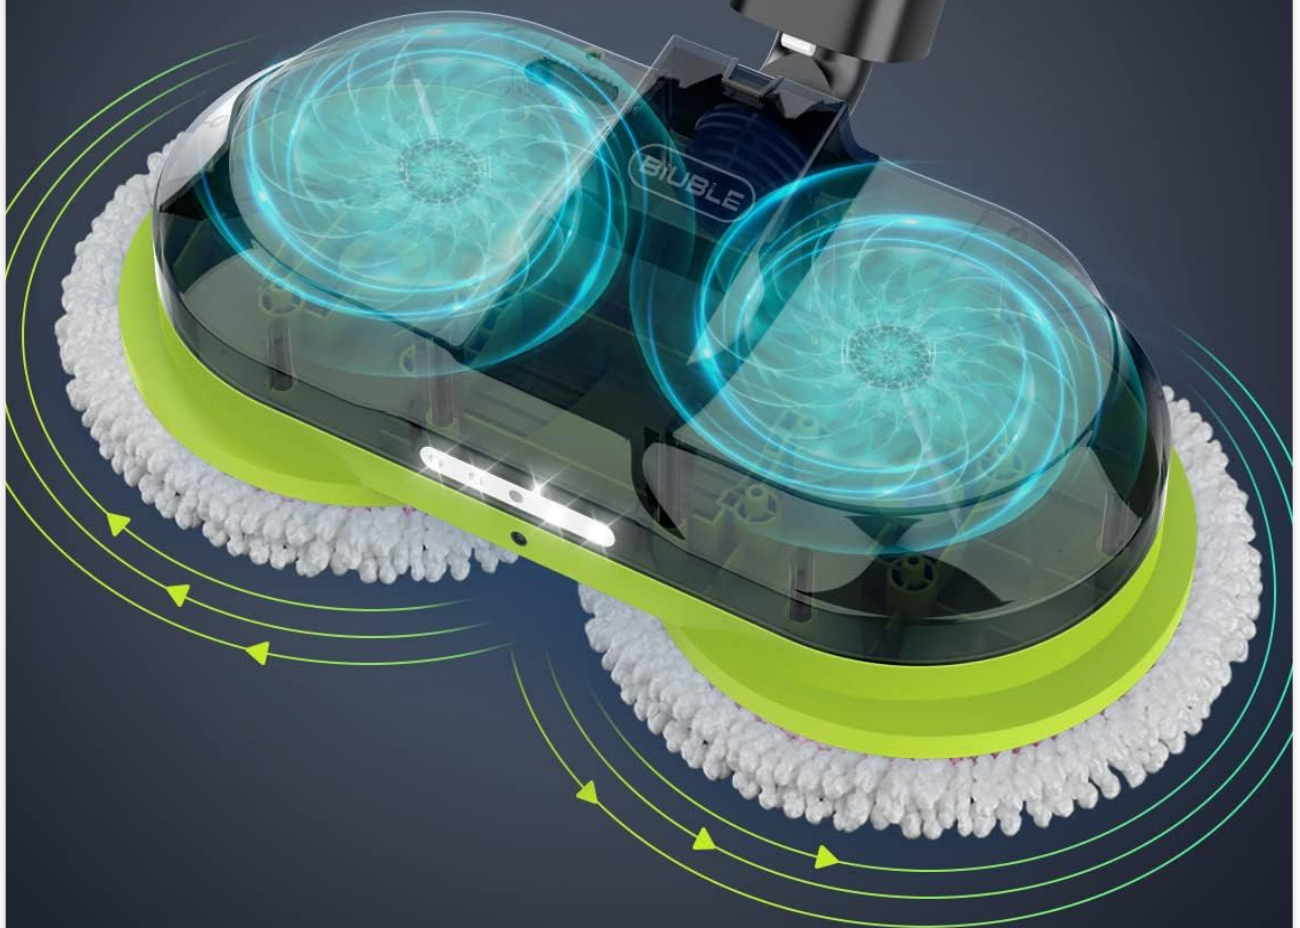


Image: Illustration highlighting the powerful dual-spin motors within the mop head.

- **Long Working Time & Detachable Battery:** The 3200mAh detachable battery provides approximately 50 minutes of wet mopping or 80 minutes of dry mopping on a single 3-hour fast charge, capable of cleaning up to 2,600 sq.ft. of floor space.

DETACHABLE BATTERY DURABLE AND HIGH CAPACITY

Easily sweeps up to
2,600 sq.ft. of floor space

50 mins
Wet Mopping

80 mins
Dry Mopping

3200mAh

 **3 hours**
Fast Charging



Image: A detailed view of the detachable battery and its specifications.

- **Built-in 300ML Water Tank & One-Click Water Spray:** Features a 300ml water tank for easy addition of water and cleaning fluid. A quick-access one-click water spray button is conveniently located on the grip. (Recommended cleaning fluid to water ratio is 1:30. Do not add foam cleaner.)



ERGONOMIC HANDLE
Easy to start the mop, turn on the headlight and spray water

5 LED LIGHT
Shines out all stubborn stains



ONE-TOUCH WATER SPRAY
Shines out all stubborn stains

Image: Close-up of the ergonomic handle, showing the power and spray buttons, and the integrated LED headlight.

- **Adjustable Grip Pole & LED Headlight:** The mop height can be adjusted from 38 inches to 50 inches for comfortable use. It offers 180° horizontal and 90° vertical spinning, ideal for cleaning under furniture. The auto LED headlight illuminates stains in dark areas.

SWIVEL STEERING

Adjust the most comfortable mop handle length and angle freely, easy cleaning without effort



Image: The mop head swiveling to reach under furniture, highlighting its flexible design.

- **50dB Quiet Work Sound:** Operates below 50dB, ensuring a quiet cleaning experience.
- **Stand-Free Design:** The mop is designed to stand upright on its own, saving space and allowing for easy access to controls.
- **Versatile Floor Compatibility:** Suitable for various hard floor types including wood, cement, tile, and marble.



⊗ **No costly time consumption**



⊗ **No inconvenient places to clean**



⊗ **No knee pain and back pain**



⊗ **No difficult to clean**



Image: The mop head positioned over various floor samples, indicating its multi-surface compatibility.

SETUP

1. **Assemble the Mop:** Connect the handle pole sections firmly until they click into place. Attach the assembled pole to the main mop head unit.
2. **Install AAA Batteries:** Open the battery compartment on the handle and insert the 2 AAA batteries provided. These power the water spray function.

3. **Charge the Main Battery:** Insert the detachable main battery into the charging port on the mop unit. Connect the AC adapter charger to the battery and plug it into a power outlet. Allow approximately 3 hours for a full charge. The indicator lights will show charging status.
4. **Attach Mop Pads:** Securely attach the desired mop pads to the bottom of the mop head. Ensure they are centered and firmly adhered.

OPERATING INSTRUCTIONS

1. **Fill the Water Tank:** Open the water tank cap on the mop head. Use the provided funnel to fill the 300ml tank with water and your preferred liquid cleaning solution (observing the 1:30 cleaning fluid to water ratio). Close the cap securely.
2. **Power On:** Press the ON/OFF button on the ergonomic handle to start the mop. The dual-spin motors will activate, and the LED headlight will illuminate.
3. **Begin Mopping:** Guide the mop across the floor. The self-propelled design will assist in movement. For stubborn stains, allow the mop to hover over the area for a few seconds.
4. **Use Water Spray:** Press the spray button on the handle to dispense water or cleaning solution onto the floor as needed.
5. **Adjust Handle Angle:** Utilize the mop's 180° horizontal and 90° vertical swivel steering to reach under furniture and into corners effectively.
6. **Power Off:** Press the ON/OFF button again to turn off the mop when finished.

Your browser does not support the video tag.

Video: Demonstration of the BIUBLE Cordless Electric Mop in action, highlighting its water spray function and effectiveness on hard floors.

MAINTENANCE

1. **Clean Mop Pads:** After each use, remove the mop pads from the mop head. The pads are machine washable. Wash them with similar colors and air dry. Do not use bleach or fabric softener.

SUITABLE FOR VARIOUS FLOORS

Wood Floor

Cement Floor

Tile Floor

Marble Floor



Image: The reusable mop pads, emphasizing their machine washable nature.

2. **Empty Water Tank:** Empty any remaining water or cleaning solution from the tank after each use to prevent residue buildup and odors.
3. **Wipe Down Mop Unit:** Use a damp cloth to wipe down the exterior of the mop unit, removing any dirt or spills. Do not submerge the unit in water.
4. **Store Properly:** Store the mop in a dry, cool place, away from direct sunlight and extreme temperatures. The stand-free design allows for convenient upright storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop does not turn on.	Battery is not charged or not properly inserted.	Ensure the main battery is fully charged and correctly inserted. Check if the AAA batteries in the handle are installed correctly and have power.
Water spray is not working.	Water tank is empty, clogged, or AAA batteries are low/dead.	Refill the water tank. Ensure no foam cleaner was added, which can cause blockages. Replace AAA batteries in the handle if necessary.
Mop pads are not spinning effectively.	Mop pads are worn out or too soft for stubborn stains.	Replace mop pads if worn. For stubborn floors, pre-soak pads with cleaning liquid or water for 2-3 minutes.
Mop is difficult to maneuver.	Handle height is not adjusted correctly.	Adjust the telescopic handle to a comfortable height (38-50 inches).

SPECIFICATIONS

- **Model Name:** BIUBLE B07 Cordless Electric Floor Cleaners
- **Item Model Number:** B07
- **Brand:** BIUBLE
- **Package Dimensions:** 19.69 x 15.91 x 5.2 inches
- **Item Weight:** 8.6 Pounds
- **Battery:** Rechargeable (main unit), 2 AAA batteries (included, for handle)
- **Water Tank Capacity:** 300ml
- **Spin Speed:** Up to 300r/min
- **Noise Level:** Below 50dB
- **Handle Adjustment:** 38 to 50 inches
- **Surface Recommendation:** Hard Floors

WARRANTY & SUPPORT

BIUBLE is committed to providing innovative, high-quality essentials for home and life. The quality of the products we sell is always the priority.

This product comes with lifetime technical support. If you encounter any issues or require assistance, please do not hesitate to contact our official support channels. We will spare no effort to solve the problem for you.

For customer support, please refer to the contact information provided on the product packaging or the official BIUBLE website.