

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Uarzt](#) /

› [Uarzt Remote Control Tractor Toy Instruction Manual](#)

## Uarzt 6645

# Uarzt Remote Control Tractor Toy Instruction Manual

Model: 6645

## PRODUCT OVERVIEW

The Uarzt Remote Control Tractor Toy is an advanced farm vehicle playset designed for children aged 3 to 9 years. This set includes a durable metal tractor head, an 8-wheel drive system, a 2.4GHz remote control, a functional front loader, a dumpable trailer, and various farm accessories. It features working lights and realistic movements to enhance the play experience.

Key features include:

- **Metal Tractor Head & 8-Wheel Drive:** Provides enhanced durability and stability across various terrains.
- **2.4GHz Remote Control:** Allows for multi-player operation without interference.
- **Functional Attachments:** Includes a front loader with 3rd gear adjustment and a dumpable trailer for interactive play.
- **Working Lights:** Adds realism to the play experience.
- **Farm Accessories:** Comes with miniature cow, sheep, square hay bales, and round hay bale.



Image: The complete Uarzt Remote Control Tractor Toy set, showcasing the tractor, trailer, front loader, remote control, and included farm animals and hay bales.

## SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 36 months to 9 years. Adult supervision is recommended for younger children.
- **Battery Safety:** Use only the specified battery type (1 Lithium Ion battery for the tractor, included). Do not mix old and new batteries, or different types of batteries. Ensure correct polarity when inserting batteries.
- **Choking Hazard:** The set contains small parts (farm animals, hay bales) which may pose a choking hazard for children under 3 years.
- **Operating Environment:** Operate the toy on flat, clear surfaces. Avoid water, sand, or excessively rough terrain to prevent damage.
- **Remote Control Range:** Be aware of the 2.4GHz remote control range to maintain control of the toy.

## WHAT'S IN THE Box

Verify that all components are present upon opening the package:

- RC Tractor Toy
- Remote Control
- Rechargeable Lithium Ion Battery (for tractor)
- USB Charging Cable
- Front Loader Attachment

- Dumpable Trailer
- Miniature Cow Figure
- Miniature Sheep Figure
- Square Hay Bales (multiple)
- Round Hay Bale
- Screwdriver (for battery compartment)
- Product Manual (this document)



Image: A visual representation of all items included in the Uarzt RC Tractor Toy package, laid out clearly.

## SETUP

### 1. Battery Installation

#### For the Tractor:

1. Locate the battery compartment on the underside of the tractor.
2. Use the included screwdriver to open the battery compartment cover.
3. Connect the rechargeable Lithium Ion battery to the tractor's battery connector, ensuring correct polarity.
4. Place the battery inside the compartment and close the cover securely with the screw.

#### For the Remote Control:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert 2 x AA batteries (not included) into the compartment, observing the correct polarity (+/-).
4. Close the battery compartment cover.



Image: Detailed instructions for inserting the rechargeable battery into the tractor and AA batteries into the remote control.

## 2. Charging the Tractor Battery

Before first use, fully charge the tractor's battery. The charging time is approximately 2-3 hours.

1. Connect the USB charging cable to the tractor's battery.
2. Plug the other end of the USB charging cable into a standard USB power adapter (e.g., phone charger, computer USB port).
3. The indicator light on the USB cable will show charging status (e.g., red for charging, off when fully charged).
4. Once fully charged, disconnect the battery from the charging cable.

## 3. Attaching Accessories

### Attaching the Front Loader:

1. Align the attachment points of the front loader with the corresponding slots on the front of the tractor.
2. Insert the loader until it clicks securely into place.

## Attaching the Trailer:

1. Align the trailer hitch with the towing hook at the rear of the tractor.
2. Press down to secure the trailer to the tractor. Ensure it is firmly attached before operation.



Image: Step-by-step visual guide demonstrating the alignment and attachment process for the front loader and trailer.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- **Tractor:** Locate the power switch on the tractor (usually on the underside or rear). Slide it to the "ON" position.
- **Remote Control:** Slide the power switch on the remote control to the "ON" position. The indicator light on the remote will illuminate.
- Ensure both are turned off after use to conserve battery life.

### 2. Remote Control Functions

The 2.4GHz remote control allows for precise movement and control of the tractor.

- **Forward/Backward:** Use the left joystick (or designated button) to move the tractor forward or backward.
- **Turn Left/Right:** Use the right joystick (or designated button) to steer the tractor left or right.
- **Lights:** Press the "Light" button on the remote control to turn the tractor's headlights on or off. The lights remain on while driving when activated.
- **One-Key Demo:** Press the "One-Key Demo" button to activate an automatic demonstration sequence of the tractor's movements and functions.



Image: An illustration of the remote control, highlighting buttons for forward, backward, turn left, turn right, light control, and one-key demo.

### 3. Using the Front Loader and Trailer

- **Front Loader Operation:** Use the dedicated controls on the remote (if available, or manually adjust if not remote-controlled) to raise, lower, and tilt the front loader bucket. The 3rd gear adjustment allows for flexible and rotating joints.
- **Trailer Operation:** The trailer can be used to transport the included farm accessories (hay bales, animals). The

trailer is dumpable for easy unloading.

## MORE DETAILS MORE FUN



### 3RD GEAR ADJUSTMENT

Flexible and rotating joints



### ADJUSTABLE

Easy transportation



### UPGRADE HINGE

No need to worry about shedding



### LIGHTING EFFECT

Press the light button  
The light remains on when driving

Image: Visual details of the front loader's adjustable mechanism and the trailer's dumping function.

## MAINTENANCE

- Cleaning:** Wipe the tractor and remote control with a clean, damp cloth. Do not immerse in water. Avoid harsh chemicals.
- Battery Care:**
  - Always turn off the toy and remote control after use.
  - Remove batteries from the remote control if the toy will not be used for an extended period.
  - Recharge the tractor battery only with the provided USB charging cable.
- Storage:** Store the toy and its accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- Hinge Maintenance:** The upgraded hinge design prevents shedding, but ensure no debris interferes with its movement.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Tractor does not move or respond to remote.	<ul style="list-style-type: none"><li>Tractor battery is low or uncharged.</li><li>Remote control batteries are low or incorrectly inserted.</li><li>Tractor or remote control is not turned on.</li><li>Interference from other 2.4GHz devices.</li></ul>	<ul style="list-style-type: none"><li>Charge the tractor battery fully.</li><li>Replace remote control batteries, ensuring correct polarity.</li><li>Turn on both the tractor and the remote control.</li><li>Move to an area with less interference.</li></ul>
Tractor moves slowly or erratically.	<ul style="list-style-type: none"><li>Tractor battery is low.</li><li>Operating on unsuitable terrain (e.g., thick carpet, sand).</li></ul>	<ul style="list-style-type: none"><li>Recharge the tractor battery.</li><li>Operate on a smoother, harder surface.</li></ul>
Lights are not working.	<ul style="list-style-type: none"><li>Light button not pressed.</li><li>Battery low.</li></ul>	<ul style="list-style-type: none"><li>Press the "Light" button on the remote.</li><li>Charge the tractor battery.</li></ul>
Attachments (loader/trailer) detach easily.	<ul style="list-style-type: none"><li>Not securely attached.</li><li>Excessive force during play.</li></ul>	<ul style="list-style-type: none"><li>Ensure attachments are clicked firmly into place.</li><li>Remind users to handle with care during play.</li></ul>

## SPECIFICATIONS

<b>Brand</b>	Uarzt
<b>Model Number</b>	6645
<b>Product Dimensions</b>	4.7 x 7 x 6.1 inches (Tractor dimensions: 6.1in x 19in including trailer)
<b>Item Weight</b>	2.86 pounds
<b>Recommended Age</b>	36 months - 9 years
<b>Batteries Required</b>	1 Lithium Ion battery (included for tractor), 2 AA batteries (not included for remote)
<b>Control Frequency</b>	2.4 GHz
<b>Material</b>	Metal (car head), Plastic, Rubber (tires)

## CUSTOMER SUPPORT

Uarzt is committed to providing exceptional care and support for our products. If you have any questions, concerns, or require assistance with your Remote Control Tractor Toy, please do not hesitate to contact our customer service team.

For support, please refer to the contact information provided on the product packaging or visit the official Uarzt store on Amazon:

[Visit the Uarzt Store on Amazon](#)

We are dedicated to ensuring your satisfaction and helping you create wonderful memories with our products.

© 2025 Uarzt. All rights reserved.

## Related Documents - 6645

	<p><a href="#">Marathon SSNAV-D Steel Navigator w/ Date Watch Manual</a></p> <p>Official manual for the Marathon SSNAV-D Steel Navigator w/ Date watch. Details specifications, technical information, operations, maintenance, and warranty for this Swiss-made timepiece.</p>
	<p><a href="#">SUITU ST-6645 Multifunction Wireless Vacuum Cleaner User Manual</a></p> <p>Official user manual for the SUITU ST-6645 Multifunction Wireless Vacuum Cleaner. Provides instructions for operation, maintenance, and safety for this portable home and car vacuum.</p>
	<p><a href="#">Marathon WW194003 General Purpose Mechanical Watch Operating Instructions</a></p> <p>Operating instructions for the Marathon WW194003 General Purpose Mechanical wristwatch. Learn how to wind, set time, and understand its features, manufactured to MIL-PRF-46374G standards.</p>
	<p><a href="#">Marathon WW194004 General Purpose Quartz Watch Operating Instructions</a></p> <p>Operating instructions and specifications for the Marathon WW194004 General Purpose Quartz (GPQ) wristwatch. Features include water and shock resistance, stop-second function, End-of-Life (EOL) battery indicator, and compliance with MIL-PRF-46374G standards.</p>
	<p><a href="#">Marathon WW194015 General Purpose Quartz Watch Operating Instructions</a></p> <p>Detailed operating instructions for the Marathon WW194015 General Purpose Quartz Watch with Date, covering time and date setting, water resistance, accuracy, battery replacement, and manufacturing standards.</p>
	<p><a href="#">Marathon WW194001 Quartz Navigator Watch Operating Instructions</a></p> <p>Concise operating instructions and key specifications for the Marathon WW194001 Quartz Navigator Wrist Watch, highlighting its durability, features, and compliance with MIL-PRF-46374G standards.</p>