

[Manuals.plus](#) /

› [iWALK](#) /

› iWALK LinkPod 4 Portable Charger Instruction Manual

iWALK DBL4500L

iWALK LinkPod 4 Portable Charger Instruction Manual

Model: DBL4500L

Brand: iWALK

1. INTRODUCTION AND OVERVIEW

The iWALK LinkPod 4 is a compact and portable power bank designed to provide on-the-go charging for your mobile devices. With a 4500mAh high-quality battery, it offers a convenient, cordless solution for extending your device's battery life.

Its ultra-compact design allows it to be easily carried in a pocket or bag, making it an ideal companion for travel and daily use. The LinkPod 4 features a direct plug-in design, eliminating the need for additional charging cables for your device.



Image: Two iWALK LinkPod 4 portable chargers, one in pink and one in black, showcasing their sleek design and compact form factor.

Key Features:

- **4500mAh Capacity:** Provides sufficient power for at least one full charge for most iPhone models.
- **Ultra-Compact Design:** Small and lightweight for easy portability.
- **Cordless Operation:** Plugs directly into your device, eliminating the need for extra cables.
- **Pass-through Charging:** Allows charging of your device while the power bank itself is being recharged.

2. SETUP

2.1 What's Included

Upon unboxing your iWALK LinkPod 4, please verify that all components are present:

- 2 x iWALK LinkPod 4 Portable Power Banks
- 2 x USB-A to USB-C Charging Cables
- 1 x User Manual (this document)



Image: The complete contents of the iWALK LinkPod 4 package, including the two power banks, charging cables, and the instruction manual.

2.2 Initial Charging of the Power Bank

Before first use, it is recommended to fully charge your iWALK LinkPod 4 power bank. This ensures optimal battery performance and longevity.

1. Connect one end of the provided USB-A to USB-C cable to the USB-C input port on the iWALK LinkPod 4.
2. Connect the USB-A end of the cable to a compatible USB wall adapter (not included) or a computer's USB port.
3. The indicator lights on the power bank will illuminate to show the charging status. All lights will be solid when fully charged.

A full charge typically takes approximately 2-3 hours, depending on the power source.

3. OPERATING INSTRUCTIONS

3.1 Charging Your Device

The iWALK LinkPod 4 is designed for direct, cordless charging of compatible devices.

1. Ensure your iWALK LinkPod 4 is sufficiently charged.
2. Align the built-in connector of the power bank with the charging port of your iPhone or other compatible device.
3. Gently insert the connector into your device's port until it is securely seated.
4. Your device should immediately begin charging. The indicator lights on the power bank will show its remaining charge level.

4500 mAh Capacity

iPhone 12

1.1 charges

iPhone 13

1.0 charges

iPhone 14

1.0 charges



Image: An illustration detailing the 4500 mAh capacity of the iWALK LinkPod 4 and its charging capabilities for various iPhone models, indicating approximately one full charge for iPhone 13 and 14, and slightly more for iPhone 12.

3.2 Recharging the Power Bank (Pass-through Charging)

You can recharge the iWALK LinkPod 4 while it is simultaneously charging your device. This feature is known as pass-through charging.

1. Connect your device to the iWALK LinkPod 4 as described in Section 3.1.
2. Connect the provided USB-A to USB-C cable to the USB-C input port on the iWALK LinkPod 4.
3. Plug the USB-A end of the cable into a power source (e.g., wall adapter, computer).
4. Both your device and the power bank will begin charging.

Pass-through Technology

Charge Your Phone While Charging



Image: The iWALK LinkPod 4 connected to an iPhone and simultaneously connected to a wall charger, illustrating the pass-through charging capability where both devices charge at once.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your iWALK LinkPod 4.

4.1 Cleaning

- Disconnect the power bank from all power sources and devices before cleaning.
- Use a soft, dry, lint-free cloth to wipe the surface of the power bank.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture into any openings.

4.2 Storage

- Store the power bank in a cool, dry place, away from direct sunlight and extreme temperatures.

- For long-term storage, charge the power bank to approximately 50-70% capacity. This helps preserve battery health.
- Avoid storing in environments with high humidity.

4.3 Battery Care

- Avoid fully discharging the battery frequently, as this can reduce its lifespan.
- Do not expose the power bank to temperatures above 45°C (113°F) or below 0°C (32°F).
- If the power bank is not used for an extended period, recharge it every 3-6 months to maintain battery health.

5. TROUBLESHOOTING

If you encounter issues with your iWALK LinkPod 4, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Power bank not charging device.	Power bank battery is depleted. Connector not fully inserted. Device incompatibility.	Recharge the power bank. Ensure the connector is firmly seated in the device's port. Verify your device is compatible with the power bank's connector type.
Power bank not recharging.	Charging cable is faulty. Power source is not active. USB-C port is obstructed.	Try a different USB-A to USB-C cable. Ensure the wall adapter or USB port is functioning. Check the USB-C port for debris and gently clean if necessary.
Slow charging.	Low power output from source. Device is in heavy use while charging.	Use a higher-output USB wall adapter. Reduce device usage during charging.
Indicator lights not working.	Power bank is completely discharged. Internal malfunction.	Attempt to recharge the power bank for an extended period. If issue persists, contact customer support.

If the problem persists after trying these solutions, please contact iWALK customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	DBL4500L
Battery Capacity	4500 Milliamp Hours (mAh)
Battery Type	Lithium Ion (2 required, included)
Connector Type	USB (Built-in for device, USB-C for recharging power bank)
Package Dimensions	5.71 x 5.71 x 1.93 inches
Item Weight	13.4 ounces
Color	Black+Pink (as per package)

Feature	Detail
Special Features	Portable, Cordless, Pass-through Charging

7. SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to the product:

- Do not disassemble, open, or shred the battery pack.
- Do not expose the power bank to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit the battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- Do not subject the battery pack to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep the power bank clean and dry.
- Do not leave a fully charged battery pack on charge when not in use.
- Dispose of the power bank properly according to local regulations. Do not dispose of with household waste.
- Keep out of reach of children.

8. WARRANTY AND SUPPORT

iWALK products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service inquiries, please visit the official iWALK website or contact their customer service directly. Please retain your proof of purchase for warranty claims.

For the most up-to-date support information, please refer to the official iWALK brand store or contact details provided with your product packaging.

You can visit the iWALK Store at amazon.com/stores/iWALK.

© 2023 iWALK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question