

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Depuley](#) /

› [Depuley Ceiling Fan with Light Remote User Manual \(Model WS-FPZ10-60B-Remote\)](#)

Depuley WS-FPZ10-60B-Remote

Depuley Ceiling Fan with Light Remote User Manual

MODEL: WS-FPZ10-60B-REMOTE

Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Depuley Ceiling Fan with Light Remote, model WS-FPZ10-60B-Remote. Please read all instructions carefully before beginning installation or use to ensure proper function and safety.

Important Safety Information

- Always disconnect power at the circuit breaker before installation or servicing.
- Installation must be performed by a qualified electrician or service personnel.
- Ensure all electrical connections comply with local codes and ordinances.
- Mount the fan to a ceiling joist or support structure capable of supporting the fan's weight.
- Do not operate the fan with damaged wiring or if any components are missing.

Setup and Installation

The following steps outline the general installation process. Refer to the detailed diagrams included in your product packaging for specific component identification and wiring instructions.


1. **Prepare for Installation:** Turn off power at the main circuit breaker. Clear the work area.
2. **Mounting Bracket Installation:** Secure the mounting bracket to a ceiling joist or an approved outlet box capable of supporting the fan's weight.
3. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to the provided wiring diagram. Ensure all connections are secure and properly insulated.
4. **Assemble Fan Components:** Attach the downrod (if applicable), motor housing, and fan blades as per the instructions.
5. **Install Light Kit:** Connect and secure the light kit to the fan assembly. Install light bulbs (if not pre-installed).
6. **Remote Control Pairing:** Follow the specific instructions in your product packaging to pair the remote

control with the fan. This typically involves restoring power and pressing a button on the remote within a short timeframe.

7. **Final Checks:** Ensure all screws are tightened and components are secure. Restore power at the circuit breaker.

Operating Instructions

Your Depuley Ceiling Fan is controlled by the included remote. Familiarize yourself with the remote's functions:

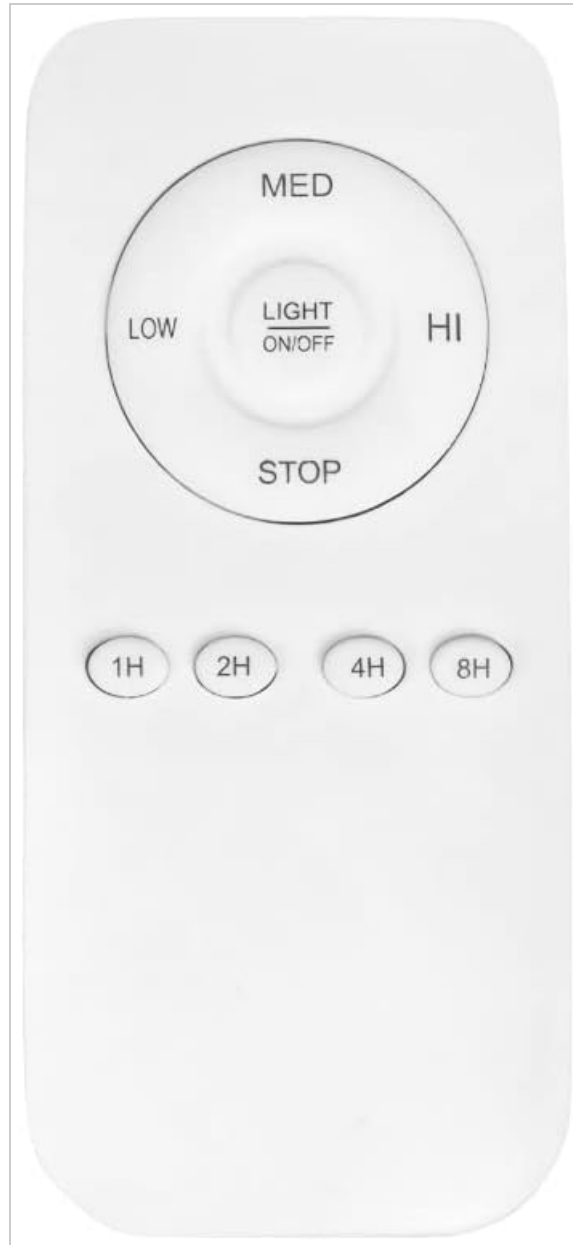

This image displays the remote control for the Depuley Ceiling Fan. It features buttons for fan speed (LOW, MED, HI, STOP), light control (LIGHT ON/OFF), and timer settings (1H, 2H, 4H, 8H).

- **LIGHT ON/OFF:** Press this button to turn the fan light on or off.
- **LOW:** Sets the fan speed to low.
- **MED:** Sets the fan speed to medium.
- **HI:** Sets the fan speed to high.
- **STOP:** Turns the fan motor off.
- **1H / 2H / 4H / 8H:** These buttons activate the fan timer function. Pressing one of these buttons will set

the fan to operate for the specified duration (1, 2, 4, or 8 hours) before automatically turning off.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish. Ensure power is off before cleaning.
- **Blade Cleaning:** Dust fan blades regularly to prevent dust buildup, which can affect balance and performance.
- **Light Fixture:** Clean the light cover and bulbs as needed. Replace bulbs with the same type and wattage as specified.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure.
- **No Lubrication Required:** The fan motor is permanently lubricated and does not require oiling.

Troubleshooting

If you encounter issues with your Depuley Ceiling Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker and wall switch. Ensure all wiring connections are secure. Replace remote battery. Re-pair remote control according to instructions.
Light does not work	Light bulb faulty; Loose wire connection; Remote control issue.	Replace light bulb. Check light kit wiring. Ensure remote battery is good and remote is paired.
Fan wobbles	Loose fan blades; Uneven blade balance; Loose mounting bracket.	Ensure all blade screws are tight. Use a balancing kit (not included) to correct blade balance. Tighten mounting bracket screws.
Remote control not responding	Low or dead battery; Remote not paired; Interference.	Replace remote battery. Re-pair the remote control. Ensure no strong signal interference nearby.

Product Specifications

- **Brand:** Depuley
- **Electric fan design:** Ceiling Fan
- **Power Source:** Corded Electric
- **Style:** Modern
- **Room Type:** Bedroom, Living Room
- **Switch Type:** Remote
- **Control Method:** Remote
- **Package Dimensions:** 5.71 x 5.12 x 1.3 inches
- **Item Weight:** 4.2 ounces

- **Item model number:** WS-FPZ10-60B-Remote
- **ASIN:** B0B9SDMPTR
- **Date First Available:** August 16, 2022

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact Depuley customer service. Keep your purchase receipt for warranty claims.