

[Manuals.plus](#) /

› [Princess](#) /

› Princess 01.182031.01.001 Digital Aerofryer XL User Manual

Princess 01.182031.01.001

Princess 01.182031.01.001 Digital Aerofryer XL User Manual

Model: 01.182031.01.001

INTRODUCTION

The Princess 182031 Digital Aerofryer XL is designed to provide a healthy and efficient way to fry, bake, grill, cook, and roast various foods. Utilizing hot circulating air, this appliance allows for low-fat cooking without the need for excessive oil, delivering crispy results. Its user-friendly digital display and pre-programmed settings simplify the cooking process, making it a versatile addition to any kitchen.



Figure 1: Front view of the Princess Digital Aerofryer XL, showcasing its sleek black design and digital control panel.

IMPORTANT SAFETY INSTRUCTIONS

Before using the appliance, please read all instructions carefully to ensure safe operation and prevent damage. Keep this manual

for future reference.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Supervise children closely when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any way.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries or damage.
- Avoid touching hot surfaces. Use the cool-touch handle for the removable basket.
- Do not block the air inlet or outlet openings during operation.
- This appliance is for household use only. Do not use outdoors.

PRODUCT COMPONENTS

The Princess Digital Aerofryer XL consists of the following main components:

- **Main Unit:** Contains the heating element and fan.
- **Digital Control Panel:** Features a digital display and touch controls for temperature, time, and pre-programmed settings.
- **Removable Frying Basket:** For holding food during cooking, equipped with a cool-touch handle.
- **Removable Grid Plate:** Sits inside the basket to allow air circulation around food.
- **Air Inlet and Outlet Vents:** Located on the top and back of the unit for proper airflow.



1350 W



3,5 L



0,9 L



4,5 kg



Figure 2: Diagram showing the dimensions of the Princess Digital Aerofryer XL (29.8 cm depth, 32.3 cm width, 23.9 cm height) and key specifications like 1350W power and 3.5L capacity.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance.
2. **Cleaning:** Before first use, clean the frying basket and grid plate with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the Aerofryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space around the back and sides of the appliance to allow for proper air circulation.
4. **Preheating (Optional First Run):** For the first use, it is recommended to run the appliance for about 10 minutes at 180°C without any food inside. This helps to burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.

OPERATING INSTRUCTIONS

General Operation

1. Plug the power cord into a grounded wall outlet.
2. Carefully pull out the frying basket from the Aerofryer.
3. Place the ingredients into the frying basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the Aerofryer. Ensure it clicks securely into place.
5. The digital display will illuminate.

Using Pre-programmed Settings

The Princess Digital Aerofryer XL features 10 pre-programmed settings for common dishes, simplifying the cooking process.



Figure 3: The air fryer in use, demonstrating its features including preheating function, 10 pre-programmed settings, 60-minute timer, and adjustable temperature (80-200°C).

1. Press the power button to turn on the appliance.
2. Select the desired pre-programmed setting by pressing the corresponding icon on the digital control panel (e.g., chips, meat, fish, shrimp, chicken, steak, cake).

3. The appliance will automatically set the optimal temperature and time for that food type.
4. Press the start/pause button to begin cooking.

Manual Temperature and Time Settings

For custom cooking, you can manually adjust the temperature and time.



Figure 4: A close-up view of the intuitive digital display, showing temperature and time settings, and various food icons for pre-programmed cooking modes.

1. Press the power button.
2. Use the temperature control buttons (+ / -) to set the desired temperature (80°C to 200°C).
3. Use the timer control buttons (+ / -) to set the desired cooking time (up to 60 minutes).
4. Press the start/pause button to begin cooking.

Cooking Tips

- For best results with fresh potatoes, add a tablespoon of oil for crispiness.

- Shake the basket halfway through cooking for even browning, especially for smaller ingredients like fries.
- The Aerofryer can also reheat dishes without drying them out, similar to a microwave.
- Do not overfill the basket to ensure proper air circulation and even cooking.



Figure 5: The air fryer displayed with various cooked foods, highlighting its benefits: less oil, easy to use, easy to clean, and BPA/PFOA free construction.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your Aerofryer.

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Basket and Grid:** The frying basket and grid plate are non-stick coated and can be cleaned with hot water, dish soap, and a non-abrasive sponge. They are also dishwasher safe.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. Do not use abrasive cleaners or steel wool.
4. **Cleaning the Exterior:** Wipe the exterior with a damp cloth.

5. **Storage:** Store the appliance in a dry, cool place once it is clean and dry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Aerofryer does not work.	The appliance is not plugged in. The timer is not set.	Plug the main plug into a grounded wall socket. Turn the timer to the required cooking time.
Ingredients are not cooked evenly.	Too many ingredients in the basket. Temperature too low.	Reduce the amount of ingredients per batch. Increase the temperature. Shake the basket halfway through cooking.
White smoke comes from the appliance.	Fat residue from previous use. Basket not properly cleaned.	Clean the basket and grid plate thoroughly after each use. Ensure no fat residue remains.
Fresh fries are not crispy.	Not enough oil used. Type of potato.	Add a tablespoon of oil to fresh potatoes before frying. Use a potato variety suitable for frying.

SPECIFICATIONS

Feature	Detail
Brand	Princess
Model Number	01.182031.01.001
Colour	Black
Product Dimensions	29.8 x 32.3 x 23.9 cm
Capacity	3.5 litres
Power / Wattage	1350 Watt
Voltage	240 Volts
Material	Plastic
Auto Shutoff	Yes
Special Features	Temperature Control, Digital Display, 10 Pre-programmed Settings
Item Weight	3.7 kg

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Princess website. For technical support, spare parts, or service, please contact Princess customer service or your local retailer. You can find more information and contact details on the official Princess website:www.princesshome.eu

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B9SX12F9>

More documents and user manuals: <https://manuals.plus/>