

[Manuals.plus](#) /

- › [Tommy Hilfiger](#) /
- › Tommy Hilfiger Men's Multifunction Watch Model 1710489 User Manual

Tommy Hilfiger 1710489

Tommy Hilfiger Men's Multifunction Watch Model 1710489 User Manual

Your guide to setup, operation, and care.

1. PRODUCT OVERVIEW

This manual provides comprehensive instructions for the Tommy Hilfiger Men's Multifunction Watch, Model 1710489. This timepiece features a durable stainless steel case, a comfortable silicone strap, and a precise quartz movement. It includes multifunction sub-dials for day, date, and 24-hour display, and is water resistant up to 5 ATM (50 meters).



Figure 1: Front view of the Tommy Hilfiger Men's Multifunction Watch.

Key Features:

- **Model:** 1710489
- **Movement:** Quartz
- **Display:** Analog
- **Case Material:** Stainless Steel

- **Band Material:** Silicone
- **Water Resistance:** 5 ATM / 50 Meters
- **Functions:** Day, Date, 24-hour sub-dials

2. COMPONENTS

Familiarize yourself with the main components of your watch:



Figure 2: Angled view highlighting the crown and pushers.

- **Crown:** Used for setting the time and date.
- **Pushers:** Used for adjusting the day and 24-hour sub-dials.
- **Hour, Minute, Second Hands:** Indicate the current time.
- **Sub-dials:** Display the day of the week, date, and 24-hour time.
- **Case:** The main body of the watch, made of stainless steel.
- **Strap:** The navy blue silicone band for wearing the watch.
- **Buckle:** Secures the strap on your wrist.



Figure 3: Back view of the watch, displaying the case back details.

3. SETUP

3.1 Initial Setup

1. **Unpacking:** Carefully remove the watch from its packaging. Remove any protective films from the crystal, case, or strap.

2. **Strap Adjustment:** The silicone strap can be adjusted using the buckle to fit your wrist comfortably.

3.2 Setting the Time and Date

The watch features a crown and two pushers for adjustments. Refer to Figure 2 for their locations.

1. Setting the Time:

- Pull the crown out to position 2 (farthest out).
- Rotate the crown to move the hour and minute hands. Continue rotating until the correct time is displayed. Ensure the 24-hour sub-dial (if applicable) aligns with AM/PM for accurate date change at midnight.
- Push the crown back into position 0 (normal operating position).

2. Setting the Date:

- Pull the crown out to position 1 (first click).
- Rotate the crown (usually clockwise or counter-clockwise, depending on the model) to advance the date until the correct date is displayed.
- Push the crown back into position 0.

3. Setting the Day and 24-Hour Sub-dials:

- The day and 24-hour sub-dials are typically adjusted using the pushers located on the side of the watch case.
- Press the upper pusher to advance the day of the week.
- Press the lower pusher to adjust the 24-hour sub-dial.
- *Note:* Avoid adjusting the date or day between 9 PM and 3 AM, as this can damage the movement. If adjustment is needed during this period, first set the time outside this range, adjust the date/day, then reset the time.

4. OPERATING INSTRUCTIONS

4.1 Timekeeping

Once set, your watch will accurately display the time, day, and date. The quartz movement ensures precise timekeeping.

4.2 Water Resistance

This watch is water resistant up to 5 ATM (50 meters). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering, as prolonged exposure to water pressure or steam can compromise the seals. Always ensure the crown is fully pushed in before any contact with water.

5. MAINTENANCE

5.1 Cleaning

- Wipe the watch regularly with a soft, dry cloth to remove dust and dirt.
- For the silicone strap, a mild soap solution and a soft brush can be used, followed by rinsing with clean water and thorough drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or

seals.

5.2 Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running or the second hand begins to jump erratically (indicating a low battery), it is time for a replacement. We recommend having the battery replaced by a qualified watch technician to ensure proper sealing and to maintain water resistance.

5.3 Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box (Figure 4 and Figure 5) provides ideal protection.



Figure 4: Closed Tommy Hilfiger watch box.



Figure 5: Open Tommy Hilfiger watch box, suitable for storage.

6. TROUBLESHOOTING

If you encounter any issues with your watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch not running	Crown not pushed in; depleted battery.	Ensure crown is fully pushed in. If not, battery may need replacement by a professional.
Time/Date is incorrect	Watch was not set correctly or has been exposed to impact.	Refer to Section 3.2 to reset the time and date.
Condensation inside crystal	Exposure to extreme temperature changes or compromised water resistance.	Seek professional service immediately to prevent damage to the movement.

For issues not listed here, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Tommy Hilfiger Men's Multifunction Watch Model 1710489:

Feature	Detail
Item Model Number	1710489
Brand Name	Tommy Hilfiger

Feature	Detail
Department	Mens
Display Type	Analog
Watch Movement Type	Quartz
Power Source	Battery Powered
Closure Type	Buckle
Strap Type	Two Piece Strap
Water Resistance Depth	50 Meters (5 ATM)
Water Resistance Level	Water Resistant
Band Material Type	Silicone
Case Material Type	Stainless Steel
Crystal	Mineral
Shape	Round
Band Color	Blue
Dial Color	Blue
Case Diameter	50 Millimeters
Band Width	24 Millimeters
Case Thickness	12.4 Millimeters
UPC	885997461672

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

This Tommy Hilfiger watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. The warranty typically covers manufacturing defects but does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

8.2 Customer Support

For further assistance, service, or warranty claims, please contact Tommy Hilfiger customer support or visit their official website. Keep your proof of purchase and warranty card handy when contacting support.

9. OFFICIAL PRODUCT VIDEOS

View these official videos for additional information and visual guidance on your Tommy Hilfiger watch.

Video 1: Tommy Hilfiger Men's Casual Watch - Model 1710489. This video provides a brief overview of the watch's design and features.

Video 2: Tommy Hilfiger Men's Watch 1792095. This video showcases a similar Tommy Hilfiger watch model, demonstrating general aesthetics and wear.

Video 3: Tommy Hilfiger Men's Watch SS'24. This video presents a collection of Tommy Hilfiger watches from the Spring/Summer 2024 line, offering a broader view of the brand's style.