

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic NNSC669S Mid-Size Genius Inverter Microwave Oven Instruction Manual](#)

Panasonic NNSC669S

Panasonic NNSC669S Mid-Size Genius Inverter Microwave Oven

Model: NNSC669S

INTRODUCTION

Thank you for purchasing the Panasonic NNSC669S Mid-Size Genius Inverter Microwave Oven. This appliance is designed to provide efficient and convenient cooking, reheating, and defrosting for your daily needs. Featuring Inverter Technology and a Genius Sensor, it ensures consistent and precise results. Please read this manual thoroughly before operating your new microwave oven to ensure safe and optimal performance.



Image: Front view of the Panasonic NNSC669S Mid-Size Genius Inverter Microwave Oven in stainless steel.

KEY FEATURES

The Panasonic NNSC669S is equipped with advanced features to enhance your cooking experience:

- **Inverter Technology:** Provides consistent heating for fast, even, and delicious results, eliminating cold spots or overcooked edges.
- **Mid-Size Capacity:** A generous 1.3 cubic feet interior easily accommodates larger cookware.
- **Genius Sensor:** Automatically adjusts heating levels to perfectly cook different food types with a single touch.
- **7 Auto Cook Programs:** Offers a variety of one-touch meal options for convenience.
- **Turbo Defrost:** Powerful and fast defrosting tailored by weight for precise thawing every time.
- **Stainless Steel Design:** A sleek and modern aesthetic that complements any kitchen decor.
- **315 mm (12.4 inch) Glass Tray:** Provides ample space for dishes and ensures even heating.



The graphic features a light gray wooden background. In the upper right, the words "Key Features" are written in a green, cursive, sans-serif font. The letter "K" is stylized with a green fork and spoon as the top bar. To the left of the text, there is a list of microwave features with corresponding descriptions:

- **GENIUS SENSOR**
Accurately adjusts heating levels
- **INVERTER TECHNOLOGY**
Ensures fast and even results
- **7 AUTO COOK PROGRAMS**
Pre-set one-touch meal options
- **INVERTER TURBO DEFROST**
Weight-tailored for precise thawing
- **STAINLESS STEEL FINISH**
Compliments any modern kitchen

Below the text, there is a decorative arrangement of various spices and herbs on the same wooden surface. It includes a green bowl filled with a brown powder (likely paprika or chili powder), a wooden spoon with a yellowish-brown powder (likely turmeric or curry powder), a small pile of dried green herbs (possibly thyme or basil), and several whole dried red chilies. There are also some green leaves (possibly basil or mint) and a few whole black peppercorns scattered around.

Image: A graphic highlighting the key features of the microwave, including Genius Sensor, Inverter Technology, 7 Auto Cook Programs, Inverter Turbo Defrost, and Stainless Steel Finish.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage.
2. **Placement:** Place the microwave oven on a flat, stable surface, such as a countertop. Ensure there is

adequate ventilation space around the oven (at least 10 cm on the sides and back, and 30 cm above). Do not block any ventilation openings.

3. **Power Connection:** Plug the oven into a grounded electrical outlet. Ensure the voltage matches the requirements specified on the rating label.
4. **Turntable Assembly:** Place the roller ring in the center of the oven cavity. Position the glass tray securely on top of the roller ring. Ensure the glass tray is properly seated and can rotate freely.



Image: An open view of the microwave interior, showing the glass turntable and the Genius Sensor.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and its functions for optimal use.

Intuitive Keypad

Elegant keypad is easy to use and simple to keep clean.

the Genius

Sensor More Less

10:00

Defrost



oz
lb
g
kg

POPCORN (3 LEVELS)	SENSOR REHEAT	SENSOR COOK (1-7)
POWER LEVEL (10 LEVELS)	TURBO DEFROST (lb/kg)	KEEP WARM

QUICK 30	MORE	LESS
1	2	3
4	5	6
7	8	9
TIMER	0	CLOCK SET

STOP/RESET	START
------------	-------

NN-SC669S

Image: A close-up of the microwave's intuitive keypad, showing various buttons and the digital display.

Setting the Clock

1. Press the **TIMER/CLOCK** button once.
2. Use the number pads to enter the current time.
3. Press **TIMER/CLOCK** again to confirm.

Manual Cooking

1. Place food in the microwave-safe container on the glass tray.
2. Press the **POWER LEVEL** button repeatedly to select the desired power level (10 levels available).
3. Use the number pads to enter the cooking time.
4. Press **START**.

Genius Sensor Cooking

The Genius Sensor automatically detects the humidity released from food and calculates the optimal cooking time and power level.

1. Place food in the microwave-safe container on the glass tray.
2. Press the desired **SENSOR COOK** program button (e.g., Popcorn, Sensor Reheat, Sensor Cook 1-8, Sensor Cook 9-15).
3. Press **START**. The oven will automatically determine the cooking time.



Image: A graphic displaying the 7 Auto Cook Programs: Beverage, Pizza, Potato, Frozen Vegetables, Dinner Plate, Fresh Vegetables, and Frozen Entrée.

Turbo Defrost

This feature allows for quick and even defrosting based on the weight of the food.

1. Place the frozen food on the glass tray.
2. Press the **TURBO DEFROST (lb/kg)** button.
3. Use the number pads to enter the weight of the food.
4. Press **START**. The oven will calculate the defrosting time.



Image: A bowl of frozen berries with text indicating the Turbo Defrost function for precise thawing by weight.

Quick 30

For quick heating, press the **QUICK 30** button to add 30 seconds of cooking time at high power with each press. Press **START** to begin.

Keep Warm

To keep food warm after cooking, press the **KEEP WARM** button and then **START**.

Child Safety Lock (Non Child-Lock Model)

This model is specified as 'Non Child-Lock'. Therefore, it does not feature a child safety lock function. Please supervise children when the appliance is in use.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Interior:** Wipe the interior cavity with a soft cloth and mild soap or a microwave-safe cleaner after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue before wiping.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. For stainless steel, use a specialized stainless steel cleaner to prevent streaks and maintain its shine.
- **Glass Tray and Roller Ring:** These components can be removed and washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seal:** Regularly wipe the door seal and adjacent parts to remove any food spills or debris.

TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common troubleshooting tips:

- **Oven does not start:** Ensure the power cord is securely plugged into a grounded outlet. Check if the door is closed properly. Verify that a cooking time has been set.
- **Food is not cooking evenly:** Stir or rotate food halfway through cooking. Ensure the glass tray and roller ring are correctly assembled and rotating.
- **Excessive steam or condensation:** This is normal for some foods, especially those with high moisture content. Ensure the oven cavity is wiped dry after use.
- **Unusual noises:** A slight humming sound during operation is normal. If the noise is loud or unusual, ensure the glass tray and roller ring are correctly positioned.
- **Display not working:** Check the power connection. If the issue persists, unplug the oven for a few minutes and then plug it back in.

For persistent problems not covered here, please contact Panasonic customer support.

SPECIFICATIONS

Feature	Specification
Brand	Panasonic
Model Number	NNSC669S
Capacity	1.3 Cubic Feet
Wattage	1200 watts
Color	Stainless Steel
Material	Stainless Steel
Installation Type	Countertop
Product Dimensions (External)	315D x 20W x 12H millimeters (12.4 x 20.4 x 16.1 inches)

Oven Dimensions (Internal)	249 x 351 x 386 mm (9.8 x 13.8 x 15.1 inches)
Glass Tray Diameter	315 mm (12.4 inches)
Special Features	Auto Cook, Defrost, Programmable, Inverter Technology, Genius Sensor

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Panasonic website. Keep your proof of purchase for any warranty claims.

You can visit the Panasonic Store on Amazon for more information:[Panasonic Store](#)

© 2024 Panasonic. All rights reserved.