

PH-211

HODEKT Portable Folding Washing Machine

MODEL: PH-211 USER MANUAL

1. Introduction

Thank you for choosing the HODEKT Portable Folding Washing Machine. This compact and versatile appliance is designed for washing small batches of clothing, making it ideal for travel, camping, or small living spaces. Its foldable design ensures easy storage and portability. Please read this manual thoroughly before operation to ensure safe and efficient use.



Image 1: The HODEKT Portable Folding Washing Machine in its operational state, displaying the control panel with time settings.

2. Safety Instructions

To prevent injury or damage, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the main unit, power cord, or plug in water or other liquids.
- Keep out of reach of children. Close supervision is necessary when the appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Ensure the appliance is placed on a stable, flat surface during operation.
- Do not overload the machine beyond its specified capacity (0.8 kg).

3. Package Contents

Please check the package for the following items:

- HODEKT Portable Folding Washing Machine (Main Unit)
- Draining Basket
- Power Adapter
- User Manual (this document)

4. Product Overview

The HODEKT Portable Folding Washing Machine features a compact, collapsible design for easy storage and transport. It includes a powerful motor for effective washing and a spin-drying function with a dedicated basket. The control panel allows for simple selection of wash cycles.



Image 2: Close-up of the washing machine's control panel, highlighting the wash cycle buttons.

5. Setup

1. **Unfold the Machine:** Gently pull the top and bottom sections apart until the machine is fully extended and locked into place. Ensure it is stable.
2. **Placement:** Place the washing machine on a flat, stable, and dry surface, such as a countertop or table. Ensure there is access to a power outlet and a drain for water disposal.
3. **Connect Power:** Plug the power adapter into the machine's power input, then plug the adapter into a suitable electrical outlet.

||

FOLDING DESIGN

QUICKLY FOLD, EASY TO CARRY, YOU CAN WASH YOUR CLOTHES ON BUSINESS TRIPS, CLEAN AND HYGIENIC



Image 3: The washing machine in its folded state, illustrating its space-saving design for travel.

6. Operating Instructions

Follow these steps for a standard wash cycle:

1. **Load Clothes:** Open the lid and place up to 0.8 kg of clothes into the machine. Do not overload.
2. **Add Water:** Fill the machine with an appropriate amount of water, ensuring clothes are submerged. You may add a small amount of detergent suitable for delicate items.
3. **Select Wash Cycle:** Press one of the time buttons on the control panel to select a wash duration:
 - **1 min:** Quick wash for very lightly soiled items.
 - **5 min:** Standard wash for everyday items.
 - **10 min:** Thorough wash for more soiled items.
4. **Start Washing:** The machine will begin operating automatically after selecting the cycle. The turbo will rotate forward and backward alternately for effective cleaning.
5. **Drain Water:** Once the cycle is complete, unplug the machine and carefully tilt it to drain the water into a sink or bucket.

7. Spin Drying Function

To use the spin drying function:

1. After the wash cycle and draining the water, remove the clothes from the main tub.
2. Insert the provided draining basket into the machine.
3. Place the washed clothes into the draining basket. Ensure clothes are evenly distributed to prevent imbalance.
4. Close the lid and select a short wash cycle (e.g., 1 minute). The machine will spin the basket at high speed to remove excess water.
5. Once the spin cycle is complete, remove the clothes. They will be damp but significantly drier than after washing.

8. Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your washing machine:

- **After Each Use:** Drain all water completely. Wipe the interior and exterior surfaces with a soft, damp cloth.
- **Deep Cleaning:** Periodically, fill the machine with clean water and run a short cycle without clothes to rinse out any detergent residue.
- **Storage:** Ensure the machine is completely dry before folding and storing it in a cool, dry place.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the machine's surfaces.

9. Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

- **Machine does not start:**
 - Ensure the power adapter is securely plugged into both the machine and a working electrical outlet.
 - Check if the power outlet is functional by plugging in another appliance.

- **Washing performance is poor:**

- Do not overload the machine. Reduce the amount of clothing.
- Ensure sufficient water and detergent are used.
- Select a longer wash cycle if clothes are heavily soiled.

- **Machine is noisy or vibrates excessively:**

- Ensure the machine is placed on a stable, flat surface.
- During spin drying, ensure clothes are evenly distributed in the draining basket.

- **Water does not drain:**

- Ensure the machine is tilted sufficiently to allow water to flow out.
- Check for any obstructions in the drain opening.

If the problem persists, please contact customer support.

10. Specifications

Feature	Specification
Model Number	PH-211
Brand	Generic
Product Dimensions (Folded)	28 x 28 x 10 cm
Product Dimensions (Unfolded)	28 x 28 x 26 cm
Item Weight	1.5 kg
Capacity	0.8 kg (Washing), 1 Kilograms (Overall)
Motor Power	153W
Control Console	Knob / Push Button
Access Location	Top Load
Cycle Options	4 min, 5 min, 10 min
Color	Pink

11. Warranty and Support

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact the seller or manufacturer directly through the platform where the product was purchased.



EASY TO CARRY

THE SMALL SIZE AND FOLDING DESIGN MAKE THE MINI WASHING MACHINE EASIER TO CARRY AND CAN FIT MOST OF THE SCENES.



Image 4: The washing machine being used in different settings, highlighting its versatility and portability.

