

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola E202 DECT Phone Twin Handset User Manual

Motorola E202

Motorola E202 DECT Phone Twin Handset User Manual

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Motorola E202 DECT Phone Twin Handset system. Please read this guide thoroughly before using your new phone to ensure proper functionality and to familiarize yourself with all features.

PACKAGE CONTENTS

Your Motorola E202 Twin Handset package should contain the following items:

- Two (2) Motorola E202 DECT Handsets
- Two (2) Handset Charging Cradles
- One (1) Base Unit
- Two (2) Power Adapters (for base unit and one charging cradle)
- One (1) Telephone Line Cord
- Four (4) AAA Rechargeable Batteries (two per handset)
- This User Manual

PRODUCT OVERVIEW

The Motorola E202 DECT Phone system consists of a base unit and two cordless handsets, designed for clear communication and ease of use.



Figure 1: The Motorola E202 Twin DECT Handset system, showing both handsets docked in their respective charging cradles. The handsets feature an orange backlit monochrome display and a standard numeric keypad with function buttons.

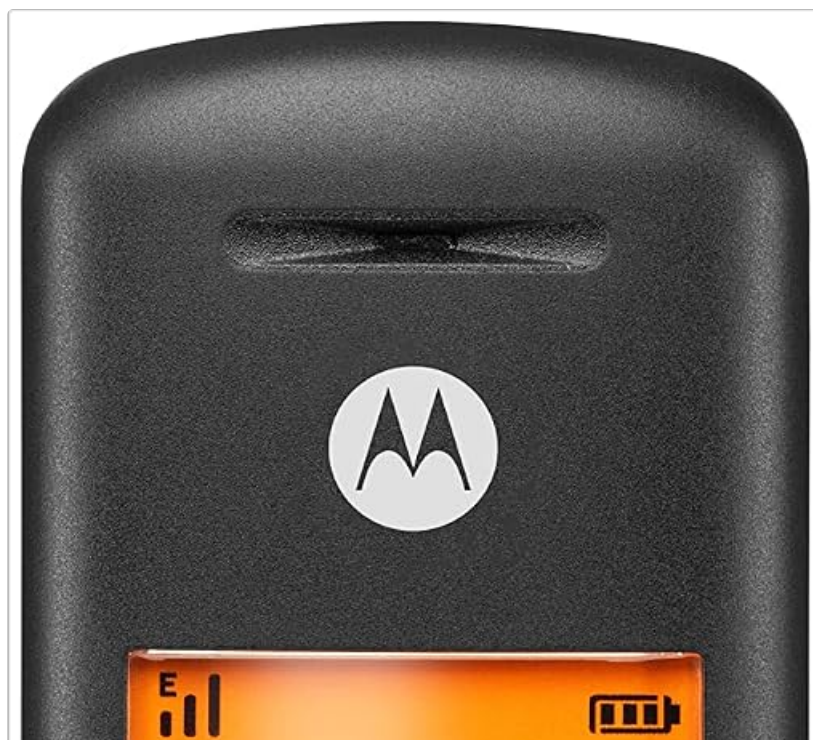




Figure 2: A close-up front view of a single Motorola E202 DECT Handset. This image highlights the orange backlit display, the speaker, microphone, and the layout of the keypad, including navigation and call control buttons.







Figure 3: A side profile view of a Motorola E202 DECT Handset, illustrating its ergonomic design and slim form factor. This view shows the general thickness and curvature of the handset.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of each handset.
2. Slide the cover off.
3. Insert the two supplied AAA rechargeable batteries into each handset, observing the correct polarity (+ and -).
4. Replace the battery compartment cover.

2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the TEL LINE socket on the base unit.
2. Connect the other end of the telephone line cord to your telephone wall socket.
3. Connect one power adapter to the POWER socket on the base unit.
4. Plug the power adapter into a mains power outlet.

3. Connecting the Second Charging Cradle

1. Connect the second power adapter to the POWER socket on the additional charging cradle.
2. Plug this power adapter into a separate mains power outlet.

4. Initial Charging

Place each handset into its respective charging cradle. The handsets will begin charging. For optimal battery performance, allow the handsets to charge for at least 16 hours before initial use.

5. Handset Registration

Your handsets are typically pre-registered to the base unit. If a handset displays 'Unregistered' or similar, you may need to manually register it. Refer to the full user guide for detailed registration steps if required.

OPERATING INSTRUCTIONS

Making a Call

1. Pick up a handset from its cradle or press the **CALL** button.
2. Dial the desired phone number.
3. Press the **CALL** button again to initiate the call.
4. To end the call, press the **END CALL** button or place the handset back in its cradle.

Receiving a Call

When the phone rings, press the **CALL** button on any handset to answer. To end the call, press the **END CALL** button or return the handset to its cradle.

Using the Phonebook

The Motorola E202 features a 50 name and number phonebook. To access:

1. Press the **MENU/OK** button.
2. Navigate to 'Phonebook' using the arrow keys and press**MENU/OK**.
3. You can add, edit, or delete entries. To dial from the phonebook, select the desired entry and press the**CALL** button.

Hands-free Speakerphone

During a call, press the**SPEAKER** button to activate the hands-free speakerphone function. Press it again to return to normal handset mode.

Caller ID and Call Waiting

If subscribed to Caller ID service, the caller's number (and name, if available) will be displayed before you answer. If subscribed to Call Waiting, you will hear a tone if another call comes in while you are on the phone. Press the **FLASH** button (or equivalent) to switch between calls.

MAINTENANCE

Cleaning

Wipe the handsets and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the phone is disconnected from power before cleaning.

Battery Care

- Use only the supplied rechargeable AAA batteries.
- Do not dispose of batteries in a fire.
- If the phone will not be used for an extended period, remove the batteries from the handsets.

TROUBLESHOOTING

Problem	Possible Solution
No dial tone	Ensure the base unit is connected to the telephone line and power. Check if the handset is registered to the base.
Cannot make or receive calls	Check all connections. Ensure batteries are charged. Verify telephone line service.
Handset display is blank or 'Unregistered'	Place the handset in its charging cradle to charge. If 'Unregistered' persists, refer to the full user guide for handset registration steps.
Poor call quality or static	Move closer to the base unit. Ensure no other electronic devices are interfering with the signal.

SPECIFICATIONS

- **Brand:** Motorola
- **Model:** E202
- **Type:** DECT Digital Cordless Phone Twin Handset
- **Color:** Black

- **Material:** Plastic
- **Phonebook Capacity:** 50 Names and Numbers
- **Features:** Hands-free Speakerphone, Caller ID/Call Waiting
- **Batteries:** 4 x AAA rechargeable batteries (included)
- **Standby Time:** Up to 200 hours
- **Answering System:** Digital (Note: Feature availability may depend on region/model variant)

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your point of purchase. For technical support or further assistance, please visit the official Motorola support website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question