



[Manuals.plus](#) /

› [TIMBER RIDGE](#) /

› Timber Ridge TR-HM-047 Hammock Camping Chair Instruction Manual

TIMBER RIDGE TR-HM-047

Timber Ridge TR-HM-047 Hammock Camping Chair Instruction Manual

Model: TR-HM-047

INTRODUCTION

Thank you for choosing the Timber Ridge TR-HM-047 Hammock Camping Chair. This chair is designed to provide comfort and convenience for various outdoor activities such as camping, beach trips, lawn relaxation, picnics, and patio use. Its robust construction and thoughtful features ensure a relaxing experience. Please read this manual thoroughly before setup and use to ensure proper operation and longevity of your product.



Image: The Timber Ridge Hammock Camping Chair in Grey, showcasing its overall design.

SETUP INSTRUCTIONS

The Timber Ridge Hammock Camping Chair is designed for quick and easy setup. Follow these steps to assemble your chair:

1. **Unpack the Chair:** Remove the chair frame and fabric from the included portable carry bag.
2. **Unfold the Frame:** Hold both side support poles of the steel frame and pull them outward until you hear a "click." This indicates the auto-lock system has engaged, ensuring stability.
3. **Attach the Hammock Seat:** Locate the metal carabiner clips on the hammock fabric. Hook these clips onto the designated attachment points on the top of the unfolded frame. Ensure both clips are securely fastened.
4. **Attach Headrest Cushion:** The padded headrest cushion attaches to the top of the hammock seat for added comfort.



Image: A visual guide demonstrating the two-step process of unfolding the chair frame and folding it back for storage, highlighting the safety auto-locker mechanism.

Video: Official product video demonstrating the setup and adjustable features of the Timber Ridge Hammock Camping Chair.

OPERATING INSTRUCTIONS

Your Timber Ridge Hammock Camping Chair offers adjustable comfort and convenient features:

- **Adjustable Backrest:** The seat angle can be adjusted between 90-130 degrees. Use the straps on the side of the hammock seat to modify the recline to your preferred position for sitting upright or lounging.
- **Cup Holder:** A built-in cup holder is located on the side of the chair frame. It is adjustable to fit various beverage sizes, keeping your drinks secure and within easy reach.
- **Side Storage Bag:** Utilize the integrated side storage bag to keep small essentials like your phone, book, or snacks conveniently close.

Comfortable High Back Padded Headrest



Image: A person demonstrating the adjustable seat angle feature of the hammock chair, showing positions from 90 to 130 degrees.



Image: Detailed views of the cup holder, side storage bag, and the durable 600D Oxford fabric with quilted pattern.

MAINTENANCE

To ensure the longevity and optimal performance of your Timber Ridge Hammock Camping Chair, follow these simple maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth. For stubborn stains, use a mild soap solution and rinse thoroughly. Allow to air dry completely before folding and storing.
- **Storage:** When not in use, fold the chair and store it in its carry bag in a dry, cool place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all frame connections, fabric, and straps for any signs of wear or damage. Replace any damaged components immediately to ensure safety.

TROUBLESHOOTING

If you encounter any issues with your Timber Ridge Hammock Camping Chair, refer to the following common solutions:

- **Chair feels unstable:** Ensure the steel frame is fully extended and the auto-lock system has clicked into place

on all legs. Verify that the chair is placed on a flat, stable surface.

- **Difficulty folding/unfolding:** Press and hold the yellow latch mechanism on the frame while gently pushing or pulling the poles to fold or unfold. Do not force the mechanism.
- **Hammock seat not hanging correctly:** Check that both carabiner clips are securely attached to the frame's designated points and that the straps are not twisted.
- **Discomfort during use:** Adjust the backrest straps to find your most comfortable recline angle. Ensure the headrest cushion is properly positioned.

SPECIFICATIONS

Brand	TIMBER RIDGE
Model Name	TR-HM-047
Color	Grey
Material	Polyester, Foam (Fill Material)
Frame Material	Alloy Steel
Product Dimensions (D x W x H)	32"D x 28"W x 50"H
Item Weight	15 Pounds
Maximum Weight Recommendation	300 Pounds
Adjustable Seat Angle	90-130 degrees
Seat Width	26 inches
Included Components	Hammock Chair, Carry Bag, Headrest Cushion
Number of Cup Holders	1
Indoor/Outdoor Usage	Outdoor
Foldable	Yes

WARRANTY INFORMATION

This Timber Ridge Hammock Camping Chair comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. Please retain your proof of purchase for any warranty claims. For detailed terms and conditions, refer to the product packaging or contact customer support.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Timber Ridge Hammock Camping Chair, please contact Timber Ridge customer support through their official website or the contact information provided on your product packaging. You can also visit the [TIMBER RIDGE Store on Amazon](#) for more information and product resources.