

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AlfaBot](#) /
- › [AlfaBot WS-24 Cordless Electric Spin Mop Instruction Manual](#)

AlfaBot WS24

AlfaBot WS-24 Cordless Electric Spin Mop Instruction Manual

Model: WS-24 | Brand: AlfaBot

1. INTRODUCTION



Image: The AlfaBot WS-24 Cordless Electric Spin Mop with included mop pads.

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your AlfaBot WS-24 Cordless Electric Spin Mop. Please read this manual thoroughly before first use and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Electric Mop Unit
- Handle
- Extendable Pipe
- AC Adapter
- Measuring Cup

- Mop Pads (Grey and White types)
- User Manual

Package Contents



Image: All components included in the AlfaBot WS-24 Electric Spin Mop package, including the mop unit, handle, extendable pipe, AC adapter, measuring cup, and various mop pads.

3. SETUP AND ASSEMBLY

- 1. Attach the Handle:** Connect the handle to the extendable pipe. Ensure it clicks securely into place.
- 2. Attach the Extendable Pipe:** Connect the assembled handle and pipe to the main mop unit.
- 3. Adjust Length:** The handle length can be adjusted from 37.4 inches to 48.4 inches. Press the adjustment button on the extendable pipe and slide it to your desired height. Release the button to lock.



Image: Illustration of the adjustable handle length, showing minimum (37.4") and maximum (48.4") heights for comfortable use.

4. **Attach Mop Pads:** Secure the desired mop pads to the bottom of the mop head using the hook-and-loop fasteners. Two types of pads are included: grey for daily cleaning and waxing, and white for deep cleaning and hair removal.

2 Types of Mop Pads




4 in 1:

- ✓ wet wiping
- ✓ dry wiping
- ✓ floor waxing
- ✓ spot cleaning

Grey mopping pads:

used for daily cleaning and floor waxing.

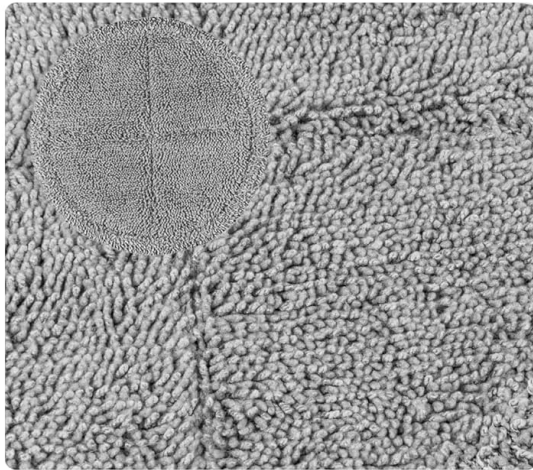

White mopping pads:

used for deep cleaning and cleaning hair.

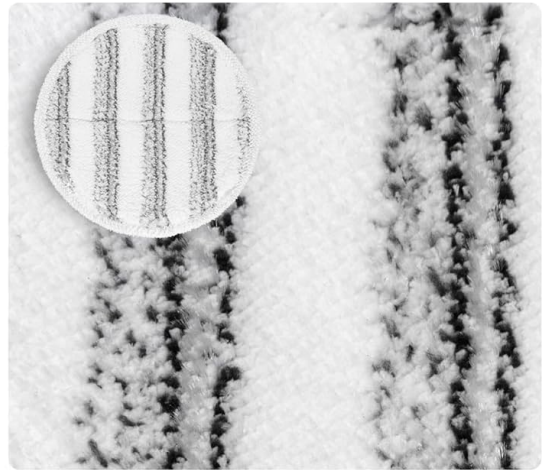


Image: Close-up of the two types of mop pads (grey and white) and how they attach to the mop head, detailing their specific uses.

5. **Initial Charging:** Before first use, fully charge the mop for approximately 4 hours using the provided AC adapter. The charging indicator light will change when fully charged. A full charge provides 40-50 minutes of run time.

Lithium Battery for Cordless Use



Image: The mop connected to its charger, illustrating the 4-hour charging time and 50-minute run time.


4. OPERATING INSTRUCTIONS

1. **Fill Water Tank:** Open the water tank cap and use the measuring cup to fill the 180ml tank with clean water or a suitable floor cleaning solution. Do not overfill.
2. **Power On:** Press the power button on the handle to start the mop. The dual spin heads will begin rotating at 150 revolutions per minute.




Powerful Spin Head

High-speed rotation of 150 r/min

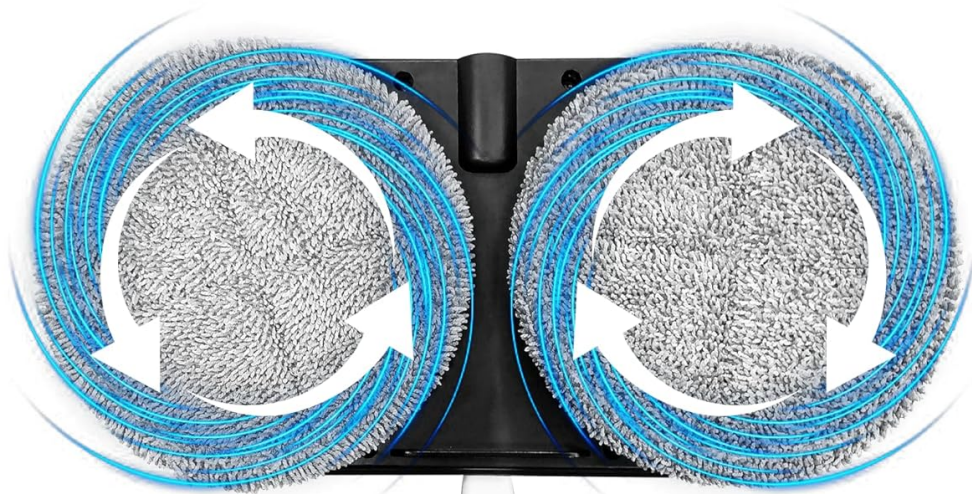

Before Cleaning

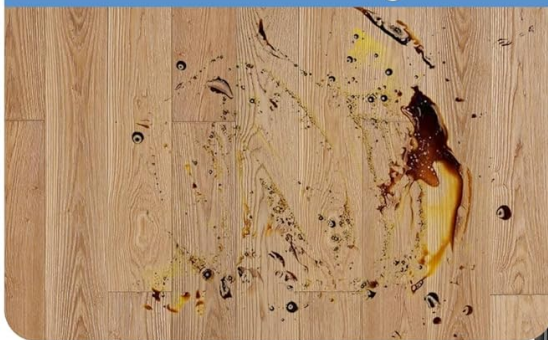




After Cleaning



Image: Diagram showing the dual spin heads rotating at 150 r/min, with before and after cleaning examples on a wooden floor.

3. **Water Spray Function:** Press the water spray button on the handle to dispense water or cleaning solution onto the floor. This is useful for wet cleaning and tackling stubborn stains.
4. **LED Headlight:** The integrated LED headlight illuminates the cleaning path, making it easier to see dirt and debris in dark areas, under furniture, or in corners.

Water Spray & LED Light

-  One click water spray
-  180mL water tank
-  Attached measuring cup




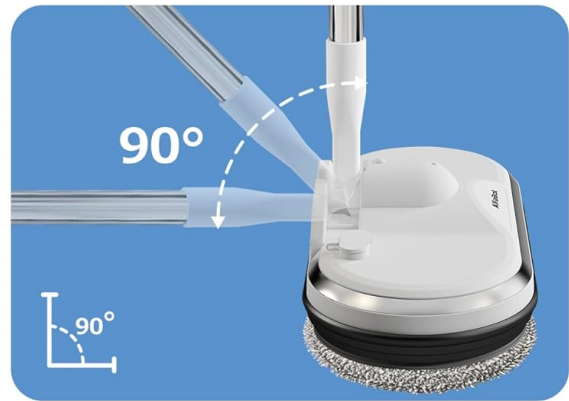
-  You can easily clean even dark places



Image: The mop demonstrating its water spray function and the LED headlight illuminating the floor in a dark area.

- Maneuvering:** The mop is designed to be self-propelled. Guide it gently across the floor. The mop head can swivel 180° horizontally and 90° vertically, allowing access to hard-to-reach spaces and under furniture.

Swivel Steering Self-propelled



Adjustable angles to meet the different need



Image: Illustrations showing the mop head's 180-degree horizontal swivel and 90-degree vertical pivot, demonstrating its ability to clean under low furniture.


6. **Suitable Floor Types:** This electric mop is suitable for various hard floor surfaces, including hardwood, tile, laminate, marble, and vinyl.

For Various Floor Cleaning

By developing a cleaning habit,
you can keep your home clean and comfortable.



Foot
prints

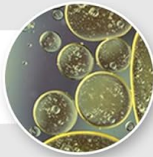

Sebum
stains



Dust



Invisible
bacteria

Wooden floor

Marble floor

Tile floor



Image: Visual representation of the mop cleaning different floor types (wooden, marble, tile) and removing various stains like footprints, sebum, dust, and bacteria.

7. **Power Off:** Press the power button again to turn off the mop.

5. MAINTENANCE

- **Clean Mop Pads:** After each use, remove the mop pads and wash them. They are reusable and can be machine washed.
- **Empty Water Tank:** Empty any remaining water or cleaning solution from the tank after each use to prevent residue buildup.
- **Wipe Down Unit:** Use a damp cloth to wipe the exterior of the mop unit to remove any dirt or dust. Do not immerse the unit in water.
- **Storage:** Store the mop in a dry place. The mop is designed to be self-standing for convenient storage.

6. TROUBLESHOOTING

If you encounter issues with your AlfaBot WS-24 Mop, please refer to the following common solutions:

- **Mop Not Turning On:**
 - Ensure the battery is fully charged.

- Check that all components (handle, extendable pipe, mop unit) are securely connected.

- **Water Spray Not Working:**

- Verify the water tank is filled.
- Check for any blockages in the spray nozzle.

- **Reduced Spinning Power:**

- The battery may be low; recharge the unit.
- Ensure mop pads are clean and not excessively saturated or clogged with debris.

- **Mop Leaking:**

- Ensure the water tank cap is securely closed.
- Do not overfill the water tank.

If problems persist, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	AlfaBot
Model Name	WS-24
Special Features	Cordless, Lightweight, Water Spray, LED Headlight
Surface Recommendation	Hardwood Floor, Tile Floor, Laminate, Marble, Vinyl
Wattage	30 watts
Item Weight	1.6 Kilograms (3.52 pounds)
Water Tank Volume	180 Milliliters
Power Source	Battery Powered (1 Lithium Ion battery included)
Voltage	3.7 Volts (AC)
Product Dimensions	12.99"D x 6.3"W x 48.82"H
Assembly Required	Yes

8. WARRANTY INFORMATION

The AlfaBot WS-24 Cordless Electric Spin Mop comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in your package or contact AlfaBot customer support.





9. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact AlfaBot customer support. You can find contact information on the official AlfaBot website or through the retailer where you purchased the

product.

Please visit the [AlfaBot Store](#) for more information and products.

Related Documents - WS24

 <p>AlfaBot WINDOW CLEANING ROBOT WITH DUAL SPRAY</p> <p>User Manual for AlfaBot GLS400</p>	<p>AlfaBot GLS400 Window Cleaning Robot User Manual</p> <p>Comprehensive user manual for the AlfaBot GLS400 window cleaning robot, detailing features, specifications, safety precautions, operation, maintenance, and troubleshooting.</p>
 <p>AlfaBot Automatic Nut Milk Maker N1</p> <p>User Manual for AlfaBot N1</p>	<p>AlfaBot N1 Automatic Nut Milk Maker User Manual How to Use & Troubleshooting</p> <p>Comprehensive user manual for the AlfaBot N1 Automatic Nut Milk Maker. Learn about safety precautions, product parts, operation, maintenance, troubleshooting, FAQs, and warranty.</p>
 <p>AlfaBot Window Cleaning Robot - Dual Ultrasonic Spray</p> <p>User Manual for AlfaBot GLS400</p>	<p>AlfaBot GLS400 Window Cleaning Robot User Manual</p> <p>Comprehensive user manual for the AlfaBot GLS400 window cleaning robot, covering safety precautions, product features, technical specifications, operation instructions, maintenance, and troubleshooting.</p>
 <p>AlfaBot WINDOW CLEANING ROBOT WITH DOUBLE-SIDED WATER SPRAY USER MANUAL</p> <p>AlfaBot X8</p>	<p>AlfaBot X8 Window Cleaning Robot User Manual</p> <p>User manual for the AlfaBot X8 window cleaning robot with double-sided water spray, covering safety instructions, product information, technical specifications, remote control operation, steps for usage, cleaning tips, maintenance, troubleshooting, and warranty.</p>
 <p>AlfaBot WINDOW CLEANING ROBOT WITH DUAL WATER SPRAY USER MANUAL</p> <p>AlfaBot X7 Pro</p>	<p>AlfaBot X7 Pro Window Cleaning Robot User Manual</p> <p>Comprehensive user manual for the AlfaBot X7 Pro window cleaning robot, detailing safety instructions, product features, operation, maintenance, and troubleshooting. Learn how to use and care for your automatic window cleaner.</p>

AlfaBot

Window Cleaning Robot

USER MANUAL



User Manual of AlfaBot X7 Window Cleaning Robot

[AlfaBot X7 Window Cleaning Robot User Manual](#)

User manual for the AlfaBot X7 Window Cleaning Robot, covering safety instructions, product features, usage steps, troubleshooting, and specifications.