

Eueasy BG-CL3M3-306L01

Eueasy LED Net Lights User Manual

Model: BG-CL3M3-306L01

Brand: Eueasy

1. INTRODUCTION

The Eueasy LED Net Lights are designed to illuminate your outdoor spaces with ease and versatility. Featuring 270 warm white LEDs across a 10x10FT mesh, these lights are perfect for enhancing gazebos, bushes, and various holiday or event decorations. The product includes a 16.4 ft lead cable for flexible placement and offers multiple lighting modes, a convenient timer function, and connectable design for expanded coverage.

Key features include:

- Net Lights Outdoor Mesh Lights: 10FT×10FT net with 270 LED, 16.4 ft lead cable.
- 8 Lighting Modes and Connectable: Offers various lighting effects and allows connection of up to 3 sets.
- Timer and Memory Function: 6 hours ON / 18 hours OFF cycle with memory of preferred setting.
- Wide range of Applications: Suitable for festivals, parties, gazebos, shrubs, weddings, and balconies.

2. PACKAGE CONTENTS

Ensure all items are present before beginning installation:

- 1 x Eueasy LED Net Lights (10x10FT, 270 LED)
- 1 x Power Adapter
- 1 x User Manual

3. SETUP AND INSTALLATION

These net lights are designed for easy installation. The flexible mesh can be draped over various structures or foliage.

Size of Net Lights

16.4 FT
Leads

Connectable
3 sets

10 FT

10 FT



Figure 3.1: Dimensions of the 10x10FT net lights with a 16.4FT lead cable.

The net lights feature a clear wire design, making them blend seamlessly with their surroundings. They are also designed to be tangle-free for easier deployment.

CONNECTABLE

up to 3 sets of Net Lights can be linked together



Figure 3.2: Up to 3 sets of Eueasy LED Net Lights can be connected together to cover larger areas.

For installation, simply unroll the net lights and position them as desired. The integrated design allows for easy attachment to structures using ties or clips (not included). Ensure the power adapter is connected to a suitable outdoor power outlet, as the unit is raintight (IP44 rated).

Your browser does not support the video tag.

Video 3.1: Demonstration of Eueasy LED Net Lights being installed and used outdoors on a gazebo, showcasing their warm white glow and ease of setup.

Your browser does not support the video tag.

Video 3.2: Example of Eueasy LED Net Lights being used to decorate bushes for a festive outdoor display, highlighting their suitability for various foliage.

4. OPERATING INSTRUCTIONS

The Eueasy LED Net Lights offer 8 distinct lighting modes and a convenient timer function, controlled directly from the power adapter.



Figure 4.1: Power adapter with control button for cycling through lighting modes.

4.1 Lighting Modes

Press the button on the power adapter to cycle through the following 8 lighting modes:

1. Steady On
2. In Waves
3. Sequential
4. SLO-GLO
5. Chasing/Flash
6. Slow Fade
7. Twinkle/Flash
8. Combination (cycles through all modes)

4.2 Timer Function

To activate the timer function, long-press the button on the power adapter for 3 seconds. A green light will illuminate, indicating the timer is active. The lights will then operate on a 6-hour ON / 18-hour OFF cycle, automatically turning on at the same time each day and remembering your last selected lighting mode.

Timing settings



Figure 4.2: Activating the timer function by long-pressing the button.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Eueasy LED Net Lights, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the lights and wires with a soft, damp cloth to remove dust and debris. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, especially during off-seasons or extreme weather, carefully coil the net lights and store them in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect the wires and LED bulbs for any signs of damage, fraying, or loose connections. Discontinue use if any damage is found.

6. TROUBLESHOOTING

If you encounter issues with your Eueasy LED Net Lights, try the following troubleshooting steps:

- **Lights not turning on:**
 - Ensure the power adapter is securely plugged into a working electrical outlet.
 - Check if the outlet is receiving power (test with another device).
 - Verify that the timer function is not active and set to an "off" period. Long-press the button to reset or deactivate the timer.
- **Lights flickering or dim:**
 - Check all connections, especially if multiple sets are connected. Ensure they are tight and secure.
 - Inspect the wiring for any visible damage or kinks.
- **Modes not changing:**
 - Press the control button firmly to cycle through the modes.
 - If the timer is active, it will remember the last mode. Try deactivating and reactivating the timer.

If these steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	BG-CL3M3-306L01
Dimensions	10 x 10 FT (Net), 16.4 FT (Lead Cable)
Number of LEDs	270
Light Color	Warm White
Power Source	Corded Electric
Voltage	29 Volts (DC)
Wattage	6 Watt-hours
Water Resistance Level	Waterproof (IP44)
Special Features	8 Lighting Modes, Timer Function (6h ON/18h OFF), Memory Function, Connectable (up to 3 sets)
Material	Plastic, Copper
Indoor/Outdoor Usage	Outdoor

8. WARRANTY AND SUPPORT

For any questions or concerns regarding your Eueasy LED Net Lights, please message us through Amazon for professional support. We are committed to ensuring your complete satisfaction with our product. Please retain your proof of purchase for warranty claims.

