



Manuals.plus /

› INFANS /

› INFANS Kid Kitchen Playset Instruction Manual - Model B0BB6HDSWM

INFANS B0BB6HDSWM

INFANS Kid Kitchen Playset Instruction Manual

Brand: INFANS | Model: B0BB6HDSWM

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your INFANS Kid Kitchen Playset. Designed for children aged 36 months to 10 years, this wooden pretend cooking set offers a realistic and engaging play experience with interactive features.

2. SAFETY INFORMATION

- This product is certified to ASTM standards, ensuring safety for children.
- Made of food-grade PP, FREE from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde.
- Features no sharp points or edges.
- Passed tests for stability, asphyxiation, load, and shear.
- Adult supervision is recommended during play.
- Keep small parts away from children under 3 years old during assembly to prevent choking hazards.

3. PACKAGE CONTENTS

Before assembly, please verify that all components listed below are present and undamaged. Refer to the assembly video for visual confirmation of parts.

- Wooden kitchen panels and hardware (screws, dowels, hinges, magnetic catches).
- Sink basin and faucet assembly.
- Stove top with light and sound features.
- Refrigerator ice dispenser unit.
- Play telephone.
- Adjustable leg extensions (4 pieces).
- Accessories: 1x Spoon, 1x Spade, 1x Spatula, 2x Stainless Steel Pots, 1x Telephone.

- Instruction manual.



Image: All components of the INFANS Kid Kitchen Playset laid out before assembly.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have a clear, spacious area for construction. A power drill with appropriate bits will expedite the process.

4.1. Watch the Assembly Video

Your browser does not support the video tag.

Video: Detailed assembly guide for the INFANS Kid Kitchen Playset. This video demonstrates each step of the construction process, from attaching panels to installing accessories.

4.2. Step-by-Step Assembly

1. **Prepare Panels:** Lay out all wooden panels and identify them using the labels. Ensure all pre-drilled holes are clear.
2. **Assemble Base Structure:** Connect the main base panels using the provided screws and dowels. Ensure a snug fit.
3. **Install Refrigerator Section:** Attach the side panels and shelves for the refrigerator unit. Secure the ice dispenser unit into its designated slot.
4. **Attach Doors and Handles:** Secure hinges to the refrigerator and cabinet doors. Attach the gold-colored handles and knobs to all doors and drawers.
5. **Construct Main Kitchen Unit:** Assemble the central kitchen section, including the stove area and sink base. Install the play telephone on the side panel.
6. **Place Countertop and Sink:** Insert the wooden countertop onto the main unit. Place the removable sink basin into its opening.
7. **Install Faucet and Hooks:** Secure the faucet assembly to the countertop. Screw in the utensil hooks above the sink area.
8. **Assemble Drawers:** Construct the two drawers by attaching the side panels to the front and back pieces, then secure the handles.
9. **Insert Drawers:** Slide the assembled drawers into their respective slots beneath the stove.
10. **Attach Leg Extensions:** For adjustable height, attach the wooden leg extensions to the bottom of the kitchen unit using the provided hardware. Then slide the gold-colored covers over the wooden legs.



Image: The fully assembled INFANS Kid Kitchen Playset, showcasing its various components and golden accents.

5. OPERATING INSTRUCTIONS

The INFANS Kid Kitchen Playset features several interactive elements to enhance imaginative play.

- **Stove Top:** Turn the golden knobs on the stove to activate realistic cooking sounds and lights. Place the included pots and pans on the burners for an immersive experience.
- **Ice Dispenser:** Press the button on the refrigerator's ice dispenser to hear ice-making sounds and see a light illuminate.
- **Telephone:** Pick up the golden telephone receiver to engage in pretend conversations.
- **Sink:** The sink basin is removable for easy cleaning. Children can pretend to wash dishes using the faucet.
- **Storage:** Utilize the various cabinets, shelves, and drawers to store play food and accessories, promoting organization skills.

Product Details



Wash Basin



Spin Button



Water Dispenser

Image: A detailed view of the stove's spinning knobs, the removable sink basin, and the realistic play telephone.

6. MAINTENANCE

To ensure the longevity and cleanliness of your playset:

- **Cleaning:** Wipe down all surfaces with a damp cloth. Avoid harsh chemical cleaners that may damage the finish. The sink can be easily removed for thorough cleaning.
- **Storage:** Store the playset in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading.
- **Hardware:** Periodically check all screws and connections to ensure they are tight. Retighten as necessary.

7. TROUBLESHOOTING

- **Lights/Sounds Not Working:** Ensure batteries are correctly installed and not depleted. Replace batteries if necessary. Check for any loose connections within the battery compartment.

- **Loose Parts:** If any parts become loose, gently tighten the corresponding screws. Do not overtighten.
- **Doors/Drawers Not Closing Properly:** Check hinges and magnetic catches for alignment. Adjust if needed. Ensure no objects are obstructing their movement.

8. SPECIFICATIONS

Product Dimensions	32 x 40 x 12 inches
Item Weight	35 pounds
Recommended Age	36 months - 10 years
Material	Quality MDF (Medium-Density Fiberboard)
Certifications	US. CPSIA & ASTM Approved
Color	Creamy White

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact INFANS customer service directly. Refer to the product packaging or the official INFANS website for contact details.

