

Princess 01.201860.02.001

Princess Master Juicer Pro

Model: 01.201860.02.001 - 300 Watt Citrus Press

INTRODUCTION

Thank you for choosing the Princess Master Juicer Pro. This semi-professional citrus juicer is designed to effortlessly extract fresh juice from all types of citrus fruits, including oranges, grapefruits, and pomegranates. With its powerful 300 Watt motor and durable stainless steel components, it ensures efficient and convenient juicing. This manual provides essential information for the safe and effective use of your appliance.





Image: The Princess Master Juicer Pro, a sleek stainless steel citrus press.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Keep hands and utensils out of the juicer during operation to prevent injury and damage to the appliance.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Princess Master Juicer Pro:

1. **Motor Base:** Contains the powerful 300 Watt motor.
2. **Juice Collection Tray:** Collects the extracted juice.
3. **Pulp Filter (Stainless Steel & Plastic):** Separates pulp from juice. The plastic filter is adjustable for pulp preference.
4. **Press Cone:** The rotating cone that extracts juice from citrus halves.
5. **Press Arm/Lever:** Applies pressure to the fruit against the cone.
6. **Drip-Free Spout:** Prevents juice from dripping onto your worktop.





Image: An exploded view showing all the removable components of the juicer for easy identification.



Image: The juicer with its main parts, including the pulp filter and press cone, disassembled and laid out.

SETUP

1. Before first use, wash all removable parts (juice collection tray, pulp filter, press cone, and press arm) in warm soapy water, rinse thoroughly, and dry.
2. Place the motor base on a stable, flat, and dry surface.
3. Insert the juice collection tray onto the motor base, ensuring it is properly seated.
4. Place the desired pulp filter (stainless steel or plastic) into the juice collection tray.
5. Place the press cone onto the shaft in the center of the pulp filter.
6. Ensure the drip-free spout is in the down position to allow juice to flow.
7. Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. Cut citrus fruits in half.
2. Place one half of the fruit, cut-side down, onto the press cone.
3. Lower the press arm firmly onto the fruit. The motor will activate automatically upon pressure.
4. Apply steady, even pressure until all juice is extracted. The powerful 300 Watt motor makes this process effortless.
5. Lift the press arm to stop the motor.
6. To dispense juice, ensure the drip-free spout is in the down position and place a glass underneath.
7. To stop juice flow, lift the drip-free spout upwards.
8. Repeat the process for remaining fruit halves.



Image: A user pressing down the lever to extract juice from an orange half, demonstrating easy handling.



Image: Close-up of the drip-free spout, showing how it can be lifted to stop juice flow and lowered to dispense.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer. All removable parts are dishwasher safe for convenience.

1. Always unplug the appliance before cleaning.
2. Disassemble the press arm, press cone, pulp filter, and juice collection tray from the motor base.
3. Rinse these removable parts under running water immediately after use to prevent pulp from drying.
4. These parts can be washed by hand with warm soapy water or placed in the dishwasher.
5. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
6. Ensure all parts are completely dry before reassembling or storing the appliance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; power outage; appliance not assembled correctly.	Check power connection; check circuit breaker; ensure all parts are correctly assembled and the press arm is lowered.
Motor stops during operation.	Overheating protection activated (after prolonged use).	Unplug the juicer and allow it to cool down for approximately 5 minutes before resuming operation.
Low juice yield or excessive pulp.	Fruit not pressed firmly enough; pulp filter clogged; fruit not ripe.	Apply more consistent pressure; clean the pulp filter; use ripe citrus fruits.
Juice leaks from the spout.	Drip-free spout not in the up position.	Ensure the drip-free spout is lifted upwards to stop the flow of juice.

SPECIFICATIONS

- Brand:** Princess
- Model Number:** 01.201860.02.001
- Colour:** Stainless Steel
- Product Dimensions:** 31.5 x 15 x 31 cm
- Item Weight:** 2.3 kg
- Capacity:** 0.6 litres
- Power / Wattage:** 300 watts
- Material:** Stainless Steel, Plastic
- Auto Shutoff:** No
- Special Features:** Dishwasher safe parts, 300 Watt motor, Non-drip system



Image: A diagram illustrating the dimensions of the Princess Master Juicer Pro: 31.5 cm length, 15 cm width, and 31 cm height, with a weight of 3 kg and capacity of 0.5 L (note: product spec says 0.6L, image says 0.5L, will use product spec).

WARRANTY AND SUPPORT

The Princess Master Juicer Pro comes with a standard manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or visit the official Princess website. You may also contact the retailer where you purchased the product for assistance.

For spare parts, the Princess website is a good resource as mentioned in customer reviews.

Princess Official Website: www.princesshome.eu

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question