

Manuals.plus /

- › Haunted Hill Farm /
- › Haunted Hill Farm Soul Sucker Demon Reaper with Child Animatronic Instruction Manual

**Haunted Hill Farm HHLSUCKR-FLSA**

# Haunted Hill Farm Soul Sucker Demon Reaper with Child Animatronic Instruction Manual

Model: HHLSUCKR-FLSA

## 1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Haunted Hill Farm Soul Sucker Demon Reaper with Child animatronic. This motion-activated, talking Halloween decoration is designed for indoor or covered outdoor use.





Image 1.1: The Soul Sucker Demon Reaper with Child animatronic.

## 2. SAFETY INFORMATION

---

- **Adult Assembly Required:** This product contains small parts and requires adult assembly.
- **Indoor/Covered Outdoor Use:** This animatronic is designed for indoor use or covered outdoor areas protected from direct weather exposure. It is not waterproof.
- **Electrical Safety:** Use only the provided UL plug-in adapter. If using batteries, ensure they are correctly inserted and of the specified type (4 AA batteries, not included). Do not mix old and new batteries or different types of batteries.
- **Stability:** The animatronic can be top-heavy. Ensure it is placed on a stable, level surface. Consider adding weights to the bottom frame for increased stability, especially if placed on a slight incline.
- **Choking Hazard:** Keep small parts and packaging materials away from children.
- **Moving Parts:** Keep hands, hair, and loose clothing away from moving parts during operation.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly:

- Metal stand
- Fabric stand cover
- Snap lock poles
- Waist bracket & module
- Left arm
- Right arm
- Head & cape
- Girl body & fog hose
- Fog bracket
- Fog cord
- Fog cord adapter
- Fog diffuser
- 6V 2A DC adapter
- Instruction manual (this document)
- Warranty information

## 4. ASSEMBLY AND SETUP

---

Assembly is designed to be straightforward, with parts often labeled for easy matching. Refer to the detailed PDF user manual for step-by-step diagrams and instructions: [Download PDF User Manual](#).

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Frame:** Connect the snap lock poles to form the main frame. Ensure all connections are secure. Parts are typically labeled (e.g., "A" to "A") for correct alignment.
3. **Attach Waist Bracket and Module:** Secure the waist bracket and module to the assembled frame.
4. **Attach Limbs and Head:** Connect the left arm, right arm, head, and cape. The top half of the animatronic is bulky and may require assistance during attachment.
5. **Position Girl Body:** Attach the girl body and its integrated fog hose.
6. **Install Fabric Cover:** Drape the fabric stand cover over the frame.
7. **Power Options:**
  - **Plug-in:** Connect the 6V 2A DC adapter to the animatronic and a power outlet.
  - **Battery Operated:** Insert 4 AA batteries (not included) into the designated battery compartment.
8. **Fog Machine Connection (Optional):**
  - Attach the fog bracket, fog cord, fog cord adapter, and fog diffuser.
  - If connecting to an external fog machine, ensure the fog machine has a remote control port compatible with the animatronic's relay box for synchronized operation. The provided clamp for the fog hose may not fit all fog machine nozzles; alternative securing methods may be necessary.
9. **Ensure Stability:** Place the assembled animatronic on a flat, stable surface. Due to its top-heavy design, consider placing weights on the base to prevent tipping.



Image 4.1: Animatronic dimensions and power options.

## 5. OPERATING INSTRUCTIONS

The Soul Sucker Demon Reaper animatronic features motion and sound activation to engage visitors.


- **Activation:** The animatronic is activated by motion or loud noises in its vicinity.
- **Movement:** Upon activation, the animatronic performs its programmed movements.
- **Sound:** It speaks the phrase: *"Look at me, just as all the others have. Now that I have you, your soul will be mine forever."* A villainous laugh follows.
- **Lighting:** Green LED lights illuminate the animatronic's eyes and the child figure's mouth during operation.
- **Volume Control:** Adjust the volume of the spoken phrases and sound effects using the control dial located on the animatronic's module.



**SPEAKS PHRASES**



**MOVEMENT**

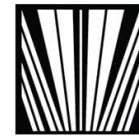

**LIGHTS UP**  
green LED lights



**BATTERY OR PLUG-IN**

4 AA batteries  
(not included)

Image 5.1: Key operational features of the animatronic.

## 6. MAINTENANCE

- **Cleaning:** Spot clean the fabric and plastic components as needed. Do not immerse the animatronic in water.
- **Storage:** When not in use, disassemble the animatronic and store it in its original packaging or a protective container in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If using batteries, replace all 4 AA batteries when performance diminishes. Remove batteries during long periods of non-use to prevent leakage.
- **Cord Inspection:** Regularly inspect the power adapter and cords for any damage. Discontinue use if damage is found.

## 7. TROUBLESHOOTING

- **Animatronic Not Activating:**
  - Ensure the power adapter is securely plugged into both the animatronic and a working outlet, or that fresh batteries are correctly installed.
  - Check the power switch is in the "ON" position.

- Verify the motion sensor is not obstructed and is positioned to detect movement.
- **Movement Issues (e.g., partial movement, spring issues):**
  - Inspect for any obstructions in the moving parts.
  - Check for disconnected springs or linkages. If a spring is disconnected, carefully reattach it if possible, or contact customer support.
  - Ensure all assembly connections are tight and correctly aligned.
- **No Sound or Distorted Sound:**
  - Check the volume control dial and adjust as necessary.
  - Ensure power supply is adequate.
- **Fog Machine Connection Difficulties:**
  - If the provided fog hose clamp does not fit your fog machine, you may need to use an alternative method to secure the hose, such as zip ties or duct tape, ensuring a tight seal for effective fog dispersal.
  - Confirm your fog machine has a remote control port compatible with the animatronic's relay box for synchronized operation.
- **Animatronic Tipping:**
  - Ensure the animatronic is on a completely flat and stable surface.
  - Add additional weights to the base of the stand to improve stability, especially in areas with potential drafts or uneven ground.

## 8. SPECIFICATIONS

<b>Model Number</b>	HHLSUCKR-FLSA
<b>Brand</b>	Haunted Hill Farm
<b>Product Dimensions (D x W x H)</b>	27" x 31" x 74.5"
<b>Item Weight</b>	17.6 Pounds
<b>Material</b>	Metal, Foam, Plastic, Polyester
<b>Power Source</b>	6V 2A DC Adapter (included) or 4 AA Batteries (not included)
<b>Recommended Use</b>	Indoor, Covered Outdoor
<b>UPC</b>	840148719828

## 9. WARRANTY AND SUPPORT

**Warranty:** This Haunted Hill Farm product comes with a 1-year limited warranty. Please retain your proof of purchase for warranty claims.

**Customer Support:** For technical assistance, missing parts, or warranty inquiries, please contact Haunted Hill Farm customer service. Refer to the contact information provided with your purchase or visit the official Haunted Hill Farm website for support details.

For additional information and product details, you may visit the [Haunted Hill Farm Store on Amazon](#).

