

[manuals.plus](#) /› [Kapbom](#) /› [Kapbom KA8001 Portable Bluetooth Speaker with LED Handle User Manual](#)

Kapbom KA8001

Kapbom KA8001 Portable Bluetooth Speaker

USER MANUAL

1. Introduction

Thank you for choosing the Kapbom KA8001 Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The Kapbom KA8001 is a versatile portable speaker featuring Bluetooth connectivity, a USB port, a Micro SD card slot, and an integrated LED handle, designed for convenient audio playback from various sources.

2. Safety Information

- Do not expose the speaker to water, moisture, or rain. This product is not waterproof.
- Avoid extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the device. This may void the warranty and pose safety risks.
- Keep the speaker away from heat sources, such as radiators, stoves, or other heat-producing appliances.
- Use only the specified charging voltage (DC 5V) and compatible charging cables.
- Keep out of reach of children.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. Package Contents

Please check that all items are present in your package:

- Kapbom KA8001 Portable Bluetooth Speaker
- USB Charging Cable
- User Manual

4. Product Overview

The Kapbom KA8001 is a compact and portable speaker designed for ease of use and quality audio. It features a robust design with an integrated handle for transport and LED lighting for visual appeal.



Figure 4.1: Front view of the Kapbom KA8001 speaker with a smartphone in the integrated holder.

Its compact dimensions make it ideal for travel and outdoor activities.



Bluetooth



Figure 4.2: Dimensions of the Kapbom KA8001 speaker, approximately 14 cm in height and 8 cm in depth.

5. Controls and Ports

Familiarize yourself with the various controls and connection ports on your speaker:



Figure 5.1: Rear panel connections: Micro USB (DC 5V), TF Card slot, USB port, and On/Off switch.

- **DC 5V (Micro USB):** Charging port for the speaker.
- **TF (Micro SD) Card Slot:** Insert a Micro SD card for direct audio playback.
- **USB Port:** Insert a USB flash drive for direct audio playback.
- **ON/OFF Switch:** Powers the speaker on or off.



Figure 5.2: Top panel control buttons.

- **M (Mode) Button:** Press to switch between Bluetooth, USB, and Micro SD modes.
- **Play/Pause Button (▶||):** Press to play or pause audio. In Bluetooth mode, press and hold to disconnect.
- **Volume Down / Previous Track Button (-):** Press to decrease volume. Press and hold to go to the previous track.
- **Volume Up / Next Track Button (+):** Press to increase volume. Press and hold to go to the next track.

6. Setup

6.1 Initial Charging

1. Before first use, fully charge the speaker.
2. Connect the small end of the USB charging cable to the DC 5V (Micro USB) port on the speaker.

3. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light (if present) will illuminate during charging and turn off when fully charged.

6.2 Powering On/Off

- To power on, slide the **ON/OFF** switch to the "ON" position. The speaker will emit an audible prompt and enter Bluetooth pairing mode.
- To power off, slide the **ON/OFF** switch to the "OFF" position.

7. Operating Instructions

7.1 Bluetooth Mode

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by an audible prompt or LED). If not, press the **M (Mode)** button to switch to Bluetooth mode.
2. Enable Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for available Bluetooth devices. The speaker will appear as "KA8001" or similar.
4. Select "KA8001" to pair. Once paired, the speaker will emit a confirmation sound.
5. You can now play audio from your device through the speaker.
6. Use the speaker's **Play/Pause**, **Volume Up/Next**, and **Volume Down/Previous** buttons to control playback.

7.2 USB / Micro SD Card Mode

1. Insert a USB flash drive into the **USB Port** or a Micro SD card into the **TF Card Slot**.
2. The speaker will automatically detect the storage device and switch to USB or Micro SD mode, beginning playback of compatible audio files. If it does not switch automatically, press the **M (Mode)** button to select the correct mode.
3. Use the **Play/Pause**, **Volume Up/Next**, and **Volume Down/Previous** buttons to control playback.

7.3 LED Lighting

The speaker features integrated LED lighting. The lighting typically activates automatically when the speaker is powered on. Specific controls for the LED lighting are not detailed in the product information, but it usually cycles through patterns or colors automatically.

8. Charging

When the battery is low, the speaker may emit an audible warning. To charge:

1. Connect the USB charging cable to the speaker's DC 5V (Micro USB) port.
2. Connect the other end of the cable to a 5V USB power source.
3. A full charge takes approximately 2.5 hours.
4. Do not use the speaker while it is charging to ensure optimal battery life and safety.

9. Maintenance

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the speaker's exterior. Do not use liquid cleaners,

aerosols, or solvents.

- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.

10. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is discharged.	Charge the speaker fully.
Cannot connect via Bluetooth.	Bluetooth is not enabled on your device or speaker is not in pairing mode.	Ensure Bluetooth is active on both devices. Press the Mode button on the speaker to enter Bluetooth pairing mode. Ensure devices are within range.
No sound from USB/Micro SD.	Incorrect mode selected, incompatible file format, or corrupted media.	Press the Mode button to select the correct input. Ensure audio files are in a compatible format (e.g., MP3). Try a different USB drive or Micro SD card.
Low volume or distorted sound.	Volume too low on speaker or source device, or speaker is too far from source.	Increase volume on both the speaker and the connected device. Move the speaker closer to the source device.

11. Specifications

Feature	Detail
Brand	Kapbom
Model	KA8001
Connectivity Technology	Bluetooth
Compatible Devices	Smartphones, Tablets, Music Players
Audio Output Mode	Stereo
Maximum Speaker Output Power	8 Watts
Subwoofer Diameter	4 Centimeters
Control Method	Integrated Buttons

Feature	Detail
Special Features	USB Port, Micro SD Card Slot, LED Lighting, Portable Handle
Average Battery Life	2.5 Hours
Product Weight	330 g
Package Dimensions	15.7 x 11.9 x 9 cm
Waterproof	No

12. Warranty and Support

Kapbom products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the documentation provided with your purchase or visit the official Kapbom website.

Please retain your proof of purchase for any warranty claims.

© 2023 Kapbom. All rights reserved.

Related Documents - KA8001

	<p>Catálogo 2024 Uniatacado - Aforte Minas Representações</p> <p>Explore o catálogo 2024 da Uniatacado, apresentado pela Aforte Minas Representações. Descubra uma ampla gama de caixas de som Bluetooth, smartwatches e acessórios eletrônicos de marcas renomadas.</p>
--	--