

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [NutriBullet](#) /

> [NutriBullet GO Cordless Blender Instruction Manual \(Model NB50301S\)](#)

NutriBullet NB50301S

NutriBullet GO Cordless Blender Instruction Manual

Model: NB50301S

INTRODUCTION

The NutriBullet GO Cordless Blender is designed for convenience and portability, allowing you to prepare smoothies and protein shakes on the go. This manual provides essential information for safe and effective use of your appliance.

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury, or property damage.

- Read all instructions before operating the NutriBullet GO.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the motor base in water or any other liquid.
- Avoid contact with moving parts. Keep hands and utensils out of the blending cup while blending to prevent injury.
- Do not blend hot liquids, as pressure buildup can cause the cup to burst.
- Ensure the blade assembly is securely attached to the cup and the cup is properly locked onto the motor base before operating.
- Do not operate the blender if the blade assembly is damaged or if the motor base has been dropped or damaged.
- Use only NutriBullet authorized accessories and replacement parts.
- Unplug the USB charging cord when not in use and before cleaning.

WHAT'S INCLUDED

Your NutriBullet GO Cordless Blender package includes:

- (1) Motor Base
- (2) 13oz Cups
- (2) To Go Lids
- (1) Blade Cover

- (1) USB Charging Cord
- User Guide with Recipes



Image: All components included with the NutriBullet GO Cordless Blender.

SETUP

Charging the Battery

1. Connect the USB charging cord to the charging port on the motor base.
2. Plug the other end of the USB cord into a compatible USB power adapter (not included).
3. The indicator light will illuminate during charging. A full charge provides up to 20 blending cycles.



Image: The motor base of the NutriBullet GO Cordless Blender, illustrating the power button and indicator light.

Assembly

1. Ensure the motor base is fully charged.
2. Fill the 13oz cup with your desired ingredients. Do not exceed the MAX fill line.
3. Securely twist the blade assembly onto the cup until it is tightly sealed.
4. Invert the cup and blade assembly, then align it with the motor base. Twist clockwise until it locks into place.

OPERATING INSTRUCTIONS

Blending

1. After assembly, press the power button on the motor base to begin blending.
2. The blender will run for a preset cycle. For optimal results, blend in short bursts.
3. Avoid blending continuously for more than 30 seconds to prevent overheating.
4. If the blender stops, gently shake the unit to redistribute ingredients and restart.



Image: The NutriBullet GO Cordless Blender with ingredients inside, demonstrating its use.

After Blending

1. Once blending is complete, twist the cup counter-clockwise to remove it from the motor base.
2. Carefully unscrew the blade assembly from the cup.
3. Attach a To-Go Lid for immediate consumption or storage.

Your browser does not support the video tag.

Video: A demonstration of how to use the NutriBullet GO Cordless Blender, including assembly and blending.

MAINTENANCE AND CLEANING

Cleaning the Blade and Cups

1. Immediately after each use, rinse the blade assembly and cups with warm water and mild soap.
2. Use a brush to clean around the blades carefully.
3. The cups and lids are top-rack dishwasher safe.

Cleaning the Motor Base

1. Wipe the motor base with a damp cloth.

2. Never immerse the motor base in water or any other liquid.
3. Ensure the charging port is dry before charging.

TROUBLESHOOTING

Blender does not turn on:

- Ensure the motor base is fully charged.
- Verify the cup and blade assembly are securely twisted onto the motor base. The blender has a safety mechanism that prevents operation if not properly assembled.

Ingredients are not blending smoothly:

- Add more liquid to the mixture.
- Cut larger ingredients into smaller pieces.
- Do not overfill the cup beyond the MAX line.
- Blend in shorter bursts and gently shake the unit.

Indicator light is red:

- This may indicate overheating. Allow the unit to cool down for at least 15 minutes before attempting to blend again.
- It could also indicate a low battery. Recharge the unit.

SPECIFICATIONS

Feature	Specification
Model Number	NB50301S
Motor Power	70W
Battery Capacity	2000mAh
Cup Capacity	13oz (370 Milliliters)
Blade Material	Stainless Steel
Material Type Free	BPA Free
Power Source	Corded Electric (for charging)
Item Weight	1.87 pounds

WARRANTY INFORMATION

The NutriBullet GO Cordless Blender comes with a limited warranty. Please refer to the warranty card included in your package or visit the official NutriBullet website for detailed terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, product registration, or to purchase accessories, please visit the official NutriBullet website or contact customer service.

Official Website: www.nutribullet.com

© 2023 NutriBullet. All rights reserved.