

SOKANY SK-784

SOKANY SK-784 Hair Clipper Instruction Manual

Model: SK-784

[Overview](#) [Setup](#) [Operating](#) [Safety Information](#) [Maintenance](#) [Package Contents](#) [Troubleshooting](#) [Product Specifications](#) [Warranty & Support](#)

INTRODUCTION

Welcome to your new SOKANY SK-784 Hair Clipper. This manual provides essential information for safe operation, maintenance, and optimal performance of your device. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the trimmer before cleaning or replacing attachments.
- Keep the trimmer away from water sources.
- Do not use the trimmer on infants or children.
- Always keep the trimmer within sight while in use.
- Allow the trimmer to cool down before storing.
- Always follow the manufacturer's instructions for cleaning and maintenance.
- In case of contact with skin or eyes, rinse immediately with plenty of water and seek medical advice if necessary.
- Always store the trimmer out of reach of children and pets.

PACKAGE CONTENTS

Your SOKANY SK-784 Hair Clipper package includes:

- 1 x SOKANY SK-784 Hair Clipper
- 4 x Detachable Guide Combs (3mm, 6mm, 9mm, 12mm)
- 1 x Cleaning Brush

- 1 x Lubricating Oil Bottle
- 1 x Power Adapter (110-240V, 50/60Hz, 3W)

SOKANY®

PRODUCT ACCESSORIES

- cleaning brush
- lubricating oil
- adaptor
- 4 guide combs
(3mm,6mm,9mm,12mm)



Beard trimming cutter
Detail foil shaver for a close finish around the edges



NO/OFF switch
Hand push switch
simple operation

This image displays the SOKANY SK-784 Hair Clipper along with all its accessories. You can see the four guide combs (3mm, 6mm, 9mm, 12mm), a small cleaning brush, a bottle of lubricating oil, and the power adapter for charging.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your hair clipper.

SOKANY®

Hair Clipper

Detachable blade set
Easy to clean

Not easy card to send
0 Slit double edge cutting and shaving

Titanium alloy
cutter



All age group

safe and doesn't hurt the skin,
let baby cooperate with haircut,
can be used at any age



Powerful system

Deals with all hair types
High-quality motor with high speed



unique blades



High-speed
rotating



8 h charge
60 minute shave




Precision
trimmer



SK-784

This image shows the front of the SOKANY SK-784 Hair Clipper. Key features visible include the stainless steel blade at the top and the ON/OFF switch on the body of the clipper.

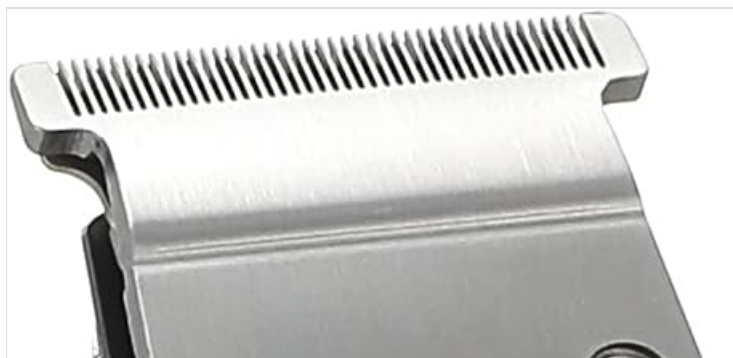

SOKANY®
MODEL: SK-784
220-240V 50/60Hz 3W
DC 3V=100mA
MADE IN P.R.C



SOKANY®



Best ergonomic design
Stainless steel blade
Large-capacity rechargeable built-in battery
Powerful DC motor
Low noise design
Charging indicate
8 hours charge for 60 mins cardless use
Guide comb: 3mm/6mm/9mm/12mm
AC220-240V, 50/60Hz, 3W



Melhor design ergonômico
Lâmina de aço sem haste
Bateria embutida recarregável de grande capacidade
Potente motor DC
Design de baixo ruído
Carregando indicar
8 horas de carga para 60 minutos de uso sem cartão
Pente guia: 3mm / 6mm / 9mm / 12mm
AC 220-240 V, 50/60 Hz, 3 W



Bestes ergonomisches Design
Klinge aus rostfreiem Stahl
Wiederaufladbarer Akku mit großer Kapazität
Leistungsstarker Gleichstrommotor
Geräuscharmes Design
Aufladen anzeigen
8 Stunden aufladen für 60 Minuten kartenlose Nutzung
Führungskamm: 3 mm / 6 mm / 9 mm / 12 mm
AC220-240 V, 50/60 Hz, 3 W.



Miglior design ergonomico
Lama in acciaio inossidabile
Batteria incorporata ricaricabile di grande capacità
Potente motore DC
Design a basso rumore
Indicare la carica
8 ore di ricarica per 60 minuti di utilizzo senza carta
Pettine guida: 3 mm / 6 mm / 9 mm / 12 mm
AC220-240V, 50 / 60Hz, 3W



El mejor diseño ergonómico
Hoja de acero sin tallos
Bateria incorporada recargable de gran capacidad
Potente motor de CC
Diseño silencioso
Carga indicar
Carga de 8 horas por 60 minutos de uso sin tarjeta
Peine guía: 3 mm / 6 mm / 9 mm / 12 mm
AC220-240V, 50 / 60Hz, 3W



Meilleur design ergonomique
Lame en acier Stainless
Batterie intégrée rechargeable de grande capacité
Moteur DC puissant
Conception à faible bruit
La charge indique
8 heures de charge pour 60 minutes d'utilisation sans carte
Peigne de guidage: 3 mm / 6 mm / 9 mm / 12 mm
AC220-240V, 50 / 60Hz, 3W



Лучший эргономичный дизайн
Лезвие из нержавеющей стали
Встроенный аккумулятор большой емкости
Мощный двигатель постоянного тока
Конструкция с низким уровнем шума



This side view of the clipper displays the model number SK-784 and electrical specifications (220-240V, 50/60Hz, 3W, DC 3V=100mA).

SETUP

Charging the Clipper

- Ensure the clipper is switched off before charging.
- Connect the power adapter to the charging port on the clipper.
- Plug the adapter into a 110-240V, 50/60Hz electrical outlet.
- Charge the clipper for approximately 8 hours before first use. A full charge provides about 2 hours of cordless operation.
- The clipper features a rechargeable battery.

Attaching Guide Combs

- Select the desired guide comb (3mm, 6mm, 9mm, or 12mm) for your preferred hair length.
- Align the comb with the clipper blade and push it firmly until it clicks into place.
- To remove, gently pull the comb away from the blade.



This image shows the four guide combs included with the clipper, allowing for different hair cutting lengths: 3mm, 6mm, 9mm, and 12mm.

OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the clipper is fully charged or connected to a power source.
2. Press the ON/OFF switch to turn on the clipper.
3. Hold the clipper with the blade facing downwards.
4. For best results, move the clipper against the direction of hair growth.
5. Use smooth, even strokes.
6. Press the ON/OFF switch again to turn off the clipper after use.

Trimming Tips

- Start with a longer guide comb and gradually switch to shorter ones if a closer cut is desired.
- For facial hair trimming, grooming nose and ear hair, or maintaining body hair length, use the appropriate comb or the blade without a comb for precise detailing.
- Regularly clear hair from the blade during use to maintain performance.

MAINTENANCE

Cleaning the Blade

- Always ensure the clipper is switched off and unplugged before cleaning.
- Use the provided cleaning brush to remove loose hairs from the blade and housing.
- The detachable blade set is easy to clean. You may carefully remove the blade for thorough cleaning.

Lubricating the Blade

- After cleaning, apply a small drop of the lubricating oil to the blade teeth.
- Turn on the clipper for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and prevents rust.

Storage

- Store the clipper in a dry, cool place, away from direct sunlight and moisture.
- Keep out of reach of children and pets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on	Battery is not charged	Charge the clipper for 8 hours.
Clipper pulls hair or cuts poorly	Blade is dirty or not lubricated	Clean and lubricate the blade.
Clipper makes unusual noise	Blade is obstructed or damaged	Turn off and inspect the blade for obstructions. If damaged, contact support.

PRODUCT SPECIFICATIONS

Model Number: SK-784

Blade Material: Stainless Steel

Power Source: Corded Electric (Rechargeable Battery)

Input Voltage: 110-240V, 50/60Hz, 3W

Operating Time: Approximately 2 hours after 8 hours charge

Included Combs: 3mm, 6mm, 9mm, 12mm

Weight: 400 grams

Dimensions: 20.6 x 18.4 x 6.2 cm

Target Audience: Unisex-Adults

Recommended Uses: Trimming facial hair, grooming nose and ear hair, maintaining body hair length

WARRANTY AND SUPPORT

Warranty Information

This SOKANY SK-784 Hair Clipper comes with a standard manufacturer's warranty. Please refer to the packaging or contact your retailer for specific warranty terms and conditions.

Customer Support

For any questions, technical assistance, or service inquiries, please contact SOKANY customer support or visit the official SOKANY store.

[Visit SOKANY Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question