

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SOKANY](#) /

› [Sokany SK-378 Electric Hair Shaver User Manual](#)

SOKANY SK-378

Sokany SK-378 Electric Hair Shaver User Manual

Brand: SOKANY | Model: SK-378

1. INTRODUCTION

The Sokany SK-378 Electric Hair Shaver is designed for efficient and comfortable shaving. It features a double ring veneer cutter net and 3D floating technology to adapt to facial contours, providing a close and smooth shave. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your shaver.





Figure 1: Sokany SK-378 Electric Hair Shaver

This image displays the main view of the Sokany SK-378 electric shaver, highlighting its ergonomic design and rotary shaving heads.

Key Features:

- 3D Floating Technology for adaptive shaving.
- Double Ring Veneer Cutter Net for efficient hair capture.
- Automatic Grinding Cutter Head for long-lasting sharpness.
- USB Charging capability.
- Cordless operation for convenience.
- Safe and comfortable shaving experience.

2. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present and in good condition:



The advertisement features a large, detailed image of the SOKANY STRONG SHAVER on the right side. The shaver is silver and black, with three circular shaver heads at the top. The brand name 'SOKANY' is printed on the handle. Below the shaver head, there are four blue icons: a hand holding a shaver, a padlock, a skull, and a battery symbol. On the left side, there are two smaller images of the shaver head. The top one shows the shaver head with water splashing around it, and the bottom one shows a close-up of the internal blades. The background is a solid blue color.

SOKANY[®]

STRONG SHAVER

360 ° floating veneer

In the face of chin, throat, upper lip, lower lip fossa and other difficult shaving dead angle, the blade can automatically adjust the angle, close to the facial contour, shaving easily.

Double blade cleaning

High power with 3 cutter head, strong power. 2 minutes to shave off tiredness.

ITEM NO:SK-378



Figure 2: Package Contents Overview

This image shows the back of the product packaging, illustrating the shaver body, shaver head, protective cover, cleaning brush, and power cord as included items.

- 1 x Sokany SK-378 Electric Shaver (Main Unit)
- 1 x Protective Cover
- 1 x Cleaning Brush
- 1 x USB Charging Cable
- 1 x User Manual (this document)

3. SETUP

3.1 Charging the Shaver

Before first use, fully charge the shaver. The shaver is powered by a rechargeable lithium-ion battery.

1. Connect the provided USB charging cable to the charging port on the shaver.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate to show that the shaver is charging.
4. A full charge takes approximately **5 hours**.
5. Once fully charged, the shaver provides up to **1 hour** of cordless usage time.

Note: Do not use the shaver while it is charging.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To turn the shaver on, press the power button located on the front of the shaver.
- To turn the shaver off, press the power button again.

4.2 Shaving Technique

For optimal results and comfort, follow these guidelines:

1. Ensure your face is clean and dry for dry shaving, or use shaving foam/gel for wet shaving. The shaver supports both dry and wet shaving.
2. Hold the shaver at a right angle (90 degrees) to your skin.

3. Move the shaver in small, circular motions against the direction of hair growth.
4. Apply gentle pressure. The 3D floating heads will automatically adjust to the contours of your face, chin, throat, and upper lip for a close shave.
5. Avoid pressing too hard, as this can cause irritation and reduce shaving efficiency.

4.3 Wet and Dry Use

The Sokany SK-378 is designed for both wet and dry shaving, offering flexibility for your grooming routine. Its whole body is washable, allowing for easy cleaning under running water.

5. MAINTENANCE

5.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. The shaver features a double blade cleaning system.

1. Daily Cleaning (After Each Use):

- Turn off the shaver and unplug it if connected to power.
- Remove the shaver head by gently twisting or pressing the release button (if applicable).
- Tap out any loose hair clippings.
- Rinse the shaver head and the main body under running tap water. The shaver is designed for whole body washing.
- Use the provided cleaning brush to remove stubborn hair particles from the blades and inner chamber.
- Allow all parts to air dry completely before reassembling and attaching the protective cover.

2. Deep Cleaning (Weekly/Bi-weekly):

- In addition to daily cleaning, you may wish to disassemble the individual rotary cutters for a more thorough clean. Refer to the shaver head's design for specific disassembly instructions.
- Rinse all components thoroughly and ensure they are completely dry before reassembly.

Caution: Do not use abrasive cleaning agents or harsh chemicals, as these can damage the shaver's finish or internal components.

5.2 Blade Replacement

The shaver's blades are designed for durability with automatic grinding. However, for optimal performance, it is recommended to replace the shaving heads approximately every 12-18 months, depending on usage. Replacement heads can be purchased from authorized Sokany retailers.

6. TROUBLESHOOTING

If you encounter any issues with your Sokany SK-378 shaver, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------------|----------------------|--------------------------------|
| Shaver does not turn on. | Battery is depleted. | Charge the shaver for 5 hours. |

| Problem | Possible Cause | Solution |
|--|--|---|
| Shaver performance is poor / pulling hair. | Blades are dirty or worn. | Clean the shaver head thoroughly. Consider replacing the shaving heads if they are old. |
| Shaver makes unusual noise. | Hair clippings stuck inside or damaged part. | Clean the shaver thoroughly. If noise persists, contact customer support. |
| Charging indicator not working. | Faulty cable or power source. | Try a different USB cable or power adapter. Ensure connections are secure. |

If the problem persists after trying these solutions, please contact Sokany customer support for further assistance.

7. SPECIFICATIONS

- **Model:** SK-378
- **Brand:** SOKANY
- **Power Source:** Battery Powered (Rechargeable Lithium-Ion)
- **Special Features:** Cordless, 3D Floating Technology, Wet & Dry Use
- **Battery Life:** Up to 1 Hour (after full charge)
- **Charge Time:** Approximately 5 Hours
- **Item Weight:** 400 Grams
- **Package Dimensions:** 20.8 x 9.6 x 7.8 cm
- **Blade Material:** Stainless Steel
- **Head Type:** Rotary
- **Included Components:** Shaver, Protective Cover, Cleaning Brush, USB Cable

8. WARRANTY AND SUPPORT

Sokany products are manufactured to high-quality standards. Specific warranty terms and conditions are typically provided with your purchase documentation or can be found on the official Sokany website.

For technical support, troubleshooting assistance, or inquiries regarding replacement parts, please contact Sokany customer service through their official channels. Please have your model number (SK-378) and purchase details ready when contacting support.

Online Resources: For the latest information, FAQs, and product registration, please visit the official Sokany website (if available, link not provided in input).