

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY Replacement Remote Control User Manual for LG Smart LED LCD TV Models AKB75675312 and AKB75675302

VINABTY AKB75675312 AKB75675302

VINABTY Replacement Remote Control User Manual

Models: AKB75675312, AKB75675302

INTRODUCTION

This manual provides instructions for the VINABTY replacement remote control, designed for LG Smart LED LCD TVs. This remote control is a direct replacement for original models AKB75675312 and AKB75675302, offering an ergonomic design and immediate functionality without the need for programming.





Image: Front view of the VINABTY replacement remote control, showing all buttons clearly.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the

markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

Note: No programming or pairing is required. The remote is ready for use once batteries are installed.





Image: Back view of the remote control with the battery compartment open, showing two AAA batteries inserted.

OPERATING INSTRUCTIONS

This remote control functions identically to the original LG remote models AKB75675312 and AKB75675302. Point the remote directly at your LG Smart LED LCD TV for optimal performance.

Key Functions Overview



Image: Angled view of the remote control, highlighting the arrangement of various function buttons.

- **Power Button (●)**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **LIST**: Displays the channel list.
- **QUICK ACCESS / FAV**: Accesses quick menu or favorite channels.
- **Volume Up/Down**: Adjusts the TV volume.
- **Mute**: Mutes or unmutes the TV sound.
- **Channel Up/Down**: Changes channels sequentially.
- **GUIDE**: Displays the electronic program guide.
- **TEXT**: Accesses teletext services.
- **HOME (△)**: Opens the Smart TV home menu.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Navigate through menus and confirm selections.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Provide specific functions depending on the TV mode or application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Control media playback.
- **AD/***: Audio Description button.
- **MOVIES/***: Direct access to movie services.
- **REC/***: Record function.
- **Q.MENU/***: Quick Menu access.

For detailed functions of specific buttons, refer to your LG TV's original user manual.

MAINTENANCE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.
- **Avoid Damage**: Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote control not working.	<ul style="list-style-type: none"> ◦ Batteries: Check if batteries are inserted correctly with the correct polarity (+/-). Replace old or dead batteries with new AAA batteries. ◦ Line of Sight: Ensure there are no obstructions between the remote control and the TV's infrared receiver. ◦ Distance: Make sure you are within the effective operating range (up to 10 meters).
Some buttons not responding.	<ul style="list-style-type: none"> ◦ Batteries: Low battery power can cause intermittent button response. Replace batteries. ◦ Dirt/Debris: Clean the remote control, especially around the unresponsive buttons, to ensure no debris is interfering with contact.
Remote control works intermittently.	<ul style="list-style-type: none"> ◦ Batteries: Batteries may be low. Replace them. ◦ Interference: Other electronic devices or strong light sources might interfere with the infrared signal. Try using the remote in a different environment.

SPECIFICATIONS

Brand	VINABTY
Model Numbers	AKB75675312, AKB75675302
Compatible TV Brands	LG Smart LED LCD TVs
Connectivity Technology	Infrared (IR)
Number of Buttons	20
Max Operating Range	10 Meters (approx. 33 feet)
Battery Type	2 x AAA (not included)
Material	ABS
Item Weight	62 Grams
Color	Black

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your VINABTY replacement remote control, please contact the seller or manufacturer for assistance. Provide your product model numbers (AKB75675312 or AKB75675302) for quicker support.

For general inquiries or troubleshooting tips, you may also refer to the support section of your LG TV's original user manual.

