



Manuals.plus /

› deime /

› DEIME 6.2 QT Air Fryer Instruction Manual

deime RCNJ 620

# DEIME 6.2 QT Air Fryer Instruction Manual

## 1. IMPORTANT SAFETY INFORMATION

---

- Always place the air fryer on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Ensure proper ventilation around the air fryer. Do not block any air vents.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the air fryer if the cord or plug is damaged, or if the appliance malfunctions.
- Avoid touching hot surfaces. Use handles or oven mitts.

## 2. PRODUCT OVERVIEW

---

### 2.1 Components

The DEIME 6.2 QT Air Fryer features a sleek design with a digital touch screen and a convenient viewing window.



*Figure 1: DEIME 6.2 QT Air Fryer with non-stick basket containing french fries.*

## 2.2 Key Features

- **6.2 QT Capacity:** Large enough to serve 2-5 people, fitting a 4-6lbs chicken or 400-600g french fries.
- **1500W Power:** Ensures quick and efficient cooking.
- **High-Definition Touch Screen:** Easy-to-use LED display for intuitive control.
- **Visual Cooking Window:** Allows monitoring of food progress without opening the basket.
- **10 Preset Cooking Programs:** One-touch operation for popular dishes like french fries, roast chicken, pizza, and more.
- **360° Hot Air Circulation:** For crispy and tender results with little to no oil.
- **Non-Stick Basket:** Removable and easy to clean, including a non-stick rack.

# 10 Cooking Functions



Figure 2: Digital control panel displaying various cooking functions.

# Cooking Viewing Window

Observe the cooking status of food at any time



Figure 3: The transparent cooking viewing window allows you to observe food.

## 3. SETUP

### 3.1 Unpacking

Carefully remove all packaging materials, stickers, and labels from the air fryer. Retain the packaging for future storage or transport.

### 3.2 Initial Cleaning

1. Wipe the exterior of the air fryer with a damp cloth.
2. Wash the non-stick basket and removable rack with hot, soapy water. Rinse thoroughly and dry completely.
3. Ensure all parts are dry before plugging in the appliance.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The air fryer features a touch-sensitive LED display. Icons represent various functions and settings.



Figure 4: Precise time and temperature control options on the digital display.

## 4.2 Basic Operation

1. **Power On:** Plug the air fryer into a grounded electrical outlet. The power button will illuminate. Touch the power button to turn the unit on.
2. **Select Function:** Choose from 10 preset cooking programs by touching the corresponding icon (e.g., french fries, steak, chicken, fish, pizza).
3. **Adjust Temperature/Time:** Use the '+' and '-' buttons to manually adjust the temperature (up to 400°F) and cooking time (up to 60 minutes) as needed.
4. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
5. **Shake Reminder:** For certain foods, the air fryer may beep and display a 'SHAKE' reminder. Pull out the basket, shake the contents, and reinsert to resume cooking.
6. **Power Off:** To turn off the air fryer, press and hold the power button until the display turns off.

## 4.3 Cooking Tips

- For best results, preheat the air fryer before adding food.

- Do not overfill the basket to ensure even cooking and crispiness.
- Lightly toss food with a small amount of oil for enhanced crispiness.
- Use the viewing window to monitor cooking progress without interrupting the cycle.



Figure 5: Achieve crispy and juicy results with 80% less fat.

## 5. MAINTENANCE AND CLEANING

### 5.1 Daily Cleaning

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the non-stick basket and rack. These parts are dishwasher safe.
3. For hand washing, use warm, soapy water and a non-abrasive sponge. Avoid using corrosive cleaners.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Clean the interior of the appliance with a damp cloth.

Figure 6: The non-stick basket is easy to clean by hand or in the dishwasher.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on	Not plugged in; Basket not fully inserted	Ensure plug is securely in outlet; Push basket firmly until it clicks into place
Food not cooked evenly	Basket overloaded; Food not shaken/turned	Cook in smaller batches; Shake or turn food halfway through cooking
White smoke coming from appliance	Grease from previous use; Fatty ingredients	Clean basket thoroughly; Drain excess fat from food
Food not crispy	Not enough oil; Temperature too low	Lightly coat food with oil; Increase temperature or cooking time

## 7. SPECIFICATIONS

Feature	Value
Brand	deime
Model Name	RA640DSV
Item Model Number	RCNJ 620
Capacity	6.2 Quarts
Output Wattage	1500 Watts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Product Dimensions	10.8"D x 10.8"W x 13"H
Item Weight	11 pounds (5 Kilograms)
Material	Plastic
Has Nonstick Coating	Yes
Is Dishwasher Safe	Yes (Basket and Rack)

## 8. WARRANTY AND SUPPORT

The DEIME Air Fryer comes with a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact DEIME customer service through the contact information provided in your product documentation or visit the official DEIME website.

