

uwant Y100STEAM

uwant Y100STEAM Carpet Cleaner Machine: User Manual

Model: Y100STEAM

1. PRODUCT OVERVIEW

The uwant Y100STEAM Carpet Cleaner Machine is a versatile cleaning device designed for various surfaces including carpets, upholstery, and hard surfaces. It features three distinct cleaning modes: 212°F Steam Mode for deep stains, 149°F Hot Water Mode for pet stains, and Cold Water Mode for normal stains. Equipped with 18Kpa powerful suction, it effectively removes dirt and grime. The innovative 2-in-1 water tank design simplifies operation and maintenance. This unit comes with 7 professional cleaning accessories to tackle different cleaning challenges.

2. PACKAGE CONTENTS

Please ensure all items are present upon unpacking:

- Carpet Cleaner Machine (Main Unit)
- Steam Round Brush
- Self-cleaning Head
- High-density Brush
- Silicone Brush
- Velvet Brush
- Steam Shower Head
- Steam Connection Head
- 17oz UWANT OXY Cleaning Solution

Package List

1. Carpet Cleaner Machine
2. Steam Round Brush
3. Self-cleaning Head
4. High-density Brush
5. Silicone Brush
6. Velvet Brush
7. Steam Shower Head
8. Steam Connection Head
9. 17oz UWANT OXY Cleaning Solution



Image: Detailed view of all components included in the uwant Y100STEAM package, laid out for identification.

3. SAFETY INSTRUCTIONS

Before operating the uwant Y100STEAM Carpet Cleaner Machine, please read and understand all safety instructions to prevent electric shock, fire, or serious injury.

- Always unplug the appliance from the electrical outlet before cleaning or servicing.
- Do not immerse the appliance in water or other liquids.
- Use only uwant-recommended cleaning solutions.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use with a damaged cord or plug.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Exercise extra care when cleaning on stairs.
- Store the appliance indoors in a dry place.

4. SETUP

Filling the Water Tank

1. Lift the 2-in-1 water tank from the main unit.
2. Open the clean water tank cap (indicated by 'MAX' for clean water).
3. Fill the clean water compartment with warm water (up to 149°F for Hot Water Mode, or cold water for Cold Water Mode).
4. Add the recommended amount of uwant cleaning solution to the clean water tank.
5. Close the cap securely and place the tank back onto the main unit.

2 in 1 Large Capacity Water Tank

Achieve one-stop cleaning

Max 41 ounces
For Clean Water Tank

Max 41 ounces
For Dirty Water Tank



Image: A diagram illustrating the dual compartments of the 2-in-1 water tank, showing separate sections for clean and dirty water, each with a maximum fill line.

Attaching Accessories

1. Connect the desired cleaning head (e.g., high-density brush, silicone brush, velvet brush) to the end of the hose nozzle until it clicks securely into place.
2. For steam-only applications, attach the steam connection head or steam shower head directly to the hose nozzle.

Three Types of Replaceable Integrated Brush Plates



High-density Brush



Silicone Brush



Velvet Brush

Image: A visual guide showcasing the three interchangeable brush plates: high-density brush, silicone brush, and velvet brush, designed for various cleaning tasks.

Video: Setup and Initial Use

Video Description: This video demonstrates the initial setup of the uwant Y100STEAM, including filling the water tank and attaching the main cleaning head. It also shows the machine being used to clean car upholstery, highlighting its portability and effectiveness on automotive surfaces.

5. OPERATING INSTRUCTIONS

Selecting Cleaning Modes

1. Plug the power cord into a grounded electrical outlet.
2. Turn the mode selection dial on the main unit to choose your desired cleaning mode:

- **Steam Mode (212°F):** Ideal for deep stains, kitchen, and bath stains.
- **Hot Water Mode (149°F):** Best for pet stains.
- **Cold Water Mode:** Suitable for normal stains.

3. Allow the machine to heat up if selecting Steam or Hot Water Mode (indicated by a light).



Image: The uwant Y100STEAM unit with its three operational modes (Steam, Hot Water, Cold Water) clearly labeled, demonstrating its versatility for different cleaning needs.

Cleaning Surfaces

1. Hold the hose nozzle with the attached cleaning head firmly against the surface to be cleaned.
2. Press the trigger on the nozzle to dispense water/steam and cleaning solution.
3. Move the nozzle slowly over the stained area, applying gentle pressure.
4. Release the trigger and move the nozzle over the wet area to suction up the dirty water.
5. Repeat as necessary until the stain is removed.

18,000Pa Strong Suction

Deep cleaning 3.15-3.94 inches, reaching deep stains.

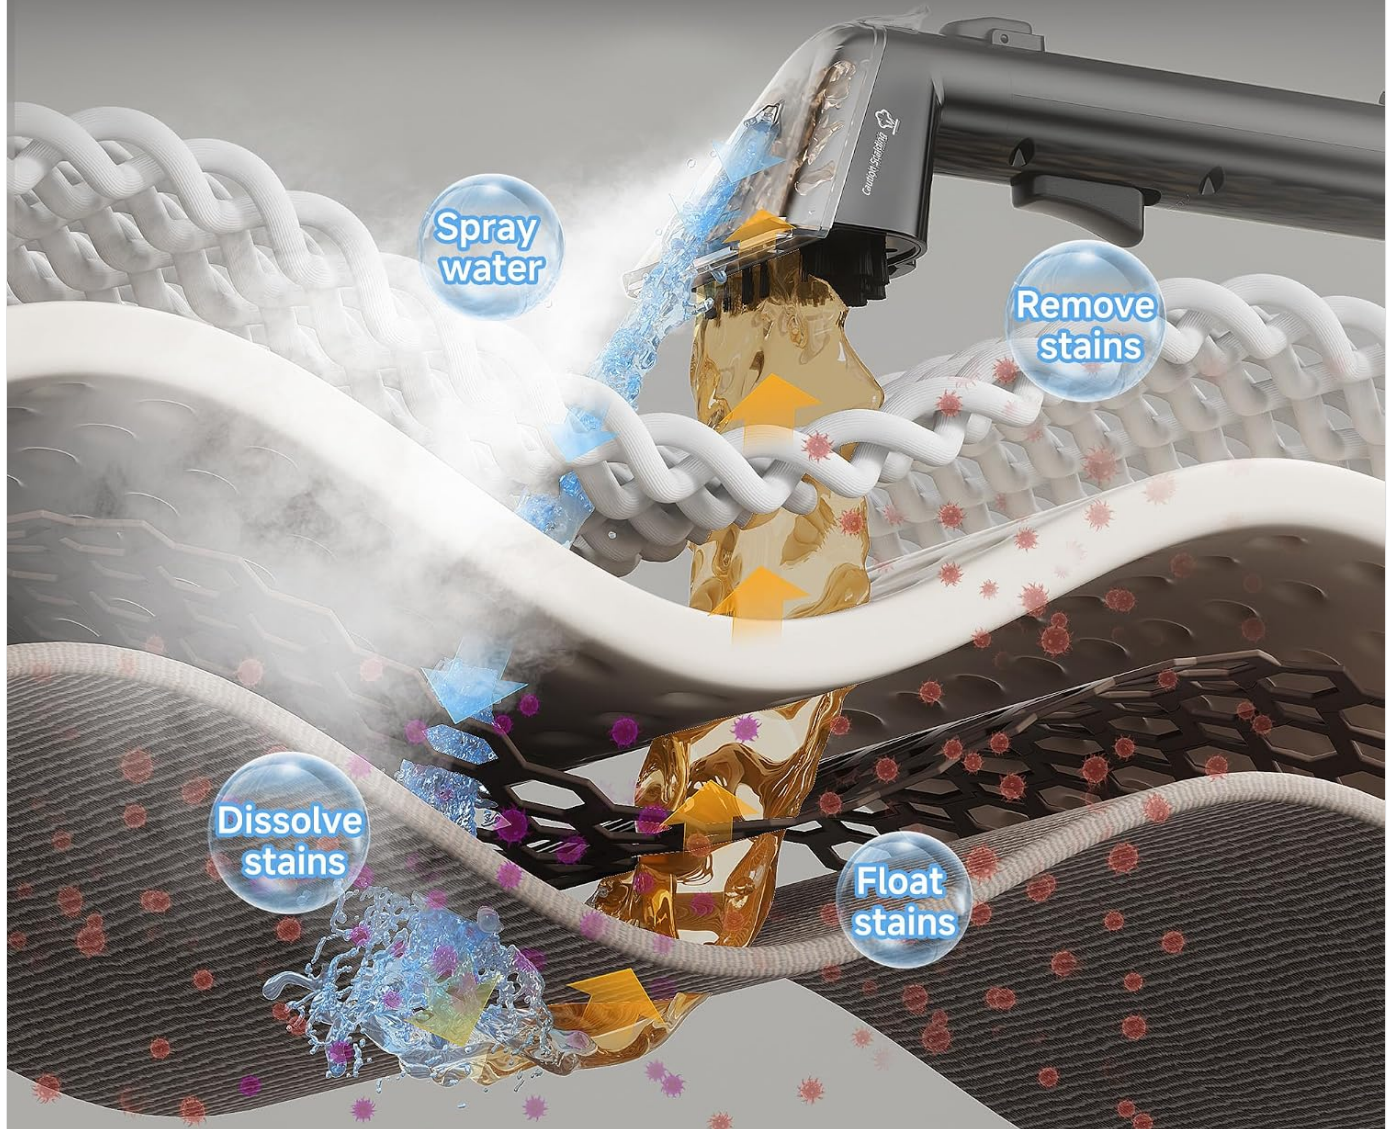


Image: An illustration detailing the 18,000Pa powerful suction process, showing how water is sprayed, stains are dissolved, and dirty water is removed from fabric fibers.

212°F Steam Mode for Heavy Stains

No chemical agents required. Highly effective in eliminating 99.99% of bacteria and dust mites.



Carpet



Couch



Car Floor Mats



Kitchen

Image: Examples of the 212°F Steam Mode being used on different surfaces, including carpet, couch, car floor mats, and kitchen surfaces, demonstrating its effectiveness on heavy stains.

Using Pet Pro Solution

For tough pet stains and odors, use the included uwant OXY Pro Spot & Stain Remover. Spray directly onto the stain before using the machine, allowing it to penetrate for a few minutes as per the solution's instructions.

OXY Pro Cleaning Solution

Designed specifically for pet stains and odors



Image: The uwant Y100STEAM unit alongside the OXY Pro Cleaning Solution, demonstrating its application on a pet-stained carpet.

Video: Carpet Cleaning Demonstration

Video Description: This video provides a detailed demonstration of the uwant Y100STEAM in action, showing how to effectively clean carpets and extract dirty water. It highlights the ease of use and the visible results of the cleaning process.

6. MAINTENANCE


Emptying and Cleaning Tanks

1. After each use, lift the 2-in-1 water tank from the main unit.
2. Carefully open the dirty water compartment (indicated by 'MAX' for dirty water).
3. Pour out the dirty water and rinse the tank thoroughly with clean water.
4. Allow the tank to air dry before reassembling.

Self-Cleaning Function

To prevent bacterial growth and maintain optimal performance, utilize the self-cleaning function for the hose:

1. Attach the self-cleaning head to the hose nozzle.
2. Ensure the clean water tank has some clean water.
3. Turn on the machine and press the trigger to flush clean water through the hose.
4. Continue until the water running through the hose is clear.

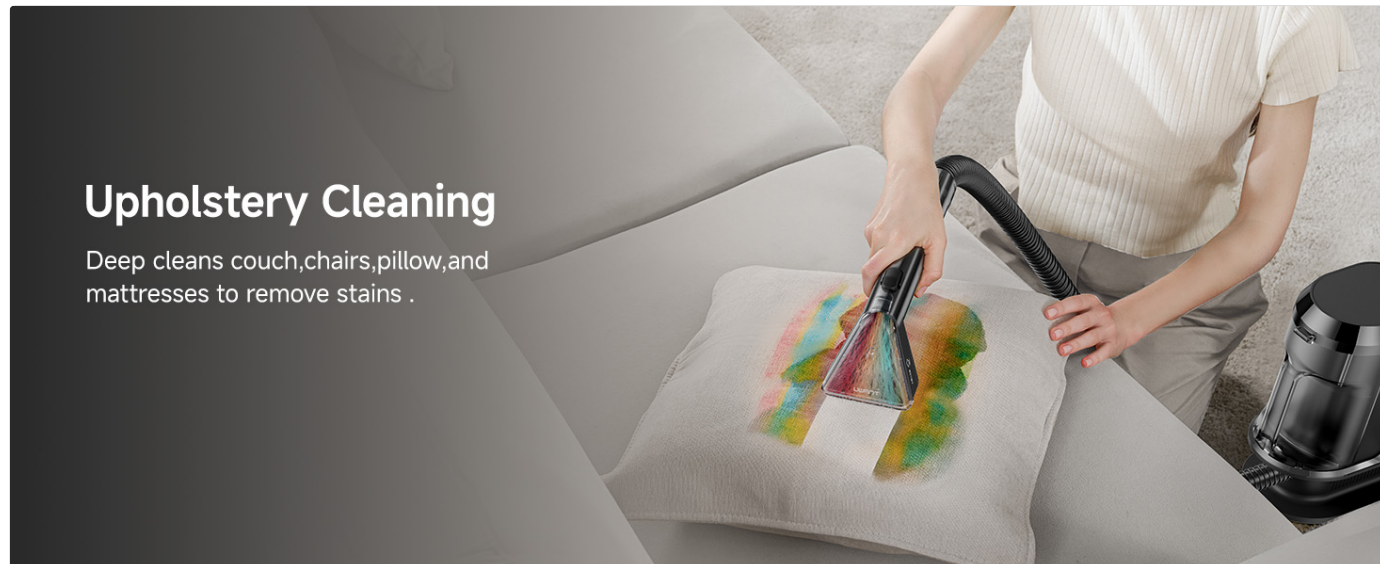

Upholstery Cleaning

Deep cleans couch, chairs, pillow, and mattresses to remove stains.

Image: A cutaway diagram illustrating the self-cleaning mechanism of the hose, showing water flowing through to prevent bacterial buildup.

Storage

The uwant Y100STEAM features a compact and integrated design for easy storage. Ensure all accessories are nested into the main body to prevent loss. Store the unit upright in a dry, cool place.



Car Detailing

Cleans car interior surfaces, upholstery, and removes tough automotive stains.

Image: The uwant Y100STEAM unit stored neatly inside a cabinet, highlighting its compact design and integrated accessory storage.

7. TROUBLESHOOTING

If you encounter any issues with your uwant Y100STEAM Carpet Cleaner Machine, please refer to the following common troubleshooting steps:

- **No Suction:** Check if the dirty water tank is full or improperly seated. Ensure the hose and nozzle are free from blockages.
- **No Spray/Steam:** Verify the clean water tank is filled and properly seated. Check if the nozzle is clogged. For steam/hot water modes, allow sufficient heating time.
- **Leaking:** Ensure all caps and connections are securely tightened. Check for cracks or damage in the water tanks or hose.
- **Machine Not Turning On:** Confirm the power cord is securely plugged into a working electrical outlet. Check the mode selection dial is correctly set.

For persistent issues, please contact uwant customer support.

8. SPECIFICATIONS

Feature	Specification
Brand Name	uwant
Model Number	Y100STEAM
Suction Power	18Kpa
Cleaning Modes	Steam (212°F), Hot Water (149°F), Cold Water
Water Tank Capacity	2-in-1 design (Clean Water / Dirty Water)
Power Cord Length	14.76 ft
Water Pipe Length	5.25 ft
Total Coverage Radius	20.01 ft

9. WARRANTY & SUPPORT

For warranty information, product registration, or technical support, please visit the official uwant website or contact our customer service team. Keep your purchase receipt as proof of purchase.

Online Support: [Visit the uwant Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question