

AGARO Regal (33846)

AGARO Regal 23L Air Fryer Oven Instruction Manual

Model: Regal (33846)

1. INTRODUCTION

Thank you for choosing the AGARO Regal 23L Air Fryer Oven. This versatile appliance is designed to simplify your cooking experience, offering multiple functions including air frying, baking, roasting, toasting, and more. With its 23-liter capacity and 1800W power, it is suitable for preparing meals for families and gatherings. This manual provides essential information for safe operation, maintenance, and optimal use of your new appliance.

Please read this manual thoroughly before first use and keep it for future reference.



Figure 1.1: AGARO Regal 23L Air Fryer Oven in operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance features built-in overheat protection and auto shut-off on door opening for enhanced safety.

- Ensure the door is completely closed before starting operation. If the door is opened during use, the appliance will enter standby mode.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not cover any air vents while the appliance is operating.

Intelligent Cooking Made Simple with User-Friendly Interface

7 | Pre-Set Menu Functions

3 | Cooking Functions

4 | Temp. & Time Control Settings



Safety Instructions

Ensure the door is closed to start. If opened during use, the appliance will enter stand-by mode.

Figure 2.1: Control panel highlighting safety instructions.

3. PRODUCT OVERVIEW

3.1 Key Features

- **7 Pre-set Cooking Options:** Bake, Air Fry, Broil, Toast, Warm, Convection Bake, Rotisserie.
- **3 Toasting Settings:** Light, Medium, Dark.
- **Large Capacity:** 23 Litres, suitable for large families.
- **Powerful Performance:** 1800 Watts for fast and healthy cooking.

- **Visibility:** Large double glass viewing window and inner illuminated cooking chamber.
- **Advanced Heating:** 360° Hot air circulation technology for even cooking and crispy results.
- **Adjustable Controls:** Variable Temperature (100-230°C) and Timer (up to 60 minutes).
- **Safety Features:** Overheat protection & Auto Shut-off on door opening.

7-in-1

1 Appliance for Versatile Cooking



Figure 3.1: 7-in-1 Versatile Cooking Functions.

Ultimate Cooking with 360° Heating Technology

 Up To
90%
Less Oil Usage*



*compared to conventional mode of frying

Figure 3.2: 360° Hot Air Circulation Technology.

3.2 Included Components

Your AGARO Regal Air Fryer Oven comes with the following accessories:

- Wire rack
- Frying basket
- Pan handle
- Bake tray
- Removable crumb tray
- Rotisserie fetch tool
- Round cage basket
- Rotisserie skewer and fork
- Skewer set
- Mitts

Delicious Dishes. Minimal Effort.

Your Favourite Foods Ready At Your Fingertips



Figure 3.3: Example Dishes and Cooking Times.

4. SETUP

4.1 Unpacking

1. Carefully remove the air fryer oven and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels from the appliance.
3. Inspect the appliance for any damage. Do not use if damaged.

4.2 Placement

- Place the air fryer oven on a stable, heat-resistant, and level surface.
- Ensure there is adequate air circulation around the appliance. Maintain at least 10 cm of clear space on all sides (back, sides, and top) to allow for proper ventilation.
- Do not place the appliance near flammable materials or heat sources.

4.3 Initial Cleaning

- Before first use, wipe the exterior of the appliance with a damp cloth.
- Wash all removable accessories (wire rack, frying basket, bake tray, crumb tray, rotisserie parts, etc.) with warm, soapy water. Rinse thoroughly and dry completely.
- Insert the removable crumb tray at the bottom of the oven.
- It is recommended to run the oven empty for about 15 minutes at 200°C to burn off any manufacturing residues. A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The AGARO Regal Air Fryer Oven features intuitive manual controls:

- **Oven Timer (Min):** Sets cooking time up to 60 minutes.
- **Temp (°C):** Adjusts temperature from 100°C to 230°C.
- **Function:** Selects cooking mode (Warm, Broil, Toast, Bake, Air Fry, Rotisserie).
- **Toast Timer:** Specific timer for toasting functions.
- **Toast Setting:** Selects toast shade (Light, Med, Dark).
- **Power Indicator:** Illuminates when the appliance is on.

5.2 General Operation

1. Place food on the appropriate accessory (frying basket, wire rack, bake tray).
2. Slide the accessory into the oven.
3. Close the oven door securely.
4. Turn the **Function** knob to select your desired cooking mode (e.g., Air Fry, Bake).
5. Turn the **Temp (°C)** knob to set the desired cooking temperature.
6. Turn the **Oven Timer (Min)** knob to set the cooking time. The oven will begin heating.
7. The power indicator light will illuminate during operation.
8. When the timer reaches zero, the oven will automatically shut off.
9. Carefully remove cooked food using oven mitts and the pan handle/rotisserie fetch tool.

5.3 Specific Cooking Functions

- **Air Fry:** Ideal for crispy foods with minimal oil. Use the frying basket.
- **Bake:** For cakes, cookies, casseroles. Use the bake tray or an oven-safe dish on the wire rack.
- **Broil:** For browning and crisping the top of food. Place food on the wire rack closer to the top heating elements.
- **Toast:** For bread, bagels. Use the wire rack. Select desired toast shade (Light, Med, Dark) and use the Toast Timer.
- **Warm:** To keep food warm without further cooking.
- **Rotisserie:** For roasting whole chickens or roasts. Assemble the rotisserie skewer and fork, secure the food, and place it in the rotisserie slots. Use the Rotisserie function.

Features	AGARO	Others
Capacity 23 Litres	✓ Suitable for Bigger Meals	✗
Wattage 1800W Power	✓ Faster & More Efficient Cooking	✗
Temperature Range 80°C - 220°C	✓ Versatile Cooking with Precise Control	✗
Assisted Cooking Functions	✓ One-touch Simplified Cooking	✗
Overheating Protection & Auto Shut-off	✓ More Safety & Extends Appliance Life	✗



Figure 5.1: Key Features and Warranty Information.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your AGARO Regal Air Fryer Oven.

6.1 Cleaning

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used. Ensure the interior is dry before next use.
4. **Removable Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray with warm, soapy water. Rinse and dry thoroughly. Clean regularly to prevent grease buildup.
5. **Accessories:** The wire rack, frying basket, bake tray, and rotisserie parts are dishwasher safe. Alternatively, wash them by hand with warm, soapy water, rinse, and dry completely.
6. Do not immerse the main unit, cord, or plug in water or any other liquid.

6.2 Storage

When not in use, ensure the appliance is clean, dry, and unplugged. Store it in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

If you encounter any issues with your AGARO Regal Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer knob to the desired cooking time.
Food is not cooking evenly.	Overcrowding the basket/tray; Incorrect temperature/time; Food not rotated.	Do not overcrowd the cooking area. Adjust temperature and time as needed. For larger quantities, flip or rotate food halfway through cooking.
White smoke coming from the appliance.	Grease/oil residue on heating elements or crumb tray; Fatty food cooking.	Clean the heating elements and crumb tray thoroughly. For fatty foods, ensure the crumb tray is clean and consider using less oil.
Appliance suddenly stops during operation.	Door opened; Overheat protection activated.	Ensure the door is fully closed. If overheated, unplug and let it cool down for 30 minutes before restarting.

If the problem persists after attempting these solutions, please contact AGARO customer support for assistance.

8. SPECIFICATIONS

Feature	Specification
Model Name	Regal
Item Model Number	33846
Special Feature	Air Fryer oven + OTG
Product Dimensions (D x W x H)	39D x 41W x 40H Centimeters
Colour	Silver
Capacity	23 litres
Material	Stainless Steel (Exterior), Glass (Inner Material)
Recommended Uses	Warm, Broil, Convection Broil, Toast, Bake, Convection Bake, Air Fry and more

Feature	Specification
Output Wattage	1700 Watts (Note: Product title states 1800W, specifications state 1700W. Please refer to product packaging for definitive wattage.)
Voltage	220 Volts
Control Method	Touch (Note: Product images show rotary knobs, suggesting manual control. 'Touch' might refer to internal sensors or a general category. Please refer to physical product for exact control type.)
Min Temperature Setting	100 Degrees Celsius
Max Temperature Setting	230 Degrees Celsius
Is Dishwasher Safe	Yes (for removable parts)
Item Weight	10.42 Kilograms

Dimensions



Figure 8.1: Product Dimensions.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The AGARO Regal Air Fryer Oven comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your purchase receipt as proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

9.2 Customer Support

For any product-related queries, technical assistance, or warranty claims, please contact AGARO customer support. Refer to the contact information provided on your product packaging or the official AGARO website.

When contacting support, please have your product model number (33846) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question