

[Manuals.plus](#) /

› [Jakks Pacific](#) /

› Jakks Pacific My Singing Friend Elsa Doll with Bruni (Model 225136) Instruction Manual

Jakks Pacific 225136

Jakks Pacific My Singing Friend Elsa Doll with Bruni Instruction Manual

Model: 225136

INTRODUCTION

This manual provides essential instructions for the safe and proper use of your Jakks Pacific My Singing Friend Elsa Doll with Bruni. Please read this manual thoroughly before use and retain it for future reference. This doll is designed for children aged 3 years and older.

SAFETY INFORMATION

- Batteries are included and required for operation.
- Always follow battery safety guidelines. Do not mix old and new batteries, or different types of batteries.
- Colors and decorations may vary from those shown.
- Remove and discard all packaging materials before giving the toy to a child.
- This product contains small parts which may pose a choking hazard for young children. Adult supervision is recommended.
- Clean the doll by surface washing only. Do not immerse in water.

PACKAGE CONTENTS

Ensure all the following items are present in your package:

- 1 Elsa Doll (35cm tall)
- 1 Doll Dress
- 1 Pair of Doll Shoes

- 1 Doll Necklace
- 1 Hair Brush
- 1 Hair Clip
- 1 Bruni Salamander Figure
- 1 Plastic Paper Airplane accessory

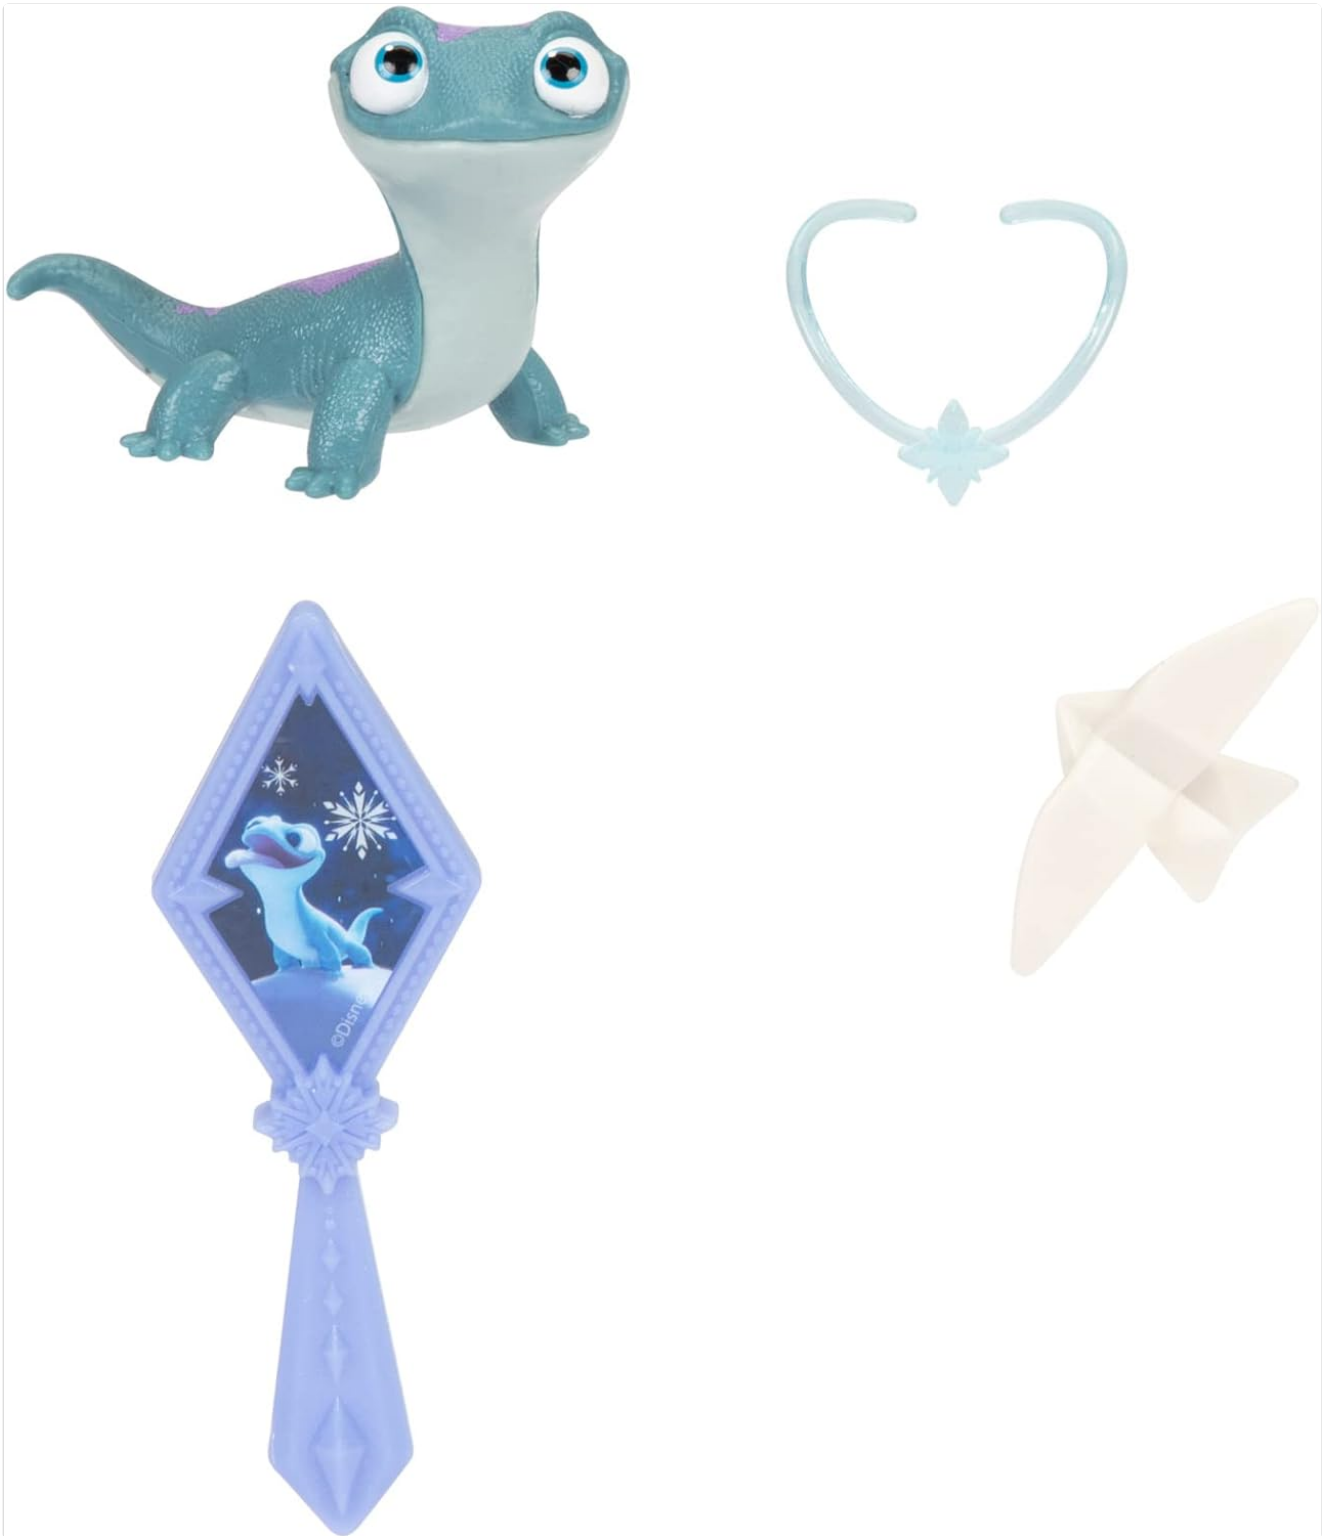


Image: Included accessories for the Elsa doll, featuring Bruni the salamander.

SETUP

Battery Installation

The Elsa doll requires 2 AAA batteries for its singing and talking functions. Batteries are pre-installed for demonstration purposes, but may need replacement for extended play.

1. Locate the battery compartment on the back of the doll.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Remove any old batteries and dispose of them properly.
4. Insert 2 new AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and secure it with the screw.





Image: Back view of the Elsa doll, indicating the battery compartment area.

OPERATING INSTRUCTIONS

Activating Singing and Talking Functions

To hear Elsa sing and speak, simply press the button located on her chest. Elsa sings the song "I Seek You" in 10 different languages: French, English, Spanish, German, Italian, Swedish, Finnish, Norwegian, Danish, and Brazilian Portuguese.



Image: Front view of the Elsa doll, highlighting the activation button.

Using Accessories

The included accessories enhance playtime:

- Use the hairbrush to style Elsa's long blonde hair.
- Adorn Elsa with her iconic necklace and hair clip.
- Bruni the salamander figure can be placed alongside Elsa for imaginative play.



Image: Child interacting with the Elsa doll and accessories.

Cleaning

To clean the Elsa doll, use a damp cloth to gently wipe the surface. Do not submerge the doll in water or use harsh cleaning agents, as this may damage the electronic components or the doll's finish.

Storage

Store the doll and its accessories in a clean, dry place away from direct sunlight and extreme temperatures to prevent damage and discoloration.

TROUBLESHOOTING

Doll Not Singing or Speaking

- **Check Batteries:** Ensure the batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
- **Press Button Firmly:** Make sure the button on Elsa's chest is pressed firmly and completely.

Sound Quality is Poor

- **Replace Batteries:** Low batteries can affect sound quality. Try replacing them.
- **Environmental Factors:** Ensure the doll is not exposed to extreme temperatures or moisture.

SPECIFICATIONS

Brand	Jakks Pacific
Model Number	225136
Product Dimensions (L x W x H)	12.06 x 19.68 x 38.1 cm (4.75 x 7.75 x 15 inches)
Weight	720 grams (1.59 lbs)
Material	Plastic
Battery Type	2 x AAA (included)
Recommended Age	36 months - 83 years
Number of Pieces	8 (Doll and accessories)

WARRANTY AND SUPPORT

Warranty information for Jakks Pacific products is typically provided with the product packaging at the time of purchase. Please refer to the documentation included in your doll's box for specific warranty details and duration. For further assistance, product support, or to inquire about replacement parts, please contact Jakks Pacific customer service directly. Contact information can usually be found on the product packaging or their official website.



