

[Manuals.plus](#) /

› [House Nordic](#) /

› House Nordic Melbourne Cabinet - Instruction Manual

House Nordic 3001080

House Nordic Melbourne Cabinet

Model: 3001080

Brand: House Nordic

INTRODUCTION

Thank you for choosing the House Nordic Melbourne Cabinet. This black display cabinet with mesh doors is designed to offer both functionality and aesthetic appeal to your living space. This manual provides essential information for the safe assembly, operation, and maintenance of your new cabinet.



Figure 1: Front view of the House Nordic Melbourne Cabinet, showcasing its black finish and mesh doors.

Safety Warnings

- Always assemble the cabinet on a stable, flat surface.
- Use appropriate safety equipment when handling heavy components.
- Exercise caution with pinch points when opening and closing the mesh doors.
- Keep the cabinet away from direct sunlight to prevent heat exposure and potential material degradation.

SETUP AND ASSEMBLY

The Melbourne Cabinet requires assembly. Please follow these general steps. For detailed instructions, refer to the separate assembly guide included in the packaging.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in your assembly guide.
2. **Prepare Workspace:** Ensure you have a clean, stable, and flat surface large enough for assembly.
3. **Assemble Frame:** Connect the main frame components according to the diagrams.
4. **Attach Legs:** Securely fasten the cabinet legs to the base.
5. **Install Shelves:** Place the adjustable shelves at your desired height.
6. **Mount Doors:** Attach the mesh doors, ensuring they swing freely and align correctly. Adjust hinges if necessary.
7. **Secure Cabinet:** For added stability and safety, especially in homes with children or pets, consider anchoring the cabinet to a wall using appropriate hardware (not included unless specified in assembly guide).



Figure 2: Dimensions of the Melbourne Cabinet, useful for planning placement and assembly.

OPERATING INSTRUCTIONS

The Melbourne Cabinet is designed for display and storage purposes. Its mesh doors allow for visibility of contents

while providing a secure enclosure.

- **Opening/Closing Doors:** Gently pull the handles to open the doors. Push firmly to close until the magnetic catches engage. Avoid slamming the doors to prevent damage.
- **Adjusting Shelves:** The cabinet features adjustable shelves. To reposition, carefully remove items, lift the shelf, and place it on the desired shelf pins. Ensure the shelf is level and securely seated before placing items on it.
- **Loading Capacity:** Distribute weight evenly on shelves. Avoid overloading to prevent bowing or damage to the cabinet structure. Refer to the assembly guide for specific weight limits per shelf if available.



Figure 3: Cabinet with doors open, revealing the internal shelving for storage.



Figure 4: Cabinet with doors open, demonstrating its use for displaying various items.

Proper care will ensure the longevity and appearance of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish. Dry immediately with a clean cloth.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth to prevent dust buildup.
- **Spills:** Clean spills immediately to prevent staining or damage to the finish.
- **Environmental Factors:** As mentioned in safety warnings, keep the cabinet away from direct sunlight and extreme temperature fluctuations to prevent warping or fading. Maintain a stable indoor environment.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly/unstable.	Uneven floor; loose fasteners; incorrect assembly.	Ensure cabinet is on a flat surface. Check and tighten all assembly screws. If applicable, use leveling feet or shims.
Doors do not close properly or are misaligned.	Loose hinge screws; cabinet not level; obstruction.	Check and tighten hinge screws. Ensure the cabinet is level. Remove any obstructions.
Scratches or minor damage to finish.	Accidental impact; abrasive cleaning.	Use a furniture repair kit or touch-up paint matching the black finish. Avoid harsh cleaning methods.

PRODUCT SPECIFICATIONS

Brand	House Nordic
Model Number	3001080
Color	Black
Product Dimensions (L x W x H)	80 x 40 x 120 cm
Weight	23.53 kg
Manufacturer	House Nordic
Mounting Type	Floor Mount
Room Type	Living Room (Recommended)
Door Style	Open Frame (Mesh)

Finish Type	Painted
Number of Doors	2
Number of Shelves	1 (Adjustable)

WARRANTY AND SUPPORT

House Nordic products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official House Nordic website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact your retailer or House Nordic customer support. When contacting support, please have your model number (3001080) and proof of purchase readily available.

Contact Information:

Retailer: Refer to your purchase receipt for retailer contact details.

House Nordic: Visit www.housenordic.dk (or relevant regional website) for support information.