

[manuals.plus](#) /

› [KIDYWOLF](#) /

› [KIDYWOLF KIDYCAM Waterproof Kids Digital Camera User Manual](#)

KIDYWOLF KIDYCAM

KIDYWOLF KIDYCAM Waterproof Kids Digital Camera User Manual

Model: KIDYCAM

IMPORTANT SAFETY INFORMATION

Please read this section carefully before using the KIDYCAM camera.

- Age Recommendation:** This product is not suitable for children under 3 years of age due to potential small parts.
- Waterproof Use:** Ensure all ports and covers are securely closed before submerging the camera in water. The camera is waterproof up to 1 meter. Exceeding this depth or using it without proper sealing may cause damage.
- Battery Safety:** Use only the provided charging cable and a compatible power source. Do not attempt to open or replace the internal rechargeable battery.
- Cleaning:** Clean the camera with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- Supervision:** Adult supervision is recommended during use, especially when near water.

1. PRODUCT OVERVIEW

The KIDYWOLF KIDYCAM is a durable and user-friendly digital camera designed for children aged 3 to 12, allowing them to capture photos and videos of their adventures, even underwater.

1.1 Camera Components



Image 1.1: Front View. This image displays the front of the KIDYCAM camera, highlighting the main lens, the integrated flash, and the KIDYWOLF logo. The camera is encased in a protective cyan silicone cover, designed for easy grip and durability.



Image 1.2: Back View. This image shows the rear of the KIDYCAM, featuring the 2-inch LCD screen where captured images and videos are displayed. To the right of the screen are the control buttons for navigation and operation.

1. **Lens:** Main camera lens for capturing photos and videos.
2. **Flash:** Provides additional light in low-light conditions.
3. **LCD Screen (2"):** Displays live view, captured media, and menu options.
4. **Control Buttons:** For power, shutter, mode selection, navigation, and menu access.
5. **USB Port:** For charging and data transfer (typically located under a protective flap).
6. **SD Card Slot:** For expanding storage capacity (typically located under a protective flap).
7. **Microphone:** For recording audio with videos.

1.2 Key Features

- **Waterproof Design:** Submersible up to 1 meter, ideal for pool or beach use.
- **Easy Grip:** Ergonomic design with a durable silicone casing for small hands.
- **High Resolution:** 8 Megapixel photo resolution and 1080p video recording at 30 frames per second.
- **Internal Memory:** 16GB built-in storage.
- **Expandable Storage:** Supports external SD cards (not included).
- **Rechargeable Battery:** Integrated lithium battery for extended use.
- **Creative Effects:** Includes fun photo effects and backgrounds.

2. SETUP

2.1 Charging the Battery

The KIDYCAM comes with a built-in rechargeable lithium battery. Before first use, fully charge the camera.

1. Locate the USB port, usually protected by a rubber flap.
2. Connect the provided USB cable to the camera's USB port.
3. Connect the other end of the USB cable to a compatible USB power adapter (e.g., computer USB port, wall charger).
4. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.
5. Charging typically takes 2-3 hours.

2.2 Power On/Off

- **To Power On:** Press and hold the Power button (usually marked with a power symbol) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

2.3 Memory Management

The camera has 16GB of internal memory. For additional storage, an SD card can be inserted.

1. **Inserting an SD Card:** Locate the SD card slot, usually next to the USB port under a protective flap. Gently insert a compatible microSD card (up to 32GB, not included) until it clicks into place.
2. **Removing an SD Card:** Gently push the SD card inward until it clicks, then release. The card will partially eject, allowing you to pull it out.
3. **Formatting an SD Card:** It is recommended to format a new SD card using the camera's menu system for optimal performance. Refer to the 'Menu Navigation' section for instructions.

3. OPERATING INSTRUCTIONS

3.1 Taking Photos

1. Turn on the camera.
2. Press the Mode button (if available) to switch to Photo mode. The screen will display a camera icon.
3. Frame your shot using the LCD screen.
4. Press the Shutter button (often a prominent button on top or front) to capture the photo.

3.2 Recording Videos

1. Turn on the camera.
2. Press the Mode button to switch to Video mode. The screen will display a video camera icon.
3. Press the Shutter button once to start recording. A recording indicator (e.g., red dot, timer) will appear on the screen.
4. Press the Shutter button again to stop recording.

3.3 Playback

1. Turn on the camera.
2. Press the Mode button to switch to Playback mode (often indicated by a play icon).

3. Use the Left/Right navigation buttons to scroll through your photos and videos.
4. To view a video, select it and press the Shutter/OK button to start playback. Press again to pause/resume.

3.4 Menu Navigation and Special Effects

1. In Photo or Video mode, press the Menu button (if available) to access settings.
2. Use the Up/Down navigation buttons to scroll through menu options.
3. Press the Shutter/OK button to select an option.
4. Look for options like 'Effects', 'Filters', or 'Backgrounds' to apply creative enhancements to your photos and videos.
5. Press the Menu button again to exit the menu.

4. MAINTENANCE

4.1 Cleaning the Camera

- Wipe the camera body with a soft, slightly damp cloth. Do not use harsh detergents or solvents.
- For the lens, use a specialized lens cleaning cloth to avoid scratches.
- Ensure the camera is dry before closing any protective flaps or using it near water.

4.2 Maintaining Waterproofing

- Always ensure the USB port and SD card slot covers are firmly sealed before exposing the camera to water.
- Regularly check the rubber seals on these covers for any signs of wear or damage. If seals are compromised, the camera's waterproof integrity may be affected.
- After use in saltwater, rinse the camera with fresh water and dry thoroughly.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted.	Charge the camera fully using the provided USB cable.
Cannot take photos/videos.	Memory is full.	Delete unwanted files or insert an SD card.
Images are blurry.	Lens is dirty or scratched.	Clean the lens with a soft, lint-free cloth. Ensure proper lighting.
Camera freezes or is unresponsive.	Software glitch.	Press and hold the Power button for 10-15 seconds to force a restart.
Water entered the camera.	Protective flaps were not sealed properly.	Immediately power off the camera. Do not attempt to charge or use. Contact customer support.

6. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	KIDYCAM
Brand	KIDYWOLF
Effective Still Resolution	8 Megapixels
Video Resolution	1080p at 30fps
Screen Size	2 inches
Internal Memory	16GB
External Memory	SD card slot (card not included)
Battery Type	Rechargeable Lithium Battery
Waterproof Rating	Up to 1 meter
Main Material	Plastic
Color	Cyan
Sensor Technology	CCD
Supported File Format	JPEG (for photos)
Maximum Aperture	1.8f
Form Factor	Compact
Recommended Age	3-12 years

7. WARRANTY AND SUPPORT

KIDYWOLF stands behind the quality of its KIDYCAM devices. All KIDYCAM cameras are guaranteed, and KIDYWOLF offers accessible and attentive after-sales service.

- **Warranty:** Please refer to your purchase documentation for specific warranty terms and duration.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact KIDYWOLF customer service through their official website or the retailer where the product was purchased.
- **Satisfaction Guarantee:** KIDYWOLF offers a 'satisfied or refunded' policy.