

[Manuals.plus](#) /

› [Bosch Home Appliances](#) /

› Bosch ErgoMaster Series 6 1000W Stainless Steel Immersion Blender Instruction Manual

Bosch Home Appliances MSM6M622

Bosch ErgoMaster Series 6 1000W Stainless Steel Immersion Blender Instruction Manual

Model: MSM6M622 | Brand: Bosch Home Appliances

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bosch ErgoMaster Series 6 1000W Immersion Blender. Please read these instructions carefully before first use and keep them for future reference.

Experience enhanced pressure and speed with the Bosch ErgoMaster Series 6 Immersion Blender. Featuring a durable 1000W high-performance motor with air cooling, designed for longevity. Includes a 10-year motor warranty. For full warranty conditions, visit www.bosch-home.com.

IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the appliance.

- Read all instructions before using the appliance.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving blades during operation to prevent injury.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not immerse the motor unit in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Blades are sharp. Handle with care.

PRODUCT COMPONENTS

Your Bosch ErgoMaster Series 6 Immersion Blender comes with several components to enhance your cooking experience.



Image Description: A complete set of the Bosch ErgoMaster Series 6 Immersion Blender. It includes the main motor unit, a stainless steel blender foot, a whisk attachment, a universal chopper with a blade, and a measuring beaker. All components are laid out on a white surface.

- **Motor Unit:** The main body containing the 1000W high-performance motor and dynamic speed control.
- **Stainless Steel Blender Foot:** For blending soups, sauces, and smoothies directly in pots or bowls. Features a blending bell with FlowBooster lines and extra-sharp 4-blade stainless steel knives.
- **Whisk Attachment:** Ideal for whipping cream, beating egg whites, and mixing light batters.

- **Universal Chopper:** Equipped with an ice crush blade, suitable for chopping herbs, nuts, cheese, and crushing ice.
- **Measuring Beaker:** A 600ml capacity beaker for blending and measuring ingredients.

SETUP AND ASSEMBLY

Before first use, clean all detachable parts as described in the "Cleaning and Maintenance" section.

1. **Attaching the Blender Foot:** Align the blender foot with the motor unit and push it on until it clicks into place. To detach, press the release buttons on the side of the motor unit and pull the foot off.



Image Description: A two-panel image demonstrating how to attach and detach accessories. The left panel shows the blender foot being connected to the motor unit, and the right panel shows the chopper attachment being connected, both indicating a simple click mechanism.

2. **Attaching the Whisk:** Insert the whisk into the gear attachment, then attach the gear attachment to the motor unit until it clicks.
3. **Attaching the Chopper:** Place the blade onto the central pin in the chopper bowl. Add ingredients, then place the chopper lid onto the bowl. Finally, attach the motor unit to the chopper lid until it clicks.

OPERATING INSTRUCTIONS

Ensure the appliance is correctly assembled and plugged into a suitable power outlet before operation.

Dynamic Speed Control

The Bosch ErgoMaster Series 6 features intuitive, one-handed dynamic speed control.

1. **Unlock:** Press the unlock button on the handle with your thumb.
2. **Activate:** While holding the unlock button, press the main control lever. The motor will start.
3. **Adjust Speed:** Increase pressure on the control lever to increase the blending speed. Release pressure to decrease speed or stop.



Image Description: A close-up image showing a hand holding the immersion blender. The image highlights the dynamic speed control lever and the unlock button, illustrating how to operate the device with one hand.

Using the Immersion Blender

- For best results, immerse the blender foot into the ingredients before starting the motor.
- Move the blender foot up and down gently to ensure even blending.
- Do not operate the blender continuously for more than 1 minute. Allow it to cool down if used for extended periods.



Image Description: A four-panel image showcasing the versatility of the immersion blender. It shows the chopper attachment being used for herbs, the whisk for egg whites, the blender foot for a green sauce, and the chopper for crushing ice for a drink.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your appliance. Always unplug the appliance before cleaning.

- **Motor Unit:** Wipe with a damp cloth. Do not immerse in water.
- **Blender Foot, Whisk, Chopper Bowl, Blades, Measuring Beaker:** These parts are dishwasher safe. Alternatively, they can be rinsed under running water with a mild detergent. Be extremely careful when handling blades as they are very sharp.
- For quick cleaning of the blender foot, immerse it in a glass of warm water with a drop of dish soap and briefly activate the blender. Then rinse thoroughly.



Image Description: A two-panel image demonstrating easy cleaning. The left panel shows the blender foot being rinsed under a running tap, and the right panel shows the blender foot placed in a dishwasher rack.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; unlock button not pressed; attachment not correctly secured.	Check power connection; ensure unlock button is pressed simultaneously with the control lever; re-attach accessory until it clicks.
Motor stops during operation.	Overheating due to continuous use or processing too hard ingredients.	Unplug and let the appliance cool down for at least 30 minutes. Reduce load or processing time.

Problem	Possible Cause	Solution
Poor blending results.	Insufficient liquid; ingredients too large; blades dull.	Add more liquid; cut ingredients into smaller pieces; ensure blades are clean and free of debris.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Bosch Home Appliances
Model Number	MSM6M622
Color	Stainless Steel / Black
Product Dimensions (L x W x H)	7.8 x 6 x 39.5 cm
Item Weight	700 grams
Capacity (Measuring Beaker)	600 Milliliters
Power	1000 Watts
Voltage	220 Volts
Material	Stainless Steel
Special Features	Blending bell with FlowBooster lines, Control lever with ignition lock, Pressure-activated control lever, 1000W high-performance motor with air cooling, Ceramic coupling
Included Components	Ice crush blade, Whisk, Chopper, Stainless steel blender foot, Measuring beaker
Power Source	Corded Electric
Country of Origin	Slovenia

WARRANTY AND SUPPORT

Your Bosch ErgoMaster Series 6 Immersion Blender comes with a **10-year motor warranty**, ensuring long-term reliability and performance.



Image Description: A woman is shown happily using the Bosch immersion blender in a kitchen setting, blending ingredients in a pot. The image prominently features a "10 Years Motor Warranty" logo, emphasizing the product's durability.

For detailed warranty conditions, product registration, or to contact customer support, please visit the official Bosch Home Appliances website: www.bosch-home.com.

Spare parts availability information is currently unavailable.

