

Nerf F8203

Nerf LMTD Star Trek Starfleet Type 3 and Type 2 Phaser Blasters User Manual

Brand: Nerf | Model: F8203

1. IMPORTANT SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

EYEWEAR: Always wear eye protection when using this product to prevent injury. Do not modify darts or blasters. Do not aim at eyes or face. Use only official Nerf darts.

2. WHAT'S INCLUDED

Your package contains the following items:

- 1x Nerf LMTD Star Trek Starfleet Type 3 Motorized Blaster
- 1x Nerf LMTD Star Trek Starfleet Type 2 Phaser
- 7x Official Nerf Elite Foam Darts
- Instruction Manual



Image 2.1: The Nerf LMTD Star Trek Starfleet Type 3 Blaster (top) and Type 2 Phaser (bottom) included in the set.

3. SETUP

3.1. Type 3 Phaser Battery Installation

The Type 3 Phaser requires 4x 1.5V C alkaline batteries (not included) for motorized dart blasting, lights, and sounds.

1. Locate the battery compartment on the Type 3 Phaser, typically near the butt of the blaster.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 4x 1.5V C alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image 3.1: Side view of the Type 3 Phaser, showing the general area for battery compartment access.

3.2. Dart Loading

Use only Official Nerf Elite foam darts with these blasters.

Type 3 Phaser (Motorized Blaster)

1. Locate the internal 5-dart clip opening on the side of the blaster.
2. Insert up to 5 Nerf Elite darts into the clip, pushing them in until they are fully seated.

Type 2 Phaser (Manual Blaster)

1. Locate the dart loading port at the front of the blaster.
2. Insert one Nerf Elite dart into the port until it is fully seated.



Image 3.2: The Type 2 Phaser, showing the dart loading area at the front.

4. OPERATING INSTRUCTIONS

4.1. Type 3 Phaser (Motorized Blaster)

The Type 3 Phaser features motorized dart blasting, light-up effects, and authentic sounds from the Star Trek: First Contact film.

1. Ensure batteries are correctly installed (refer to Section 3.1).
2. Load up to 5 darts into the internal clip (refer to Section 3.2).
3. Locate the power switch. This blaster may feature a 'Cosplay Mode' (lights and sounds only) and a 'Full Mode' (lights, sounds, and motor). Select your desired mode.
4. Press and hold the acceleration button (usually located on the handle) to power up the motor. You will hear the motor whirring.
5. While holding the acceleration button, pull the trigger to fire one dart. The blaster will emit phaser sounds and light effects.
6. Release the acceleration button and trigger when finished firing.

Your browser does not support the video tag.

Video 4.1: Official demonstration of the Nerf LMTD Star Trek Starfleet Phasers, showcasing the Type 3 blaster's motorized firing and light effects.

4.2. Type 2 Phaser (Manual Blaster)

The Type 2 Phaser is a single-shot manual blaster.

1. Load one dart into the front loading port (refer to Section 3.2).
2. Pull back the priming handle, located at the rear of the blaster, until it clicks into place.
3. Push the priming handle forward to return it to its original position. The blaster is now primed.

4. Press the trigger to launch the dart.

5. MAINTENANCE

- **Cleaning:** Wipe the blasters with a clean, damp cloth. Do not immerse in water.
- **Dart Care:** Store darts in a clean, dry place. Avoid bending or crushing darts, as this can affect performance and accuracy.
- **Battery Storage:** Remove batteries from the Type 3 Phaser if it will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **Type 3 Phaser not firing or motor not spinning:** Check battery installation and ensure batteries are fresh. Make sure the power switch is in 'Full Mode' and the acceleration button is fully pressed before pulling the trigger.
- **Darts jamming:** Ensure only official Nerf Elite darts are used. Check darts for damage or deformation. Do not overfill the Type 3 Phaser's internal clip (maximum 5 darts). For the Type 2 Phaser, ensure the priming handle is fully pulled back and pushed forward.
- **No lights or sounds on Type 3 Phaser:** Check battery installation. Ensure the power switch is not in the 'OFF' position.

7. SPECIFICATIONS

Brand	Nerf
Model Number	F8203
Age Range	8+ Years
Included Components	1x Type 3 Blaster, 1x Type 2 Phaser, 7x Elite Darts
Type 3 Blaster Battery Type	4x 1.5V C Alkaline Batteries (not included)
Material Type	Plastic
Item Weight	2.72 kg (approx. 6 lbs)
Item Dimensions (L x W x H)	35.51" x 3.27" x 10.51" (Type 3 Blaster)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Nerf/Hasbro website. Specific warranty terms may vary by region and retailer.

Online Support: [Hasbro Customer Service](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question