

Generic CX-NR11, NSX-R20, CX-LEM52, XR-EM30, XR-EM31, XR-EM20, CX-LEM30, CX-LEM31, XR-EC10, XR-EC12, XR-TC80, CX-LEM50, CX-LEM20

Instruction Manual for Generic Replacement Remote Control

Compatible with AIWA Compact Disc CD Stereo Systems including models CX-NR11, NSX-R20, CX-LEM52, XR-EM30, XR-EM31, XR-EM20, CX-LEM30, CX-LEM31, XR-EC10, XR-EC12, XR-TC80, CX-LEM50, CX-LEM20, NSX-R11, NSX-R17.

INTRODUCTION

This document provides essential information for the setup, operation, and maintenance of your Generic replacement remote control for AIWA Compact Disc CD Stereo Systems. This remote is designed to function as a direct replacement for the original remote controls of the listed compatible models. Please note that while this remote is highly compatible, some advanced or specific functions of your original system might not be fully supported. This remote operates using Infrared (IR) technology and cannot be programmed.

Important Note: As indicated by the manufacturer, this product typically does not include a printed instruction manual. This digital guide is provided to assist you with basic usage.

SETUP

1. Battery Installation

The remote control requires two (2) AA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Rear view of the remote with the battery cover removed, illustrating the battery placement area.



Figure 2: Rear view of the remote with the battery cover installed, ready for use.

2. First Use

Once batteries are installed, the remote is ready for use. Point the remote control directly at your AIWA Compact Disc CD Stereo System and press any button to test its functionality. No programming or pairing is required as it is an Infrared (IR) remote.

OPERATING INSTRUCTIONS

This section details the primary functions of the remote control buttons. Refer to the image below for button layout.



Figure 3: Front view of the remote control with button layout.

Button	Function
POWER	Turns the stereo system on or off.
FUNCTION	Cycles through input sources (e.g., CD, Tuner, Tape, Aux).
Numeric Keypad (0-9, +10)	Direct selection of CD tracks, radio presets, or other numerical inputs. The "+10" button adds 10 to the current track/preset number.
BAND	Switches between FM and AM radio bands.
PRESET (Up/Down)	Navigates through stored radio presets.
TUNE (Up/Down)	Manually tunes radio frequencies up or down.
PLAY/PAUSE (▶/)	Starts or pauses CD playback.
STOP ()	Stops CD playback.
SKIP (/)	Skips to the next or previous track on a CD.
REWIND/FAST FORWARD (/)	Fast forwards or rewinds within a track.
SET	Used for confirming settings, often in conjunction with navigation buttons.
CLEAR	Clears current input or selection.
MONO TUNER	Switches the tuner between stereo and mono reception.
T-BASS	Activates or deactivates the bass boost feature.
TREBLE	Adjusts the treble level.

Button	Function
VOLUME (+/-)	Increases or decreases the master volume.
DISC DIRECT PLAY (1, 2, 3)	Directly selects and plays a specific disc in a multi-disc changer (if applicable to your system).
CLOCK	Accesses or sets the system clock.

For detailed operation of specific features of your AIWA stereo system, please refer to the original user manual of your stereo system.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- Avoid getting moisture into the button crevices or battery compartment.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both AA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Check battery polarity (+/-). Replace with fresh AA batteries.
Remote not working.	Obstruction between remote and stereo system.	Ensure a clear line of sight between the remote's IR emitter and the stereo system's IR receiver.
Remote not working.	Remote is too far from the stereo system.	Move closer to the stereo system. The effective range is typically up to 20 feet (6 meters).
Certain functions do not work.	The replacement remote may not support all original functions.	This is a common limitation of universal or replacement remotes. Refer to your stereo system's original manual for functions not covered.

Problem	Possible Cause	Solution
Remote is unresponsive after a drop.	Internal damage.	If troubleshooting steps above do not resolve the issue, the remote may be damaged and require replacement.

SPECIFICATIONS

- Model Compatibility:** AIWA CX-NR11, NSX-R20, CX-LEM52, RC-CAS07, XR-EM30, XR-EM31, XR-EM20, CX-LEM30, CX-LEM31, RC-CAS05, XR-EC10, XR-EC12, XR-TC80, CX-LEM50, CX-LEM20, NSX-R11, NSX-R17 Compact Disc CD Stereo Systems
- Power Source:** 2 x AA Batteries (not included)
- Connectivity Technology:** Infrared (IR)
- Controller Type:** Button Control
- Special Feature:** IR remote, cannot be programmed
- Manufacturer:** SZHKHDX
- Country of Origin:** China
- ASIN:** B0BBN5F2XG

WARRANTY AND SUPPORT

As a generic replacement product, specific warranty information may vary. Please refer to the seller's return policy or contact the seller directly for any warranty-related inquiries or support needs. The manufacturer, SZHKHDX, typically handles support through the point of purchase.

For further assistance, you may contact the seller, SZHKHDX, through the Amazon platform where the product was purchased. Please provide your order number and a detailed description of the issue.

© 2024 Generic Remote Control. All rights reserved. AIWA and associated model names are trademarks of their respective owners and are used here for compatibility reference only.