

**Timex TW2V55200JR****Timex UFC Men's Colossus 45mm Watch Instruction Manual**

Model: TW2V55200JR | Brand: Timex

**INTRODUCTION**

---

This manual provides comprehensive instructions for the Timex UFC Men's Colossus 45mm Watch. Designed for durability and functionality, this timepiece features an official Timex X UFC collaboration, a robust 45mm octagonal case, a comfortable black 8-inch strap, and a mineral glass lens. It is water resistant up to 100 meters (328 feet), suitable for splashes or brief immersion, but not for swimming or bathing.



Figure 1: Front view of the Timex UFC Men's Colossus 45mm Watch.

## SETUP AND INITIAL CONFIGURATION

Your Timex UFC Colossus watch comes with a pre-installed Lithium Metal battery (CR2025). Before first use, it is recommended to set the correct time and date.

### Setting Time and Date

- Accessing Settings:** Press the **MODE** button (typically on the bottom left) repeatedly until you reach the time setting mode. The seconds display will likely flash.
- Adjusting Values:** Use the **START/STOP** button (top right) to increase the flashing value and the **RESET** button (bottom right) to decrease it or move to the next setting.
- Navigating Settings:** Press the **NEXT** button (top left) to cycle through seconds, hours, minutes, year,

month, and day settings.

4. **Exiting Settings:** Once all settings are adjusted, press the **MODE** button again to return to the normal time display.

*Note: Some users may find the initial setup challenging. Refer to the detailed button functions in the 'Operating Instructions' section for further assistance.*



Figure 2: Side view of the watch, highlighting button placement.

## OPERATING INSTRUCTIONS

The Timex UFC Colossus watch offers various functions accessible via its dedicated buttons.

### Button Functions Overview

- **MODE Button:** Cycles through different modes such as Time, Stopwatch, Alarm, and World Time.
- **NEXT Button:** Used to advance through settings or display options within a mode.
- **START/STOP Button:** Initiates or pauses functions like the stopwatch, or adjusts values during setting.
- **RESET Button:** Resets functions (e.g., stopwatch) or moves to the next setting option.
- **INDIGLO Button:** Activates the Indiglo night-light for illumination in low-light conditions.

## Specific Functions

- **Indiglo Night-Light:** Press the button labeled "INDIGLO" (top left) to illuminate the watch face. The light duration is typically a few seconds.
- **Stopwatch:**
  - a. Press **MODE** until "STOP" or "STW" appears.
  - b. Press **START/STOP** to begin timing.
  - c. Press **START/STOP** again to pause.
  - d. Press **RESET** to clear the stopwatch.
  - e. Use **SPLIT/SET** for lap times if available in this model.
- **Alarm:**
  - a. Press **MODE** until "ALARM" or "ALM" appears.
  - b. Use **NEXT** to select the alarm time.
  - c. Use **START/STOP** and **RESET** to set the desired alarm time.
  - d. Activate/deactivate the alarm using the appropriate button (refer to watch face markings, e.g., "SILENT ALARM CHIME").
- **World Time:**
  - a. Press **MODE** until "WORLD TIME" or "WT" appears.
  - b. Use **NEXT** to cycle through different city codes/time zones.
  - c. The watch will display the time for the selected city.



Figure 3: Detailed view of the watch face and digital display.

## MAINTENANCE

---

Proper care will ensure the longevity and performance of your Timex UFC Colossus watch.

### Cleaning

Wipe the watch case and strap with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid harsh chemicals or abrasive materials.

### Water Resistance

This watch is water resistant to 100 meters (328 feet). This means it can withstand splashes, rain, and brief immersion in water. **It is NOT suitable for swimming, diving, or bathing.** Do not operate buttons while the watch is wet or submerged, as this can compromise the water resistance seal.

### Battery Replacement

The watch uses a CR2025 Lithium Metal battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.



Figure 4: Rear view of the watch, showing the case back.

## TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions.

Problem	Possible Cause / Solution
<b>Difficulty Setting Time/Date</b>	Ensure you are in the correct setting mode. Refer to the 'Setting Time and Date' section and carefully follow the button press sequence. Practice may be required.
<b>Indiglo Light Not Bright Enough</b>	The brightness of the Indiglo light is fixed. If it appears significantly dimmer than usual, the battery may be low and require replacement.
<b>Watch Not Functioning</b>	Check if the battery is depleted. If the watch has been exposed to extreme conditions or impact, internal damage may have occurred. Contact Timex customer support.

Problem	Possible Cause / Solution
<b>Water Inside Watch</b>	Immediately take the watch to a qualified service center. This indicates a breach in the water resistance seal, possibly due to operating buttons underwater or damage to the case/gaskets.

## SPECIFICATIONS

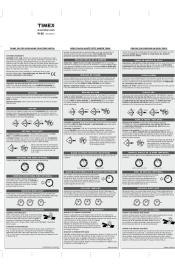
- Model Number:** TW2V55200JR
- Case Diameter:** 45mm
- Strap Length:** 8 inches (Black)
- Lens Material:** Mineral Glass
- Water Resistance:** 100m (328ft)
- Battery Type:** 1 Lithium Metal battery (CR2025) (included)
- Product Dimensions:** 1.57 x 3.94 x 2.36 inches
- Item Weight:** 7.76 ounces
- Manufacturer:** Timex
- First Available:** August 23, 2022

## WARRANTY AND SUPPORT

For detailed warranty information, product registration, or to contact customer support, please visit the official Timex website. Keep your proof of purchase for warranty claims.

Official Timex Website: [www.timex.com](http://www.timex.com)

## Related Documents

	<p><a href="#"><u>Timex Kids Digital Watch User Guide - Operation and Features</u></a></p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p><a href="#"><u>Timex Marathon Digital Watch User Manual and Operating Instructions</u></a></p> <p>Comprehensive user guide for the Timex Marathon Digital watch. Learn how to set time, alarm, stopwatch, use INDIGLO night-light, and understand water resistance. Includes safety warnings and warranty information.</p>
	<p><a href="#"><u>Timex Watch User Manual and Warranty Information</u></a></p> <p>A comprehensive guide for Timex watches, covering setup, operation, features like INDIGLO night-light, bracelet adjustment, water and shock resistance, battery care, and international warranty details.</p>



### [Timex Watch User Manual: Features, Operation, and Settings](#)

Comprehensive user manual for Timex watches, covering features, basic operation, time/date settings, chronograph, timer, alarms, INDIGLO night-light, water resistance, and battery safety.