

Timex TW5M53100

Timex UFC Rematch Digital Watch User Manual

INTRODUCTION

Welcome to your Timex UFC Rematch Digital Watch. This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your watch to ensure optimal performance and longevity.

SETUP

1. Initial Power On & Time Setting

Upon first use or after a battery change, the watch may require time and date setting. Follow these steps:

1. **Press and hold the MODE button** (typically located on the bottom left) until the time display flashes.
2. **Use the START/STOP button** (typically top right) to adjust the flashing digit.
3. **Press the LAP/RESET button** (typically bottom right) to move to the next digit or setting (e.g., hours, minutes, 12/24-hour format, year, month, day).
4. Once all settings are correct, **press the MODE button** to exit the setting mode.



Image: Side view of the watch, highlighting the control buttons used for setting adjustments.

2. Adjusting the Strap

The watch features a durable plastic strap with a buckle clasp. To adjust the fit to your wrist:

1. Open the buckle.
2. Position the watch on your wrist.
3. Insert the pin of the buckle into one of the holes on the strap to achieve a comfortable and secure fit.



OPERATING YOUR WATCH

1. Basic Time Display

The watch displays the current time, typically in hours, minutes, and seconds, along with the day and date in its primary mode.

2. Indiglo Night-Light

To activate the Indiglo night-light, **press the INDIGLO button** (typically top left). The display will illuminate for a few seconds, allowing clear visibility in low-light conditions.

3. Chronograph (Stopwatch)

Use the chronograph to measure elapsed time.

1. **Press the MODE button** repeatedly until "CHRONO" or "STOPWATCH" appears on the display.
2. **Press START/STOP** to begin timing.
3. **Press START/STOP** again to pause timing.
4. **Press LAP/RESET** to reset the chronograph to zero.

4. Countdown Timer

The countdown timer allows you to set a specific duration and be alerted when it expires.

1. **Press the MODE button** repeatedly until "TIMER" or "CDT" appears.
2. **Press and hold LAP/RESET** to set the desired countdown time. Use START/STOP to adjust digits and LAP/RESET to move between them.
3. **Press START/STOP** to begin the countdown.
4. An audible alarm will sound when the countdown reaches zero.

5. Alarm Function

Set an alarm to sound at a specific time.

1. **Press the MODE button** repeatedly until "ALARM" appears.
2. **Press and hold LAP/RESET** to set the alarm time. Use START/STOP to adjust digits and LAP/RESET to move between them.
3. **Press START/STOP** to activate or deactivate the alarm. An alarm icon will appear on the display when active.

6. Dual Time

The Dual Time feature allows you to track a second time zone simultaneously.

1. **Press the MODE button** repeatedly until "T2" or "DUAL TIME" appears.
2. **Press and hold LAP/RESET** to set the second time zone. Use START/STOP to adjust digits and LAP/RESET to move between them.
3. **Press MODE** to exit the setting mode.

MAINTENANCE

1. Cleaning

Regularly clean your watch with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the watch case, crystal, or strap.

2. Water Resistance

This watch is water resistant up to 50 meters (5 ATM). It is suitable for short periods of recreational swimming but is not designed for diving or snorkeling. To maintain water resistance, avoid pressing any buttons while the watch is submerged in water.

3. Battery Replacement

The watch is powered by a CR2025 cell battery. When the display dims, functions become erratic, or the watch stops operating, the battery may need replacement. It is highly recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain the watch's water resistance.



Image: Detailed view of the watch's stainless steel case back, indicating water resistance and battery type (CR2025).

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery as described in the Maintenance section.
- **Time is incorrect:** Reset the time and date following the instructions in the "Setup" section. Ensure the

12/24-hour format is set correctly if applicable.

- **Buttons are unresponsive:** Try pressing the buttons firmly. If the issue persists, a battery replacement might be necessary, or the watch may require professional servicing.
- **Condensation inside the watch:** If condensation appears under the crystal, have the watch inspected by a professional immediately to prevent potential internal damage.

SPECIFICATIONS

Feature	Detail
Model Number	TW5M53100
Display Type	Digital (LCD)
Movement Type	Quartz
Case Diameter	50 mm
Case Thickness	15 mm
Strap Material	Plastic (Resin)
Strap Width	20.5 cm (205 mm)
Strap Length	21 cm (210 mm)
Water Resistance	50 Meters (5 ATM)
Weight	60 Grams
Battery Type	CR2025 (included)
Special Features	Alarm, Chronograph, Countdown Timer, Dual Time, Indiglo Light

WARRANTY INFORMATION

This Timex UFC Rematch Digital Watch comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For specific warranty claims or service, please refer to the official Timex website or contact their authorized customer support channels.

CUSTOMER SUPPORT

For further assistance, detailed instructions, or service inquiries, please visit the official Timex website. Keep your purchase receipt as proof of purchase for warranty purposes.



Image: Front view of the Timex UFC Rematch Digital Watch, displaying the current time.