

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex TW5M53900 Men's Wristwatch Instruction Manual](#)

## Timex TW5M53900

# Timex TW5M53900 Men's Wristwatch Instruction Manual

Model: TW5M53900 | Brand: Timex

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Timex TW5M53900 Men's Wristwatch. Please read this manual carefully to ensure proper use and longevity of your timepiece.

The Timex TW5M53900 is a digital watch equipped with various functions including a Day-Date display, Chronograph, Countdown timer, Dual Time zone, and Alarm.

## SETUP

### Initial Power On and Time Setting

Your watch comes with a pre-installed battery. Upon first use, you may need to activate the display or set the current time and date.

- Identify Buttons:** Locate the control buttons on the sides of the watch case. Typically, these are labeled or have distinct functions (e.g., MODE, SET, START/STOP, LIGHT). Refer to the image below for button identification.
- Enter Time Setting Mode:** Press the **MODE** button repeatedly until the time setting mode is displayed. Digits for hours or minutes will usually flash.
- Adjust Time:** Use the **SET** or **START/STOP** buttons to adjust the flashing digits (hours, minutes, seconds). Press **MODE** again to move to the next setting (e.g., from hours to minutes).
- Set Date:** Continue pressing **MODE** to cycle through date settings (month, day, year) and adjust them using the **SET** or **START/STOP** buttons.
- Exit Setting Mode:** Once all settings are correct, press the **MODE** button or another designated button (e.g., **RESET**) to exit the setting mode and return to normal time display.



Figure 1: Front view of the Timex TW5M53900 watch, highlighting the digital display and button layout.

## OPERATING INSTRUCTIONS

The Timex TW5M53900 watch offers several modes accessible via the **MODE** button.

## Time and Date Display

In the default mode, the watch displays the current time (hours, minutes, seconds) and the day and date. The display is LCD for clear visibility.

## Chronograph (Stopwatch)

To use the chronograph function:

1. Press the **MODE** button until "CHRONO" or a similar indicator appears on the display.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause or stop the timing.
4. Press the **RESET** button to clear the chronograph to zero.

## Countdown Timer

To set and use the countdown timer:

1. Press the **MODE** button until "TIMER" or a countdown icon is displayed.
2. Use the **SET** or **START/STOP** buttons to set the desired countdown duration (hours, minutes, seconds).
3. Press **START/STOP** to begin the countdown.
4. An alarm will sound when the countdown reaches zero. Press any button to stop the alarm.

## Dual Time

The dual time function allows you to track a second time zone:

1. Press the **MODE** button until "DUAL TIME" or "T2" is displayed.
2. Use the **SET** or **START/STOP** buttons to adjust the second time zone.
3. Press **MODE** to exit.

## Alarm

To set and activate the alarm:

1. Press the **MODE** button until "ALARM" or an alarm icon is displayed.
2. Use the **SET** or **START/STOP** buttons to set the desired alarm time.
3. Press a designated button (often **RESET** or **MODE** again) to toggle the alarm ON/OFF. An alarm indicator will typically appear on the display when active.
4. When the alarm sounds, press any button to silence it.

## Indiglo® Night-Light

The watch features an Indiglo® night-light for illumination in low-light conditions. Press the **LIGHT** button (usually located on the top right or left side of the case) to activate the backlight.



Figure 2: Side view of the watch, illustrating the placement of control buttons.

## MAINTENANCE

### Cleaning

- Wipe the watch case and strap regularly with a soft, damp cloth.
- For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or components.

### Water Resistance

This watch is water-resistant up to 5 bar (50 meters). This rating means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is *not* suitable for showering, swimming, or diving.

- Do not operate the buttons while the watch is submerged in water.
- Ensure the crown (if applicable) is pushed in completely after setting the time to maintain water resistance.



Figure 3: Rear view of the watch, displaying the case back and strap attachment.

## Battery Replacement

The watch uses a CR2025 cell battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.



Figure 4: Close-up of the watch's case back, detailing the model number, water resistance, and battery type.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (CR2025). Professional replacement recommended.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons firmly. If unresponsive, a battery reset (removing and reinserting battery) might be needed by a professional.
Time is incorrect or not keeping time.	Incorrect setting or low battery.	Re-set the time according to the "Initial Power On and Time Setting" section. If issue persists, replace battery.
Condensation under the crystal.	Loss of water resistance or extreme temperature change.	Avoid extreme temperature changes. If condensation persists, seek professional repair immediately to prevent internal damage.

## SPECIFICATIONS

Feature	Detail
Model Number	TW5M53900

Feature	Detail
Brand	Timex
Display Type	Digital (LCD)
Case Diameter	52 mm
Case Thickness	15 mm
Case Color	Black
Strap Material	High-quality Plastic
Strap Color	Green
Strap Length	21 cm
Strap Width	27 mm
Clasp Type	Pin Buckle
Water Resistance	5 bar (50 meters)
Weight	60 grams
Battery Type	CR2025 (included)
Functions	Day-Date, Chronograph, Countdown, Dual Time, Alarm, Indiglo® Night-Light
Country of Origin	China
Date First Available	October 11, 2022

## WARRANTY AND SUPPORT

### Warranty Information

This Timex TW5M53900 watch comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the watch was used beyond its specified water resistance rating or if buttons were operated underwater.
- Battery replacement.
- Damage caused by unauthorized repairs or modifications.

Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, warranty claims, or service inquiries, please contact Timex customer support through their official website or the contact information provided with your purchase documentation. When contacting support, please have your watch model number (TW5M53900) and proof of purchase readily available.

Spare parts availability information is currently unavailable. For any repair needs, please contact authorized


Timex service centers.

© 2025 Timex. All rights reserved.

This manual is for informational purposes only. Timex reserves the right to make changes to product specifications at any time without notice.

## Related Documents - TW5M53900

	<p><a href="#"><u>Руководство по эксплуатации часов Timex</u></a></p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>
	<p><a href="#"><u>Timex Kids Digital Watch User Guide - Operation and Features</u></a></p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p><a href="#"><u>Timex Watch User Manual and Warranty Information</u></a></p> <p>A comprehensive guide for Timex watches, covering setup, operation, features like INDIGLO night-light, bracelet adjustment, water and shock resistance, battery care, and international warranty details.</p>
	<p><a href="#"><u>Timex Model 265 Dynabeat Electric Time-Zone Watch Service Manual</u></a></p> <p>Detailed service manual for the Timex Model 265 Dynabeat Electric Time-Zone Watch, covering movement description, disassembly, cleaning, lubrication, and reassembly procedures.</p>
	<p><a href="#"><u>Timex Model 262 Watch Movement Service Manual: Disassembly &amp; Reassembly</u></a></p> <p>Comprehensive service manual for the Timex Model 262 electric watch movement, detailing disassembly, parts identification, and reassembly procedures. Includes diagrams and step-by-step instructions.</p>

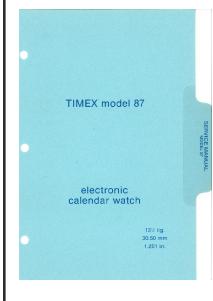

### [Timex Model 87 Electronic Calendar Watch Service Manual](#)

A comprehensive service manual detailing the disassembly, assembly, cleaning, lubrication, and timing procedures for the Timex Model 87 electronic calendar watch (Caliber 882). It includes detailed descriptions of components, diagrams, and step-by-step instructions for watch repair professionals.