

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SCHWAIGER](#) /

› [SCHWAIGER TVS7040 511 TV Floor Stand Instruction Manual](#)

## SCHWAIGER TVS7040 511

# SCHWAIGER TVS7040 511 TV Floor Stand Instruction Manual

Model: TVS7040 511

## IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before assembly and use. Keep this manual for future reference. Incorrect assembly or use may result in damage to the product, TV, or personal injury.

- Ensure all components are present and undamaged before assembly.
- Do not exceed the maximum load capacity of 40 kg (88 lbs).
- Ensure the TV size is within the recommended range of 37-70 inches and VESA compatibility (max 600x400).
- Assemble on a soft, clean surface to prevent scratches.
- Always use two people for lifting and mounting the TV.
- Place the stand on a stable, level surface.
- Keep children and pets away during assembly.

## PACKAGE CONTENTS

Verify that all parts listed below are included in your package. If any parts are missing or damaged, please contact SCHWAIGER customer support.

1. Tempered Glass Base
2. Support Column
3. TV Mounting Bracket (VESA compatible)
4. Mounting Hardware Kit (screws, washers, spacers for various TV models)
5. Cable Management Clips
6. Assembly Tools (e.g., Allen key, wrench)
7. Instruction Manual

## SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have a second person assist with TV mounting.

## Step 1: Assemble the Base and Column

Attach the support column to the tempered glass base using the provided screws and tools. Ensure the column is securely fastened and upright.



*Image: Front view of the stand's column and base assembly.*

## Step 2: Attach TV Mounting Brackets to TV

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern. Attach the two vertical mounting brackets to the back of your TV. Ensure they are level and securely tightened.



*Image: Detail of TV bracket attachment.*

### **Step 3: Mount the TV onto the Stand**

With assistance, carefully lift the TV and hook the attached vertical brackets onto the horizontal bar of the stand's mounting plate. Ensure the TV is securely seated. Use the safety screws or locking mechanisms to prevent accidental dislodgement.



*Image: Fully assembled stand with TV.*

#### **Step 4: Cable Management**

Utilize the integrated cable guide and clips on the support column to neatly route your TV and device cables. This helps maintain a clean appearance and prevents tripping hazards.



*Image: Cable management feature.*

## **OPERATING INSTRUCTIONS**

---

### **Swivelling Function**

The SCHWAIGER TVS7040 511 TV Floor Stand features a swivelling mechanism. To adjust the viewing angle,

gently grasp the sides of your TV and rotate it to the desired position. Avoid excessive force. The swivel range allows for optimal viewing from various points in a room.



*Image: Detail of the swivel mechanism.*

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the stand. For stubborn marks on the glass base, a mild glass cleaner can be used. Avoid abrasive cleaners or solvents.
- Inspections:** Periodically check all screws and connections to ensure they remain tight and secure. Retighten if necessary.
- Cable Management:** Ensure cables are still neatly routed and not pinched or strained.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level	Mounting brackets not aligned; stand on uneven surface.	Adjust TV brackets; ensure stand is on a flat, stable surface.
Stand feels unstable	Screws are loose; stand overloaded.	Check and tighten all assembly screws; ensure TV weight is within limits.
Difficulty swivelling TV	Mechanism stiff; obstruction.	Ensure no cables are caught; apply gentle, even pressure. Do not force.

## SPECIFICATIONS

Brand	SCHWAIGER
Model Number	TVS7040 511 (Item Model Number: 4004005034257)

<b>Compatible TV Sizes</b>	37-70 inches (94-178 cm)
<b>Maximum Load Capacity</b>	40 kg (88 lbs)
<b>VESA Compatibility</b>	Max 600 x 400 mm
<b>Movement Type</b>	Swivel
<b>Material</b>	Tempered Glass (Base), Steel (Column, Bracket)
<b>Product Dimensions</b>	5.25 x 0.31 x 1.66 inches (Note: These dimensions appear to be for packaging or a component, not the full assembled stand. Refer to assembly instructions for overall footprint.)
<b>Item Weight</b>	19.14 pounds
<b>Color</b>	Black

## WARRANTY AND SUPPORT

---

This product comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official SCHWAIGER website. For technical support, missing parts, or any questions regarding the product, please contact SCHWAIGER customer service.

**Manufacturer:** SCHWAIGER

**Date First Available:** December 9, 2022