

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Courant](#) /

› [Courant CHB-2002 Hand Blender User Manual](#)

Courant CHB-2002

Courant CHB-2002 Hand Blender User Manual

Model: CHB-2002

INTRODUCTION

Welcome to your new **Courant CHB-2002 Hand Blender**. This manual provides essential information for the safe operation, proper maintenance, and optimal performance of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- To protect against risk of electrical shock, do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by Courant may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the appliance is not running.
- Blades are *sharp*. Handle carefully.
- Do not use the appliance for other than intended use.

PRODUCT COMPONENTS

The Courant CHB-2002 Hand Blender consists of the following main parts:

- **Motor Unit:** The main body containing the motor and speed controls.
- **Blending Shaft (Leg):** The detachable stainless steel shaft with the blending blade at the end.
- **Blending Blade:** The sharp blade located at the bottom of the blending shaft.





Figure 1: Full view of the Courant CHB-2002 Hand Blender.



Figure 2: Key features of the hand blender, including its lightweight design, comfort grip handle, and stainless steel blending leg. It is designed for blending, crushing, and pureeing.

SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and the blending shaft is clean.

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it clicks securely into place. Ensure it is firmly attached before plugging in the unit.



Figure 3: The detachable blending leg allows for safe and easy cleaning.

OPERATING INSTRUCTIONS

The Courant CHB-2002 Hand Blender features a 2-speed control for versatile blending.

1. Prepare your ingredients and place them in a suitable container (e.g., a tall beaker or pot).
2. Plug the hand blender into a standard electrical outlet.
3. Immerse the blending shaft into the ingredients before turning on the appliance. Ensure the blade guard is fully submerged to prevent splashing.
4. Select your desired speed: Press the **Low** button for gentle blending or the **High** button for more powerful blending.
5. Move the blender up and down in the container to ensure all ingredients are processed evenly.
6. Once blending is complete, release the speed button and unplug the appliance from the outlet.

7. Wait for the blade to stop completely before removing the blending shaft from the container.

Blending Tips:

- For best results, cut solid ingredients into small pieces before blending.
- When blending hot liquids, use caution and do not overfill the container to avoid spills.
- Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow it to cool down if needed.
- This blender is ideal for making smoothies, milkshakes, purees, soups, and crushing small amounts of ice.



Figure 4: The hand blender in action, perfect for preparing smoothies and purees.

CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your hand blender.

Cleaning:

1. Always unplug the blender before cleaning.
2. Detach the blending shaft from the motor unit by twisting it counter-clockwise.
3. Wash the blending shaft (leg) and blade under running water with a mild dish soap. Use a brush if necessary to clean around the blade. The blending shaft is dishwasher safe.
4. Wipe the motor unit with a damp cloth. **Never immerse the motor unit in water or any other liquid.**
5. Dry all parts thoroughly before reassembling or storing.

Storage:

Store the hand blender in a dry place, away from direct sunlight and out of reach of children. It is recommended to store the blending shaft detached from the motor unit for compact storage.

TROUBLESHOOTING

If you encounter any issues with your Courant CHB-2002 Hand Blender, please refer to the following table:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; blending shaft not securely attached.	Ensure plug is firmly in outlet; test outlet with another appliance; reattach blending shaft until it clicks.
Motor sounds strained or stops.	Overloaded with ingredients; ingredients too thick/hard; continuous operation for too long.	Reduce amount of ingredients; add more liquid; cut ingredients into smaller pieces; allow motor to cool down.
Splashing during operation.	Blade not fully immersed; container too full.	Ensure blade guard is fully submerged before starting; do not overfill container.

SPECIFICATIONS

Feature	Detail
Brand	Courant
Model	CHB-2002
Power	200 Watts
Number of Speeds	2
Material	Stainless Steel Leg

Feature	Detail
Product Dimensions	8.07"D x 4.52"W x 7.88"H
Item Weight	1.79 pounds
UPC	810941028984

WARRANTY AND CUSTOMER SUPPORT

This Courant CHB-2002 Hand Blender comes with a **Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and limitations. For customer support, service inquiries, or to purchase replacement parts, please visit the official Courant store or contact their customer service department. You can find more information at the [Courant Store on Amazon](#).