

## CUCKOO CRP-JHR1009F

# CUCKOO CRP-JHR1009F 10-Cup Induction Heating Pressure Rice Cooker

User Instruction Manual

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your CUCKOO CRP-JHR1009F 10-Cup Induction Heating Pressure Rice Cooker. Please read it thoroughly before first use and keep it for future reference.

The CRP-JHR1009F is designed for versatile cooking, offering 16 menu options including GABA rice, brown rice, glutinous/white rice, nu rung ji, pressure cook, nutritious rice, and multi-cook functions. It features Induction Heating technology for quicker and more efficient cooking, and boasts a high pressure level of 29 PSI (200 KPa) for faster results. The cooker also includes a 304 food-grade stainless steel inner pot with a nonstick coating, an auto-clean function, and a 3-language voice guide (English, Chinese, Korean).



Figure 1.1: CUCKOO CRP-JHR1009F Rice Cooker

## 2. SAFETY PRECAUTIONS

- Always ensure the rice cooker is placed on a stable, level surface away from heat sources and water.
- Do not immerse the main body of the rice cooker in water or any other liquid.
- Keep out of reach of children.
- Do not block the steam vent during operation.

- Use only the provided inner pot and accessories.
- Unplug the appliance when not in use and before cleaning.

## 3. SETUP AND FIRST USE

---

### 3.1 Unpacking

Carefully remove the rice cooker and all accessories from the packaging. Check for any damage. Retain packaging for future transport or storage.

### 3.2 Initial Cleaning

Before first use, wash the inner pot, detachable inner lid, rice spatula, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main body with a damp cloth.

### 3.3 Placement

Place the rice cooker on a dry, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit, especially near the steam vent.

### 3.4 Power Connection

Plug the power cord into a grounded electrical outlet. The display will illuminate, indicating the unit is ready for use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Rice Cooking (White Rice Example)

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. For the 10-cup model, you can cook up to 10 cups of uncooked rice.
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water up to the corresponding water level mark indicated inside the inner pot for your chosen rice type and quantity. For example, for 4 cups of white rice, fill water to the 'WHITE RICE 4' line.
4. **Close Lid:** Place the inner pot into the main body of the cooker. Close the top lid securely until it locks into place.
5. **Select Menu:** Press the 'MENU' button or use the touch panel to select 'WHITE RICE'.
6. **Start Cooking:** Press the 'COOK/START' button. The cooker will begin the cooking process.
7. **Completion:** Once cooking is complete, the cooker will switch to 'KEEP WARM' mode and emit a sound. Carefully open the lid, stir the rice, and serve.

# Food Made Simple

Explore more than just rice with this cooker –  
*experiemnt with oatmeal, porridge, and more!*



Figure 4.1: The CRP-JHR1009F supports various cooking modes for different dishes.

## 4.2 Using Different Cooking Modes

Your CUCKOO CRP-JHR1009F offers 16 versatile cooking modes. To select a different mode, press the 'MENU' button repeatedly until the desired mode is highlighted on the display, then press 'COOK/START'. Refer to the detailed recipe book (if included) for specific instructions on each mode.

## 4.3 Voice Guide Setting

The rice cooker features a voice guide in English, Chinese, and Korean. To change the voice guide language:

1. Press the 'MODE' button to enter the language setting mode.
2. Use the 'SELECTION' button (often a rotating dial or touch area) to cycle through the available languages.
3. Once your desired language is announced, press the 'SET' button to confirm and lock in the language.

Video 4.2: Instructions on how to set the voice guide language on your CUCKOO CRP-JHR1009F.

## 5. MAINTENANCE AND CLEANING

---

### 5.1 Inner Pot Cleaning

The inner pot should be hand washed with a soft sponge and mild detergent. Avoid abrasive cleaners or metal scrubbers that can damage the nonstick coating. Rinse and dry thoroughly.

### 5.2 Detachable Inner Lid

The inner lid is detachable for easy cleaning. To remove, gently pull it down and out. Wash it with warm, soapy water, rinse, and dry. Reattach by aligning it correctly and pushing it back into place until it clicks.



## EASY-DETACH COVER

Simply Remove for Easy Cleaning



## SMART WATER FLOW

Advanced Drainage System  
Keeps Meals Fresh



## STEAM STERILIZATION

One-Touch Steam Sterilization for  
Effortless Cleanup

Figure 5.1: Detachable inner lid and steam sterilization features for easy cleaning.

### 5.3 Auto-Clean Function

To use the Auto-Clean function, ensure the inner pot is empty and filled with water up to the 'AUTO CLEAN' line. Close the lid, select the 'AUTO CLEAN' menu option, and press 'COOK/START'. The cooker will steam clean its interior, helping to remove odors and residue.

### 5.4 Exterior Cleaning

Wipe the exterior of the rice cooker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.

Ensure the unit is unplugged before cleaning.

## 6. TROUBLESHOOTING

---

- **Rice is too hard/soft:** Adjust the water-to-rice ratio. Ensure rice is properly washed.
- **Cooker not starting:** Check if the power cord is securely plugged in. Ensure the lid is properly closed and locked.
- **Error codes on display:** Refer to the full product manual for a list of specific error codes and their solutions. Generally, unplugging the unit for a few minutes and plugging it back in can resolve minor issues.
- **Steam leakage:** Check if the inner lid and packing are correctly installed and free from food debris.

For persistent issues, please contact CUCKOO customer support.

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	CUCKOO
Model Name	CRP-JHR1009F
Capacity	10 Cups (Uncooked)
Product Dimensions	16.3"D x 12"W x 12"H
Power Source	Corded Electric
Wattage	1000 watts
Product Care Instructions	Hand Wash
Color	Brown
Special Feature	Advanced Fuzzy Logic, Induction Heating, Voice Guide, Auto-Clean
Material	Stainless Steel
Lid Material	Stainless Steel
Item Weight	21.8 pounds (9.9 Kilograms)
Included Components	Rice cooker, rice spatula, measuring cup, user manual

# EFFICIENT BY DESIGN

An Elevated Experience, Every Meal

14 in. (W) × 19 in. (D) × 13 in. (H)



## Included Accessories



Inner Pot



Steam Plate



Rice Paddle



Measuring Cup

Figure 7.1: Product dimensions and included accessories.

## 8. WARRANTY AND SUPPORT

Your CUCKOO CRP-JHR1009F Rice Cooker comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, service, or inquiries regarding your product, please visit the official CUCKOO website or

contact their customer service department. Contact information can typically be found in the full user manual or on the CUCKOO brand website.

## 9. PRODUCT OVERVIEW VIDEO

---

Watch this official product video for a visual overview of the CUCKOO CRP-JHR1009F Induction Heating Pressure Rice Cooker's features and benefits.

Video 9.1: Official product overview of the CUCKOO 10-Cup IH Pressure Rice Cooker.