



[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Wild Vibes Infant to Toddler Rocker Instruction Manual

Bright Starts 13031

Bright Starts Wild Vibes Infant to Toddler Rocker Instruction Manual

Model: 13031

1. INTRODUCTION AND OVERVIEW

The Bright Starts Wild Vibes Infant to Toddler Rocker is a versatile 2-in-1 product designed to grow with your child, functioning as both a soothing rocker and a stationary seat. It features gentle vibrations to comfort your baby, an engaging toy bar with a colorful rattle and monkey bead chaser, and a secure 5-point harness. This product is suitable for infants and toddlers up to 40 lbs, providing years of use.

This manual provides essential information for the safe assembly, operation, and maintenance of your Bright Starts Wild Vibes Rocker. Please read all instructions carefully before use and retain this manual for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these warnings and the instructions could result in serious injury or death.

- **FALL HAZARD:** A child's movement can slide the product. Never place the product on countertops, tables, or other elevated surfaces.
- **SUFFOCATION HAZARD:** Never use the product on a soft surface (bed, sofa, cushion), as the seat can tip over and cause suffocation.
- Always use the restraint system. Adjust to fit snugly.
- Never leave child unattended.
- Do not use this product once your child can sit up unaided or attempts to climb out.
- This product is not intended for prolonged periods of sleeping.
- Maximum weight recommendation: 40 lbs (18 kg).

- Always check that the product is stable and securely assembled before placing a child in it.
- Keep all assembly hardware and plastic bags out of reach of children.
- Batteries are not included. Ensure correct battery polarity when installing.

For complete safety guidelines, please refer to the official user manual PDF [Download User Manual \(PDF\)](#)

3. PARTS LIST

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, do not use the product and contact customer service.

- Rocker Frame (Base and Support Bars)
- Seat Pad with Harness
- Toy Bar
- Rattle Toy
- Monkey Bead Chaser Toy
- Vibration Unit (integrated into seat)
- Front Kickstand

4. SETUP AND ASSEMBLY

Assembly typically requires no tools. Follow these steps carefully:

1. **Assemble the Frame:** Connect the various frame components until they securely click into place, forming the rocker base. Ensure all connections are firm.
2. **Attach the Seat Pad:** Drape the seat pad over the assembled frame, ensuring the fabric loops and straps align with the frame's attachment points. Secure all fasteners, buckles, and hook-and-loop patches.
3. **Install Battery for Vibration:** Locate the battery compartment, typically on the underside of the seat. Insert one C battery (not included), ensuring correct polarity (+/-). Close the compartment securely.
4. **Attach the Toy Bar:** Insert the ends of the toy bar into the designated slots on the side of the seat frame until they click into place. Ensure it is securely attached and cannot be easily dislodged.
5. **Attach Toys:** Hang the rattle toy and monkey bead chaser toy from the loops on the toy bar.



Figure 1: Fully assembled Bright Starts Wild Vibes Infant to Toddler Rocker. This image shows the complete product with the seat pad, toy bar, and toys attached to the frame.



Figure 2: An infant seated comfortably in the rocker, demonstrating proper use of the harness system and interaction with the overhead toys.

5. OPERATING INSTRUCTIONS

5.1 Switching Between Rocker and Stationary Seat

To switch from rocker to stationary seat mode, locate the front kickstand at the base of the rocker. Extend the kickstand forward until it locks into a stable, upright position. To return to rocker mode, retract the kickstand.



Figure 3: A hand demonstrating how to adjust the front kickstand to convert the rocker into a stationary seat.

5.2 Activating Vibration

The vibration unit is integrated into the seat. To activate the soothing vibrations, locate the button on the side of the seat (as shown in Figure 4) and press it. Press the button again to turn the vibration off.



Figure 4: A close-up view of a finger pressing the one-button control for the vibration function, located on the side of the seat.

5.3 Adjusting Recline Positions

The seat features two recline positions. To adjust the recline, locate the buttons below the toy bar on each side of the seat. Press these buttons simultaneously and adjust the seat to the desired recline angle (forward or back). Ensure both sides are locked into position before use.

5.4 Harness Usage

Always secure your child with the 5-point harness. Place the child in the seat, bring the shoulder straps over their shoulders, and the waist straps around their hips. Connect the buckles securely at the center. Adjust the straps to ensure a snug but comfortable fit, allowing no more than one finger to fit between the strap and the child.

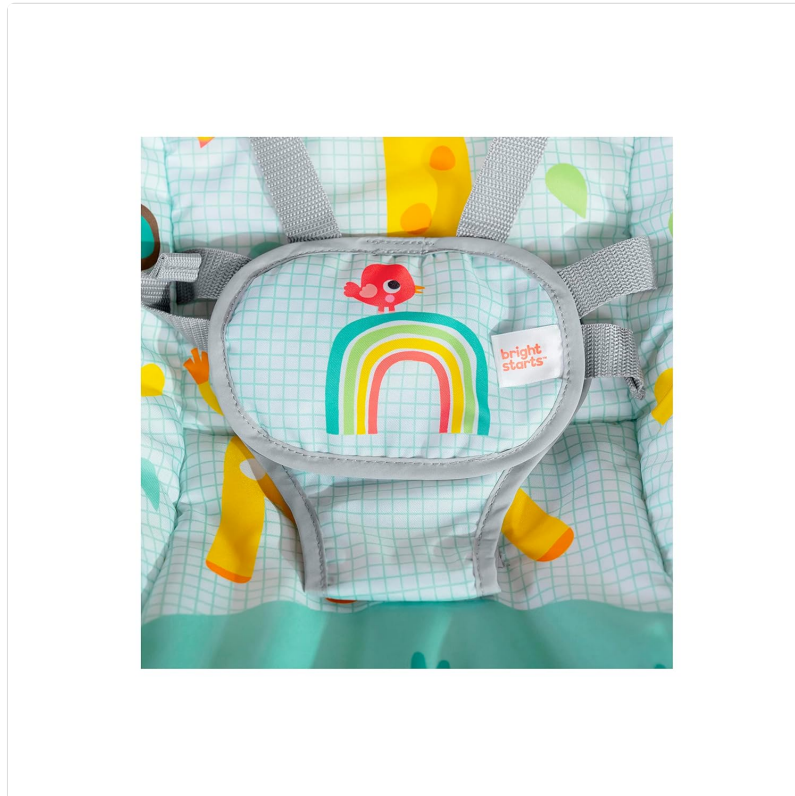


Figure 5: A detailed view of the 5-point harness system, highlighting the secure strapping for infant safety.

5.5 Toy Bar Interaction

The toy bar provides entertainment with a colorful rattle and a monkey bead chaser toy. Encourage your child to reach for and bat at the toys to promote fine motor skills. The toy bar can be removed for easy access to the child or when not needed.



Figure 6: An infant engaging with the hanging toys on the toy bar, showcasing the interactive elements of the rocker.

6. MAINTENANCE AND CARE

6.1 Cleaning the Seat Pad

The seat pad is removable and machine washable. Follow these steps:

1. Remove the seat pad from the frame.
2. Fasten all buckles on the seat restraint and seat pad.
3. Fasten all hook-and-loop patches to their corresponding patches.
4. Machine wash with cold water on a gentle cycle.
5. Do not use bleach.
6. Tumble dry using low heat.

6.2 Cleaning the Frame and Toys

The frame and toys can be wiped clean with a damp cloth and mild soap. Do not immerse the frame or toys in water. Allow all parts to air dry completely before reassembly or use.

7. TROUBLESHOOTING

- **Vibration not working:** Check if the C battery is installed correctly with the correct polarity. Replace the battery if it is depleted.
- **Seat not reclining or locking:** Ensure both recline adjustment buttons are pressed simultaneously when attempting to adjust. Verify that the seat clicks securely into the desired position on both sides.
- **Product feels unstable:** Ensure all frame components are fully connected and locked. Confirm the front kickstand is properly engaged in stationary mode, or fully retracted in rocker mode.

- **Toy bar not attaching securely:** Ensure the ends of the toy bar are fully inserted into the designated slots until they click.

If you encounter issues not listed here, please refer to the full user manual or contact Bright Starts customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (D x W x H)	26.38 x 19.49 x 19.69 inches (67 x 49.5 x 50 cm)
Item Weight	3.13 pounds (1.42 kg)
Model Number	13031
Target Gender	Unisex
Maximum Weight Recommendation	40 Pounds (18 kg)
Material Type	Metal, Plastic, Fabric
Material Composition	63% Metal, 26% Plastic, 11% Fabric
Batteries Required	Yes, 1 C battery (not included)
Portability	Yes



Figure 7: Diagram illustrating the key dimensions (height, width, depth) of the Bright Starts Wild Vibes Infant to Toddler Rocker.

9. WARRANTY AND SUPPORT

This product is manufactured by Bright Starts. For information regarding warranty coverage, product registration, or customer support, please visit the official Bright Starts website or contact their customer service

department directly. Keep your purchase receipt as proof of purchase.