

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image LightBoard LED Writing Pad with Stand Instruction Manual

Sharper Image 1015759

Sharper Image LightBoard Go LED Writing Pad with Stand

Model: 1015759

INTRODUCTION

The Sharper Image LightBoard Go is an innovative LED writing pad designed for displaying messages, lists, and notes with vibrant illumination. Featuring a large LED display and 7 distinct light modes, it ensures your content stands out. Its versatile design includes a built-in kickstand for tabletop use and a magnetic mount for attachment to metal surfaces. The wipe-clean acrylic surface allows for repeated use with the included washable markers.



Image: The Sharper Image LightBoard Go, demonstrating its design and packaging.

Safety Information

- Keep the device away from water or excessive moisture.
- Do not expose to extreme temperatures.
- Use only the specified washable markers. Other markers may permanently stain the surface.
- Clean the writing surface with a damp, non-abrasive cloth. Avoid paper towels or abrasive materials.
- Ensure batteries are inserted with correct polarity. Remove batteries if the device will not be used for an extended period.
- This product is not a toy. Keep out of reach of small children.

Package Contents

Please check the package to ensure all items are present:


- 1 x Sharper Image LightBoard Go LED Writing Pad
- 3 x Washable Markers

Note: 3 x AA 1.5V batteries are required and not included.

SHARPER IMAGE®



WHAT YOU GET

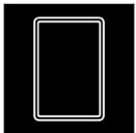


Lightboard
Go



3 washable
markers

 WHAT YOU NEED

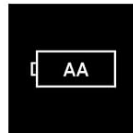

3 AA 1.5 V batteries
required (not included)



Image: Contents of the package and required batteries.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the LightBoard Go.
2. Open the battery compartment cover.
3. Insert 3 AA 1.5V batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Stand Setup (Optional)

The LightBoard Go features a built-in kickstand for tabletop display:

- Flip out the kickstand located on the back of the device.
- Adjust the kickstand to your desired angle for stable placement on a flat surface.

3. Magnetic Mounting (Optional)

For magnetic surfaces like refrigerators, use the integrated magnetic mount:

- The LightBoard Go has magnets on its back.
- Simply place the device onto any suitable metal surface.

OPERATING INSTRUCTIONS

1. Writing on the LightBoard Go

- Use the provided washable markers to write or draw directly on the acrylic screen.
- Store markers in the built-in holder on the side of the board when not in use.

SHARPER IMAGE®



LIGHTBOARD GO

LED WRITING PAD WITH STAND



Image: The LightBoard Go in use, displaying a "To Do List".

2. Changing Light Modes

- Press the power button located on the top edge of the LightBoard Go to turn it on.
- Each subsequent press of the power button will cycle through the 7 unique LED light modes, offering various colors and effects.
- Continue pressing until you find your desired light mode.
- To turn off the device, cycle through all modes until the light turns off, or press and hold the power button for a few seconds.



 
LARGE LED DISPLAY



7 LIGHT MODES



WIPE-CLEAN SURFACE



3 WASHABLE MARKERS



MAGNETIC MOUNT



Image: Visual representation of the LightBoard Go's key features.

MAINTENANCE

Cleaning the Surface

- To clean the writing surface, use a damp, non-abrasive cloth.
- Wipe the display gently to remove marker residue.
- It is recommended to clean the drawing surface within 24 hours of writing to prevent potential staining.
- Do not use paper towels, abrasive cleaners, or harsh chemicals, as these can scratch or damage the acrylic surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
LightBoard does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity. Replace with fresh AA batteries.
Markers are not writing clearly.	Markers are dry or low on ink.	Ensure marker caps are securely closed after use. Replace markers if dry.
Residue or stains remain after cleaning.	Surface not cleaned promptly or abrasive material used.	Clean within 24 hours of writing. Use only a damp, non-abrasive cloth. For stubborn residue, a very mild soap solution can be used sparingly, followed by a clean damp cloth.
Light modes are not cycling.	Low battery power or button malfunction.	Replace batteries. If issue persists, contact customer support.

SPECIFICATIONS

- **Model:** 1015759
- **Brand:** Sharper Image
- **Material:** Acrylic
- **Color:** White (board surface), Black (frame)
- **Power Source:** 3 x AA 1.5V Batteries (not included)
- **Light Modes:** 7 unique LED light modes
- **Mounting Options:** Built-in Kickstand, Magnetic Mount
- **Dimensions:** Approximately 11.5 inches (height) x 8.25 inches (width)

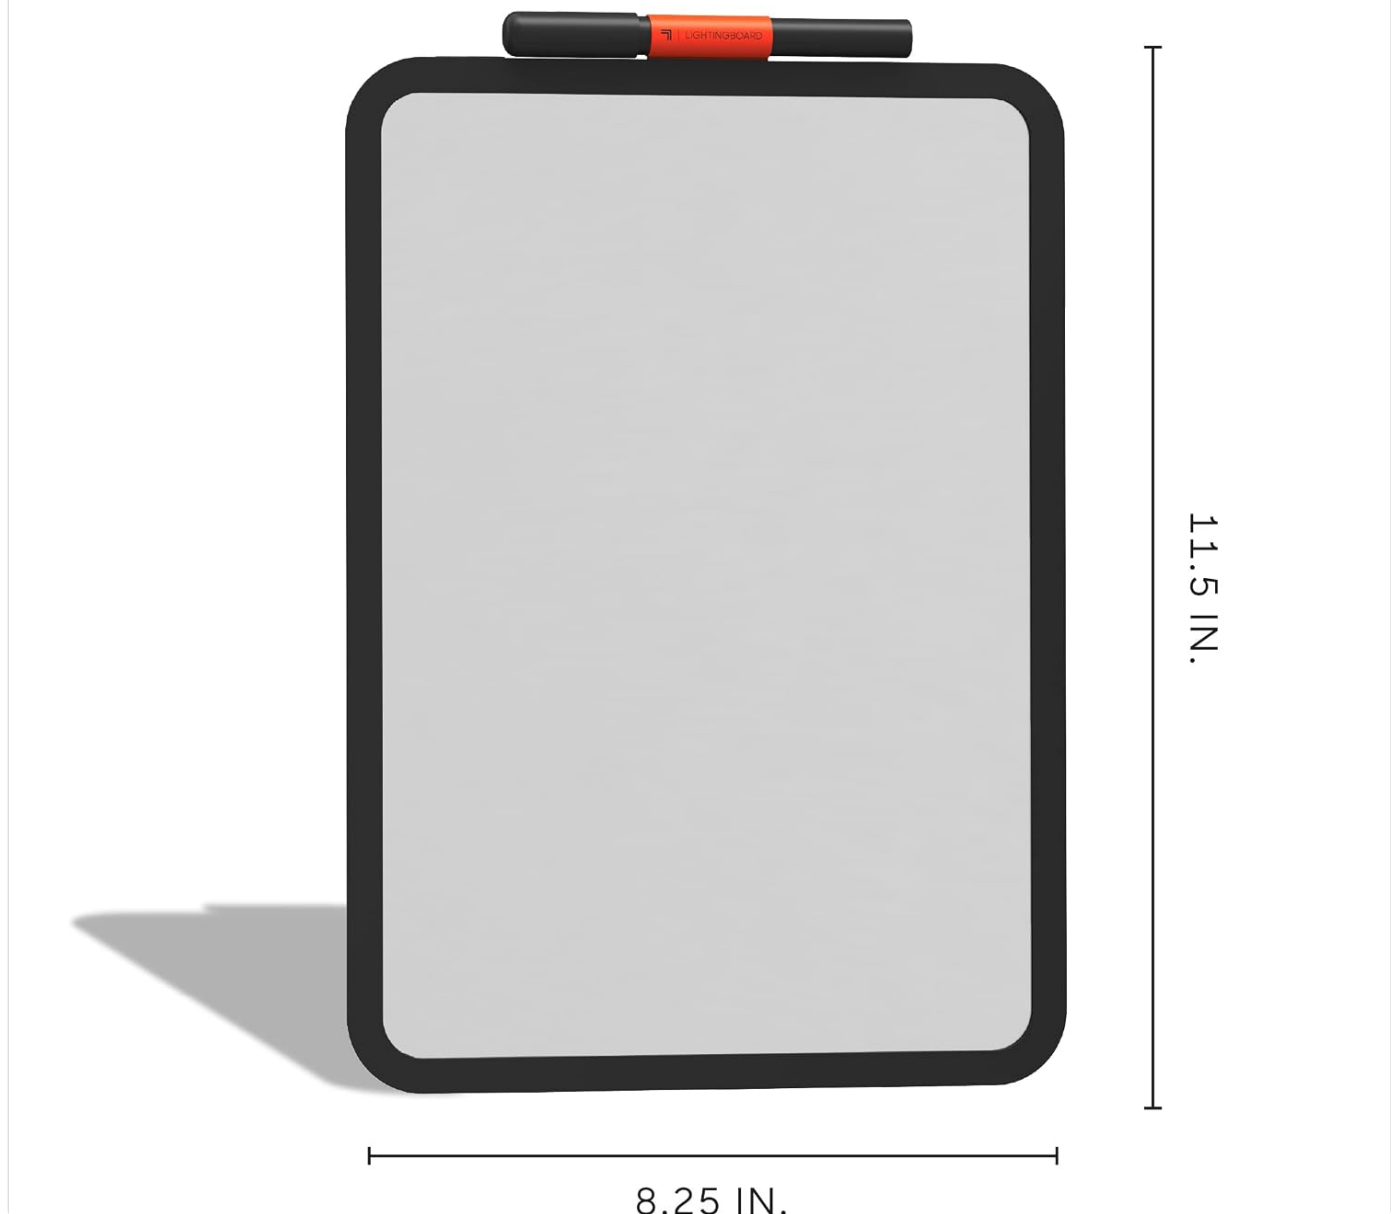 


Image: Dimensions of the Sharper Image LightBoard Go.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Sharper Image website. Keep your proof of purchase for any warranty claims.

Manufacturer: Merchsource

Date First Available: September 23, 2022

© 2024 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BBSLNMJB>

More documents and user manuals: **<https://manuals.plus/>**