

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AUIIAH](#) /
- › [AUIIAH 14000mAh Rechargeable Hand Warmers Instruction Manual](#)

## AUIIAH YZE-B23

# AUIIAH 14000mAh Rechargeable Hand Warmers

Model: YZE-B23

## INTRODUCTION

The AUIIAH YZE-B23 rechargeable hand warmers provide warmth and serve as a portable power bank. This product includes two separate units, each with a 14000mAh capacity, offering extended heating duration. They feature an LED display for power and heating levels, and an integrated LED light for illumination.



Image: One AUUIAH hand warmer displaying 100% charge, illustrating its 14000mAh capacity and up to 36 hours of warmth for a 2-pack.

## INITIAL SETUP

### Charging the Hand Warmers

1. Before first use, fully charge both hand warmers.
2. Connect the provided charging cable to the hand warmer's charging port and to a suitable USB power adapter (not included).
3. The LED display will indicate charging status. A full charge typically takes 3-4 hours.
4. Ensure the hand warmers are fully charged for optimal performance and battery life.



Image: Illustration of hand warmers being charged and one hand warmer functioning as a power bank for a smartphone.

## OPERATING INSTRUCTIONS

### Power On/Off

- To turn on the hand warmer, **long press the power switch** for approximately 3 seconds. It will activate single-sided heating at level L1 (100.4-107.6°F).
- To turn off the hand warmer, **long press the power switch** again for approximately 3 seconds.

### Adjusting Heating Modes and Temperature

- **Switching between Single and Double-sided Heating:** While the device is on, **long press the TEMP control button** for 3 seconds to toggle between single-sided (L modes) and double-sided (H modes) heating.
- **Changing Temperature Levels:** Once the desired heating mode (single or double-sided) is selected, **short press the TEMP control button** to cycle through the 4 temperature levels.

### Temperature Levels:

- **Single-sided Heating (L modes):**

- L1: 100.4-107.6°F (Up to 18 hours warmth)
- L2: 109-114.8°F (Up to 15 hours warmth)
- L3: 116.6-122°F (Up to 12 hours warmth)
- L4: 123.8-131°F (Up to 10 hours warmth)

• **Double-sided Heating (H modes):**

- H1: (Temperature not specified, up to 12 hours warmth)
- H2: (Temperature not specified, up to 10 hours warmth)
- H3: (Temperature not specified, up to 8 hours warmth)
- H4: (Temperature not specified, up to 6 hours warmth)



Image: Visual representation of single-sided and double-sided heating modes with their approximate duration at different levels.

### LED Display

The integrated LED display shows the remaining battery power percentage and the current heating level (L1-L4 or H1-H4). This allows you to monitor the device's status at a glance.

# LED Display

## Switchable between Power and Heating Level



Image: The LED display indicating 100% battery and heating level L1.

### Power Bank Function

Each hand warmer can also function as an emergency power bank. Connect your smartphone or other USB-powered device to the hand warmer's output port using a compatible charging cable to charge your device.

### LED Light

The hand warmer includes a built-in LED light. To activate or deactivate the light, **short press the dedicated light button** (if available, otherwise assume it's integrated with power button or another control). This provides illumination in dark environments.

# Built-in Bright LED Light

## Provides Light in the Dark



Image: The hand warmer with its integrated LED light turned on, providing illumination.

## CARE AND MAINTENANCE

- **Cleaning:** Wipe the surface of the hand warmer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** When not in use for extended periods, store the hand warmers in a cool, dry place. Ensure they are fully charged before storing to maintain battery health. Recharge every 3-6 months if stored for a long time.
- **Battery Care:** Avoid extreme temperatures (hot or cold) as they can affect battery performance and lifespan.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Hand warmer does not turn on.	Low battery; Incorrect power button press.	Charge the hand warmer fully. Ensure you are long-pressing the power button for 3 seconds.

Problem	Possible Cause	Solution
Hand warmer is not heating.	Heating function not activated; Low battery.	Ensure the device is powered on and a heating level (L1-L4 or H1-H4) is selected. Check battery level and recharge if necessary.
Device not charging.	Faulty cable/adaptor; Loose connection.	Try a different USB cable and power adapter. Ensure connections are secure.
Power bank function not working.	Low battery on hand warmer; Incompatible charging cable for external device.	Ensure the hand warmer has sufficient charge. Use the correct charging cable for your external device.

## PRODUCT SPECIFICATIONS

- **Model:** YZE-B23
- **Battery Capacity:** 14000mAh (7000mAh per unit)
- **Battery Type:** Lithium Polymer (included)
- **Material:** Aluminum/PC
- **Product Dimensions (each unit):** 2.09 x 1.24 x 4.02 inches
- **Weight (each unit):** Approximately 7.76 ounces
- **Max Heating Temperature:** 131°F (55°C)
- **Heating Levels:** 8 modes (4 single-sided, 4 double-sided)
- **Warmth Duration:** 6-18 hours (single unit), 6-36 hours (2-pack combined usage)
- **Features:** LED Display, LED Light, Power Bank Function

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any product-related inquiries, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details and warranty terms.