

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Electrolux](#) /

› [Electrolux UltimateCare 300 Front Load Washing Machine User Manual](#)

Electrolux EWF8024D3WB

Electrolux UltimateCare 300 Front Load Washing Machine

Model: EWF8024D3WB

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Electrolux 8kg 5 Star EcoInverter Fully Automatic Front Load Washing Machine, model EWF8024D3WB. Please read this manual thoroughly before using the appliance and keep it for future reference.



Image: Front view of the Electrolux UltimateCare 300 washing machine, highlighting its sleek white design and control panel.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the appliance is properly grounded before use.
- Do not allow children to play with or operate the washing machine.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.
- Do not open the detergent dispenser or door during a wash cycle, especially during high-temperature programs.

SETUP

Unpacking

Carefully remove all packaging materials. Check for any damage during transit. Ensure all included components are present: Hose Inlet, User Manual, Drain hose hanger, Cap hole, Pre-installed Shutter (Rat Mesh), Washing Machine, Hose Drain.

Installation

The Electrolux EWF8024D3WB is a freestanding front load washing machine. Place it on a firm, level surface. Adjust the leveling feet to ensure stability and minimize vibration during operation. Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain point. Ensure the drain hose is securely positioned to prevent leaks.

Dimensions (LxWxH): 57.5 x 60 x 85 Centimeters. Weight: 64 kg 500 g.

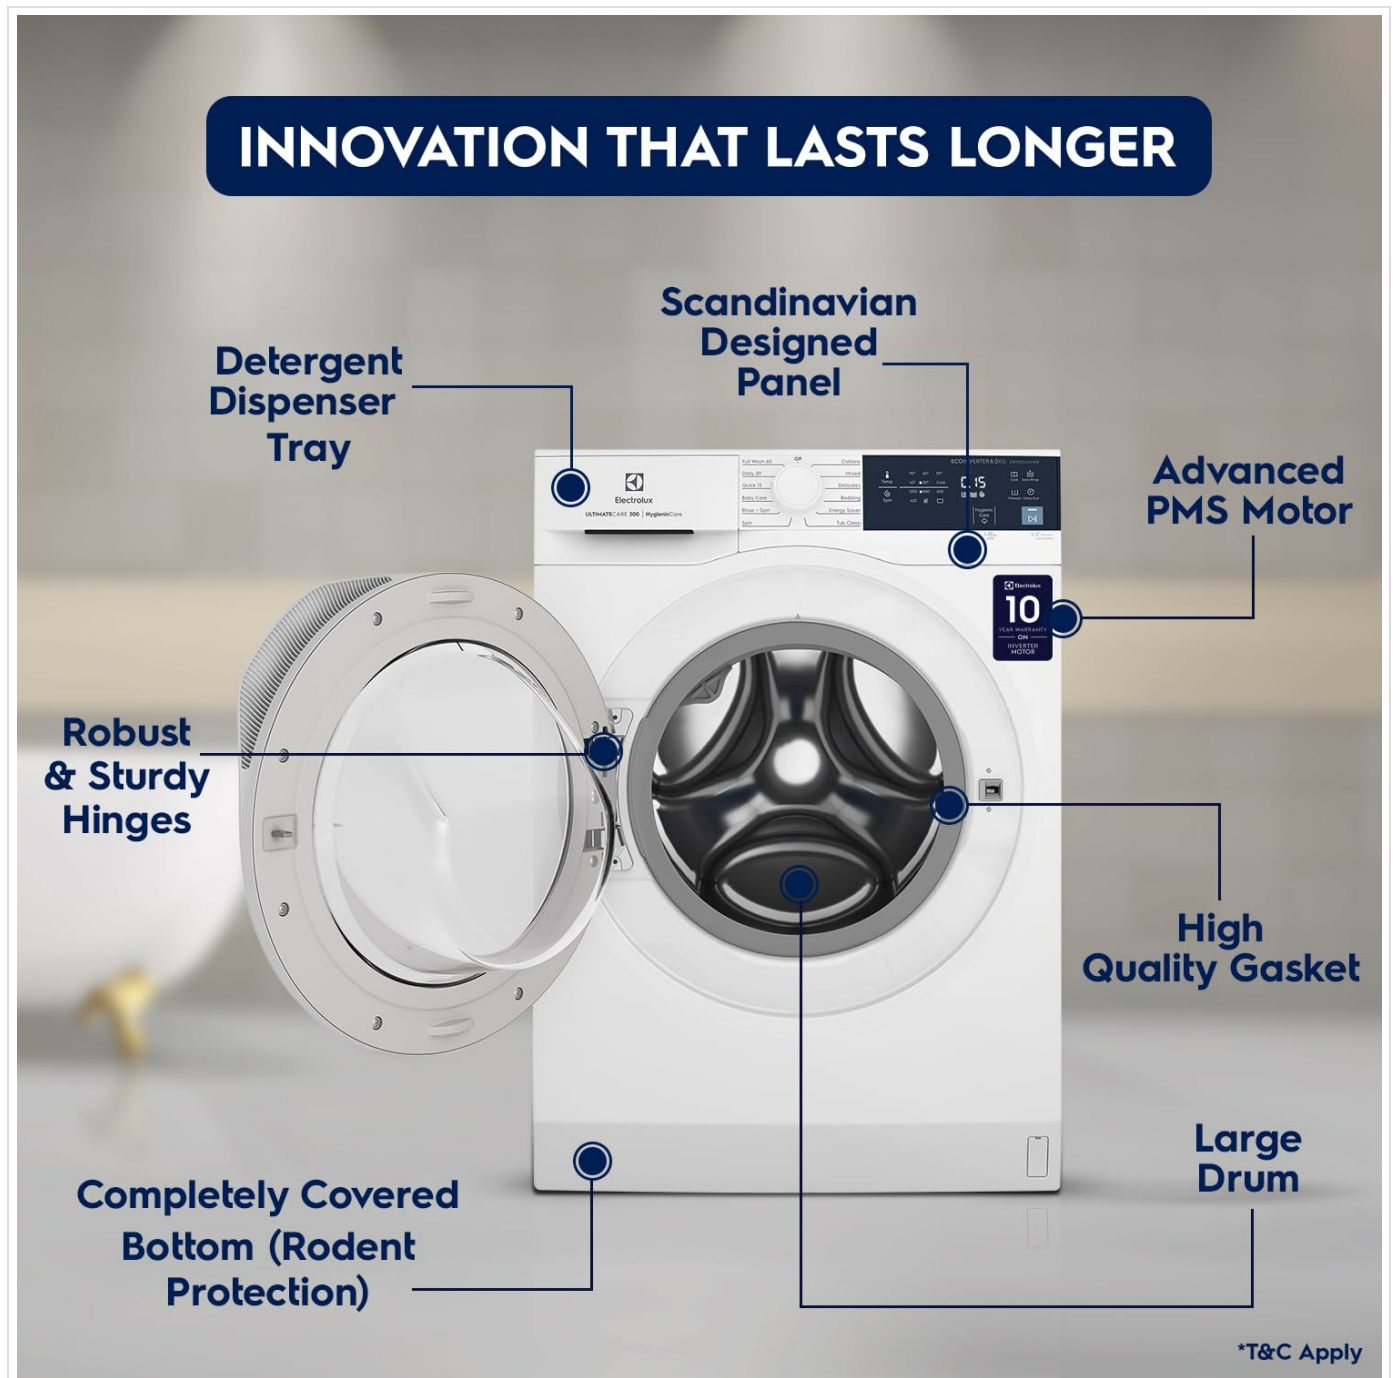


Image: Diagram illustrating key components of the washing machine, including the detergent dispenser tray, Scandinavian designed panel, advanced PMS motor, robust hinges, high quality gasket, large drum, and completely covered bottom for rodent protection.

Initial Use

Before the first wash, run a short cycle without laundry to clean the drum. Add a small amount of detergent to the dispenser. This helps remove any manufacturing residues.

OPERATING INSTRUCTIONS

Control Panel Overview

The washing machine features touch controls with a knob for program selection. The intuitive panel design allows for easy selection of wash programs and settings.



Image: Close-up view of the Electrolux washing machine's control panel, showing the program selection knob and touch buttons for various functions like temperature, spin, soak, prewash, and extra rinse.

Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The machine has an 8 kg capacity.

Adding Detergent













Add the appropriate amount of detergent and fabric softener to the designated compartments in the detergent dispenser tray.

Selecting Programs and Settings

Turn the program knob to select your desired wash cycle. Available programs include:

- **Quick 15 Cycle:** For fast and efficient washing of lightly soiled clothes in 15 minutes.
- **Vapour Wash / Hygienic Care:** Finishes the wash cycle with a soft spray of vapor at 40°C to remove up to 99.9% of germs and allergens. This feature is available in multiple cycles including Cotton, Mixed, Delicates, Bedding, Baby Care, and Energy Saver.
- **Energy Saver Mode:** For sustainable washing with reduced energy consumption.
- **Soak & Prewash:** Dedicated options for heavily soiled clothes.
- **Bedding Program:** Specifically designed for washing bedding items.
- **Baby Care:** Gentle wash for baby clothes.

FULLY LOADED MACHINE

 <p>Ecolnverter Motor</p>	 <p>2000W Wattage</p>	 <p>Large Drum 19.3 inch Diameter</p>	 <p>53L Drum Volume</p>
 <p>In-Built Heater</p>	 <p>15mins Quick Cycles</p>	 <p>5 Variable Temperatures</p>	 <p>Add Clothes up to 15mins</p>
 <p>Child Lock</p>	 <p>Delay End</p>	 <p>Baby Care</p>	 <p>1200RPM Spin Speed</p>

*T&C Apply

Image: Icons representing key features: Ecolnverter Motor, 2000W Wattage, Large Drum (19.3 inch Diameter), 53L Drum Volume, In-Built Heater, 15mins Quick Cycles, 5 Variable Temperatures, Add Clothes up to 15mins, Child Lock, Delay End, Baby Care, 1200RPM Spin Speed.

Adjusting Temperature and Spin Speed

Use the control panel to adjust the wash temperature (e.g., 40°C, 60°C, 90°C) and spin speed (up to 1200 RPM) according to your fabric type and soil level.



Image: Visual representation of different temperature settings (40°C Daily 60, 60°C Mixed, 40°C Delicates, 90°C Cotton, 30°C Daily 20) and their corresponding fabric types.

Special Features

- **Hygienic Care:** This feature uses vapor at 40°C to sanitize clothes, removing up to 99.9% of germs and allergens.
- **AutoSense Technology:** Prevents over-washing and reduces wear and tear on clothes by optimizing wash parameters based on load size.
- **Add Clothes Function:** Allows you to pause the cycle and add forgotten items within the first 15 minutes of the wash.
- **EcoInverter Motor:** Provides quiet operation, reduces vibration, and uses up to 50% less energy compared to standard models.



See electrolux.com for disclaimers.



HygienicCare Finish the wash cycle with vapour to remove up to 99.9% of allergens and germs*.

Image: Close-up of the washing machine drum with steam visible, illustrating the HygienicCare feature that uses vapor to sanitize clothes.

Only in
Electrolux

MAKE CLOTHES LAST

-Hygienic Care-

- Full Load Steam Wash*
- Steam Wash in Multiple Cycles - Cotton, Mixed, Delicates, Bedding, Baby Care, Energy Saver
- Steam Wash at 40° C - Protects Your Family & Clothes



-AutoSense-



Prevents
Over-Washing



Reduces the
Wear and Tear

Lower Load of Clothes Consumes
Less Time & Less Energy



*T&C Apply

Image: Visual explanation of Hygienic Care (Full Load Steam Wash, Steam Wash in Multiple Cycles, Steam Wash at 40°C) and AutoSense (Prevents Over-Washing, Reduces Wear and Tear).



50% lower
energy consumption*



Quiet



Less vibration

See electrolux.com for disclaimers.



EcolInverter motor is quiet, durable
and uses up to 50% less energy vs.
standard models*

Image: Icons illustrating the benefits of the EcolInverter motor: 50% lower energy consumption, quiet operation, and less vibration.

MAINTENANCE

Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and dry thoroughly before reinserting.

Cleaning the Drum and Gasket

After each wash, wipe the inside of the drum and the rubber door gasket to remove any moisture or lint. Periodically run a 'Tub Clean' cycle (if available on your model) or a hot wash with a washing machine cleaner to prevent odors and mold buildup.

Filter Cleaning

Locate and clean the drain pump filter regularly (refer to the specific location in your machine's diagram, usually at the

bottom front). This prevents blockages and ensures efficient drainage.

Exterior Care

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program and press start.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed (during installation), redistribute laundry.
Water not draining	Drain hose kinked/blocked, drain pump filter clogged.	Check drain hose for kinks, clean the drain pump filter.
Detergent residue in dispenser	Too much detergent, low water pressure, dispenser clogged.	Use recommended detergent amount, check water supply, clean dispenser.

SPECIFICATIONS

Feature	Detail
Brand	Electrolux
Model	EWF8024D3WB
Capacity	8 Kilograms
Annual Energy Consumption	0.07 Kilowatt Hours
Maximum Rotational Speed	1200 RPM
Noise Level	52 dB
Installation Type	Freestanding
Part Number	914922051
Special Features	Vapour Wash only at 40 C - Added hygiene with better care, Wash sustainably with "Energy Saver" Mode, Soak & Prewash for heavily soiled clothes, Dedicated program for Bedding.
Colour	White
Control Console	Touch controls with knob

Feature	Detail
Access Location	Front Load
Voltage	230 Volts
Wattage	2000 Watts
Material	Plastic, Metal
Included Components	Hose Inlet, User Manual, Drain hose hanger, Cap hole, Pre-installed Shutter (Rat Mesh), Washing Machine, Hose Drain
Item Weight	64 kg 500 g
Item Dimensions LxWxH	57.5 x 60 x 85 Centimeters

WARRANTY INFORMATION

Your Electrolux washing machine comes with a comprehensive warranty:

- **5 Years Standard Warranty** on the appliance.
- **10 Years Inverter Motor Warranty** specifically for the EcoInverter motor.

Please retain your purchase receipt for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Electrolux website.

CUSTOMER SUPPORT

For any assistance, service requests, or inquiries regarding your Electrolux washing machine, please contact customer support:

Customer Support Number (Toll Free): 1800 202 1800

Importer: Electrolux India Private Limited, 1st Floor, Plus Offices, Landmark Cyber Park, Sector 67, Gurugram-122018 Haryana, India.