

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux UltimateCare 300 Front Load Washing Machine User Manual

Electrolux EWF7524D3WB

Electrolux UltimateCare 300 Front Load Washing Machine User Manual

Model: EWF7524D3WB

Capacity: 7.5 Kilograms

[Overview](#) [Installation](#) [Operation](#) [Introduction](#) [Maintenance](#) [Safety Information](#) [Troubleshooting](#) [Product](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Electrolux UltimateCare 300 Front Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the washing machine and keep it for future reference.



Image: Front view of the Electrolux UltimateCare 300 washing machine, showcasing its sleek white design and large front-loading door.

2. SAFETY INFORMATION

WARNING: Please read all safety warnings and instructions carefully before installation and use to avoid risks of electric shock, fire, or injury.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Do not wash items that are soiled with flammable substances.
- Always unplug the appliance before cleaning or performing maintenance.
- Keep pets away from the appliance.

For detailed safety guidelines, refer to the comprehensive safety section in the full user manual provided with your appliance.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Steam Wash:** Provides a full load steam wash at temperatures as low as 40°C for effective cleaning and wrinkle reduction.
- **Hygienic Care:** Finishes the wash cycle with a soft spray of vapor to remove up to 99.9% of germs and allergens, ensuring complete sanitization.
- **EcoInverter Motor:** Reduces vibration and noise, offering quiet operation while consuming up to 50% less energy compared to standard models.
- **Quick 15 Cycle:** An efficient 15-minute wash cycle for fast cleaning of daily loads or lightly soiled items.
- **Add Clothes Function:** Conveniently add forgotten garments up to 15 minutes after the wash cycle has begun.
- **Traditional Handwash Quality Programs:** Intuitive programs including Soak, Pre-Wash, and Extra Rinse for enhanced cleaning.



The 8KG drum is ideal for your bulky or family-sized laundry



See electrolux.com for disclaimers.



HygienicCare Finish the wash cycle with vapour to remove up to 99.9% of allergens and germs*.

Image: Close-up view of the washing machine drum with steam visible, illustrating the Hygienic Care Vapour Wash feature.



50% lower
energy consumption*



Quiet



Less vibration

See electrolux.com for disclaimers.



EcoInverter motor is quiet, durable
and uses up to 50% less energy vs.
standard models*

Image: Diagram illustrating the benefits of the EcoInverter motor: 50% lower energy consumption, quiet operation, and less vibration.

3.2 Control Panel

The control panel features a combination of touch controls and a rotary knob for easy program selection and setting adjustments.



Image: Detailed view of the washing machine's control panel, showing the rotary dial, digital display, and touch buttons for various functions like temperature, spin, and special options.

3.3 Included Components

Your Electrolux washing machine package includes:

- Washing Machine Unit
- Hose Drain
- Hose Inlet
- User Manual (this document)
- Drain hose hanger
- Cap hole
- Pre-installed Shutter (Rat Mesh)

4. INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Remove all transport bolts from the rear of the machine before use. Keep packaging materials out of reach of children.

4.2 Location Requirements

Choose a stable, level surface. Ensure adequate space around the machine for ventilation and maintenance. Avoid direct

sunlight or extreme temperatures. The appliance should be placed on a hard floor to minimize vibration and noise.

4.3 Water Connection

Connect the inlet hose to a cold water tap with a $\frac{3}{4}$ -inch thread. Ensure all connections are tight to prevent leaks. Position the drain hose correctly into a standpipe or sink, ensuring it is not kinked or submerged in water.

4.4 Electrical Connection

Connect the power cord to a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance (230 Volts, 50 Hz). Do not use extension cords or adapters.

5. OPERATION

5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and hooks to prevent damage.

5.2 Adding Detergent and Additives

Open the detergent dispenser drawer and add the appropriate amount of detergent and fabric softener to their respective compartments. Refer to the detergent manufacturer's instructions for dosage.

5.3 Selecting a Wash Program

Turn the program selector knob to choose the desired wash program. The display will show the default settings for the selected program.



Choose **Quick 15 Cycle** for a few items, **Daily 39** for daily loads, and **Full Wash 60** for a full load.

Image: A stack of neatly folded clothes next to a clock, illustrating the convenience of the Quick 15 Cycle for small loads.

5.4 Adjusting Settings

Use the touch controls to adjust temperature, spin speed, or select additional functions like Pre-Wash, Extra Rinse, or Delay End, if available for the chosen program.



Adjust cycle temperatures to care for cottons, delicates, whites, and colours.

Image: Five fabric swatches with different temperatures (40°C, 60°C, 90°C, 30°C) and fabric types (Daily 60, Mixed, Delicates, Cotton, Daily 20), demonstrating the ability to adjust cycle temperatures for various garments.

5.5 Starting and Pausing a Cycle

Press the Start/Pause button to begin the wash cycle. To pause the cycle, press the same button. You can add forgotten clothes within the first 15 minutes of the cycle by pausing the machine and opening the door.



Conveniently **add forgotten clothes** up to 15 minutes after the cycle begins.

Image: A hand placing a piece of clothing into the washing machine drum, with an icon indicating the 'add clothes' function, highlighting the convenience of adding forgotten items during a cycle.



Extra **large door** opening makes loading and unloading easy.

Image: A large basket of clean, folded laundry next to the washing machine with its extra-large door open, emphasizing the ease of loading and unloading.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your washing machine.

6.1 Cleaning the Detergent Dispenser

Pull out the dispenser drawer and remove any removable parts. Rinse them under running water to remove detergent residue. Clean the dispenser housing with a brush and wipe dry.

6.2 Cleaning the Drum

Run a drum clean cycle (if available) or a hot wash cycle with no laundry and a small amount of detergent or a specialized washing machine cleaner to prevent odors and residue buildup.

6.3 Cleaning the Drain Filter

Locate the drain filter at the bottom front of the machine. Place a shallow container underneath to catch any water. Slowly open the filter cover and remove the filter. Clean any lint or debris and rinse under water. Reinsert the filter and close the cover securely.

6.4 Exterior Care

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry inside drum.
Water leakage	Hoses loose or damaged; Detergent overdose; Drain filter clogged.	Check hose connections; Use correct detergent amount; Clean drain filter.
Poor washing results	Overloading; Incorrect program/temperature; Insufficient detergent.	Do not overload; Select appropriate program; Use recommended detergent dosage.

If the problem persists after attempting these solutions, please contact Electrolux customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Electrolux
Model	EWF7524D3WB
Capacity	7.5 Kilograms
Energy Efficiency	5 Star
Maximum Rotational Speed	1200 RPM
Noise Level (Wash)	52 dB
Installation Type	Freestanding
Form Factor	Front Loading
Special Features	Inverter, Steam Wash, Hygienic Care, Quick 15 Cycle
Colour	White

Feature	Detail
Control Console	Touch controls with knob
Voltage	230 Volts
Wattage	2000 Watts
Door Orientation	Left
Material	Metal
Item Weight	65 kg
Dimensions (LxWxH)	58 x 60 x 85 Centimeters

9. WARRANTY AND SUPPORT

9.1 Product Warranty

This Electrolux washing machine comes with a**2-Year Warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt as proof of warranty.

9.2 Customer Support

For any service requests, technical assistance, or warranty claims, please contact Electrolux customer support:

- **Customer Support Number:** 1800 202 1800 (Toll Free)
- **Manufacturer Address:** Electrolux India Private Limited, 1st Floor, Plus Offices, Landmark Cyber Park, Sector 67, Gurugram-122018 Haryana, India.

Please have your model number (EWF7524D3WB) and serial number ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I clean the filter on the Electrolux UltimateCare 300 washing machine?

To clean the drain filter on your Electrolux UltimateCare 300 washing machine, follow these steps: Locate the Filter: The drain filter is located at the bottom front of the machine. Prepare for Water: Place a shallow...

[Read full answer](#)